

Nestec 8000 Flow Indicators

Installation, Operating & Maintenance Instructions

Installation Instructions

Install in horizontal pipe work with the instrument mounted vertically

Observe the flow direction which is marked on the instrument



Maintenance Instructions:

Once installed, no routine maintenance is required except for occasional checks that anticipated readings are maintained.

Operating Instructions:

To adjust the sensitivity of the instrument, undo the 2 locking nuts and rotate the proximity switch anticlockwise for less and clockwise for more. When finished, re-tighten the 2 locking nuts and install.

No regular maintenance is required for this flow switch, however, the instrument is designed so that it can be simply disassembled for cleaning purposes.

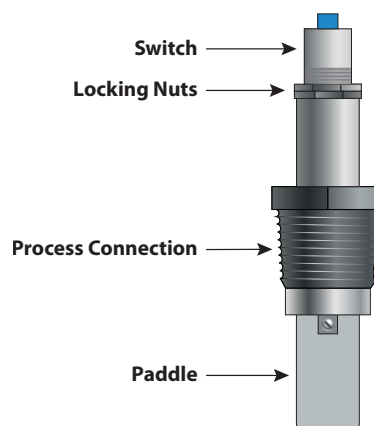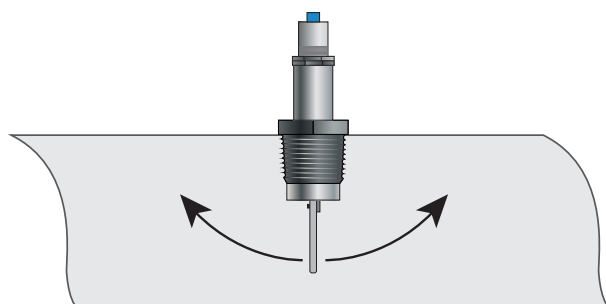

Registered Address

ABLE Instruments & Controls Ltd
Cutbush Park, Danehill, Lower Earley,
Reading, Berkshire, RG6 4UT. UK.

Phone

+44 (0)118 9311188

Email

info@able.co.uk

Web

able.co.uk

E-commerce

247able.com



Registered in England No. 01851002. VAT No. GB 417 2481 61