



Installation & Maintenance Instructions

## SIL IntelliPoint RF Series

Two-Wire, Point Level Safety Switch













## Leader in Level Measurement

Technical Assistance: 1-800-527-6297 Outside North America: +1-215-674-1234

# Installation and Operating Instructions

SIL IntelliPoint RF Series
Two-Wire, Point Level Safety Switch

U.S. and Canada: 1-800-553-9092
24-Hour Service: 1-800-527-6297
International: +1 215-674-1234
Fax: +1 215-674-2731
E-mail: drexelbrook.service@ametek.com
Website: www.drexelbrook.com



# SIL IntelliPoint RF Series Two-Wire, Point Level, Safety, Switch




### Register your

## IntelliPoint RF

and extend your warranty to 36 months


# 36 Month Warranty Registration at...

www.drexelbrook.com

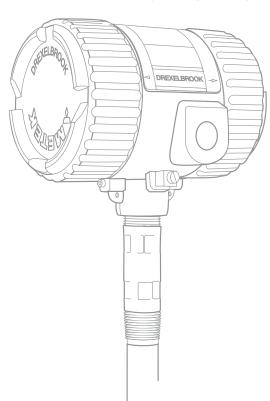

#### **Extend your warranty!**

 ...from 12 months to 36 months by registering your purchase. Please go to www.drexelbrook.com. Click on "Contact Us" then"Warranty Registration" and fill out the form.



#### **Contents**

1.1 1.2 1.3 1.4	Introduction System Description Technology Model Number Dual Compartment Housing Detail	1 1 2
Section 2: 2.1 2.2 2.2.1 2.3 2.4 2.5 2.6 2.7	Installation Unpacking Mounting and Installation Guidelines Installation of Flush-Mounted Sensing Elements Input Wiring Spark Protection Circuit Board Output & Status LEDs Sensing Element Connection	5 8 9 9
Section 3:	Spare Parts List	16
4.1 4.2 4.3 4.4 4.5 4.6 4.7 4.8 4.9 4.10 4.11	Troubleshooting Testing Sensing Element Testing Electronic Unit Over Range Under Range Testing Integral Cable Testing Remote Cable Testing Power Supply Factory Assistance Field Service Customer Training Equipment Return	18191919202121
<b>Section 5:</b> 5.1	SpecificationsApprovals	
6.1 6.2 6.3 6.4 6.5 6.6	Control Drawings  FM Control Drawings  NEMKO / ATEX Control Drawings  CSA Control Drawings  Mounting and Wiring for Spark Protector Drawings  Adding a Padded Capacitor  Dual Seal Assembly for 700 Series Sensing Elements	42 58 61
Appendix A	:SIL Declaration of Conformity	A1
Appendix B	:CE Mark Declaration of Conformity	B1



#### **Management summary**

This report summarizes the results of the Failure Modes, Effects, and Diagnostic Analysis (FMEDA) of the Safety IntelliPoint RF™ Series Point Level Switch. A Failure Modes, Effects, and Diagnostic Analysis is one of the steps to be taken to achieve functional safety certification per IEC 61508 of a device. From the FMEDA, failure rates and Safe Failure Fraction are determined. The FMEDA that is described in this report concerns only the hardware of the Safety IntelliPoint RF™ Series Point Level Switch, electronic and mechanical, including the probe assembly. For full functional safety certification purposes all requirements of IEC 61508 must be considered.

The Safety IntelliPoint RF $^{\text{TM}}$  Series Point Level Switch is a two-wire, 4 – 20 mA smart device with discrete output levels. It contains self-diagnostics and is programmed to send it's output a specified state upon internal detection of a failure. For safety instrumented systems usage it is assumed that the 4 – 20 mA output is used as the primary safety variable. All other possible output variants are not covered by this report. The different devices can be equipped with or without display.

The Safety IntelliPoint RF™ Series Point Level Switch is classified as a Type B¹ device according to IEC61508, having a hardware fault tolerance of 0. The analysis shows that the device has a safe failure fraction between 90 and 99% (assuming that the logic solver is programmed to detect any currents outside the discrete output levels boundaries, see section 4.4) and therefore may be used up to SIL 2 as a single device.

The FMEDA analysis was performed for the High Level Fail Safe setting of the switch (HLFS). Table 1 lists the failure rates for the Safety IntelliPoint RF™ Series Point Level Switch according to IEC 61508, assuming that the logic solver is set to detect any currents outside a 1mA range around the three output levels.

Table 1: Failure rates according to IEC 61508

Safety IntelliPoint RF™ Series Point Level Switch	$\lambda^{sd}$	λ <sup>su2</sup>	$\lambda^{dd}$	λ <sup>du</sup>	SFF
High Level Fail Safe application	0 FIT	300 FIT	686 FIT	73 FIT	93.2%

These failure rates are valid for the useful lifetime of the product, see Appendix A.

A user of the Safety IntelliPoint RF™ Series Point Level Switch can utilize these failure rates in a probabilistic model of a safety instrumented function (SIF) to determine suitability in part for safety instrumented system (SIS) usage in a particular safety integrity level (SIL). A full set of failure rates is presented in section 4.5 along with all assumptions.

ame 04-05-15 r001 v1 r11 safety intellipoint\_, 7/27/2004 Page 2 of 16


© exida.com L.L.C. William M. Goble – John C. Grebe

<sup>&</sup>lt;sup>1</sup> Type B component: "Complex" component (using micro controllers or programmable logic); for details see 7.4.3.1.3 of IEC 61508-2.

<sup>&</sup>lt;sup>2</sup> It is important to realize that the No Effect failures and Annunciation Undetected failures are included in the "safe" failure category according to IEC 61508. Note that these failures will not affect system reliability or safety and should not be included in spurious trip calculations

#### **Section 1: Introduction**

#### 1.1 System Description

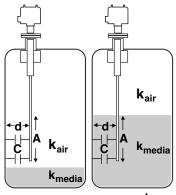

$$C = \frac{k A}{d}$$
  $C^{\uparrow} = \frac{k A}{d}$ 

Figure 1-1

Simple Capacitance Probe (Insulating Media Shown)

The AMETEK Drexelbrook **IntelliPoint**<sup>™</sup> Series uses **No-Cal<sup>™</sup>** technology to detect the presence or absence of material without calibration or initiation via setpoint adjustments, push-buttons, or magnets.

Installation is simple and easy. Simply apply power and the IntelliPoint system is ready to detect the presence or absence of material. Since the IntelliPoint instrument does not require calibration or setpoint adjustments, it is capable of operating in non-dedicated tanks regardless of the material being measured.

#### Notice: Material to be Measured Must Be Below Sensor when Power is Applied.

The **AutoVerify**<sup>TM</sup> self-testing function continuously monitors the entire system to ensure proper operation. **Manual Certify**<sup>TM</sup> changes the outputs in order to test the loop current and ensure proper operation of the control systems.

#### 1.2 Technology

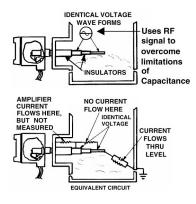


Figure 1-2
RF Admittance Probe with Cote-Shield

In a simple capacitance probe-type sensing element, when the level rises and material covers the probe, the capacitance within the circuit between the probe and the media (conductive applications) or the probe and the vessel wall (insulating applications) increases. This is due to the dielectric constant (k) of the material, which causes a bridge mis-balance. The signal is demodulated (rectified), amplified, and the output is increased. There are drawbacks, however, especially when there is coating of the probe.

An RF Admittance level transmitter is the next generation. Although similar to the capacitance concept, IntelliPoint employs a radio frequency signal and adds the Cote-Shield<sup>TM</sup> circuitry within the Electronics Unit.


This patented Cote-Shield<sup>TM</sup> circuitry is designed into the IntelliPoint series and enables the instrument to ignore the effect of buildup or material coating on the sensing element. The sensing element is mounted in the vessel and provides a change in RF admittance indicating presence or absence of material.

The Cote-Shield element of the sensor prevents the transmission of RF current through the coating on the sensing element. The only path to ground available for the RF current is through the material being measured.

The result is an accurate measurement regardless of the amount of coating on the probe, making it by far the most versatile technology, good for very wide range conditions from cryogenics to high temperature, from vacuum to 10,000psi pressure, and works with all types of materials.


#### 1.3 Model Number



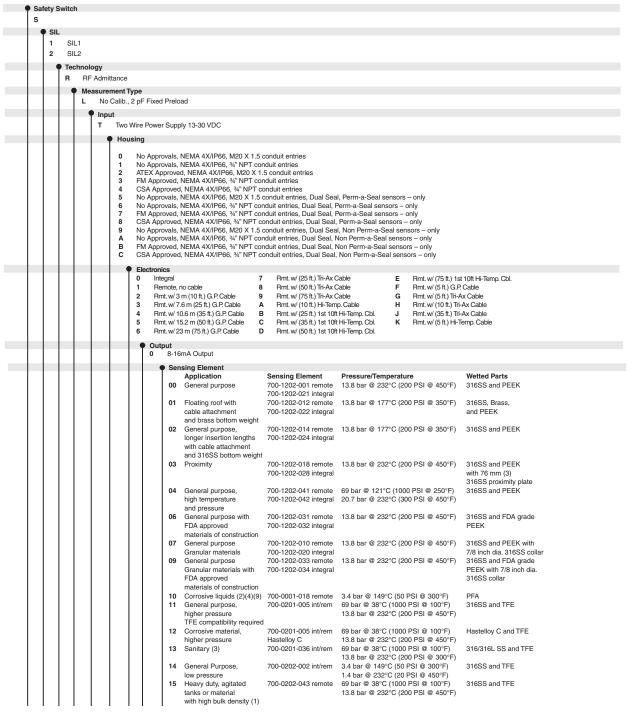

Continued on Next Page

#### **Model Number (Continued)** 1.3

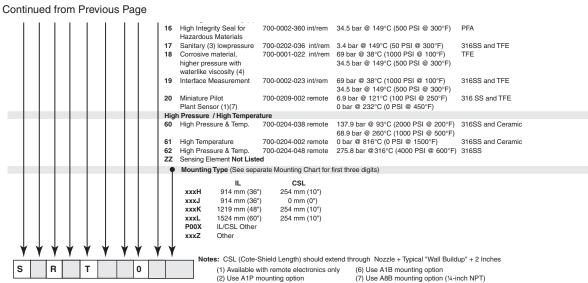

IMPORTANT: Minimum Active Length for SIL Compliance is 24" (610mm Consult Factory for Shorter Lengths


- (2) Use A1P mounting option
- (8) Choose from flange mounting only (9) FM approved with remote electronics only
- (3) Choose only sanitary mounting options
  (4) Available with 0-inch CSL only
- (5) Use P00X mounting option

Not all mounting options are available with all sensing elements

A1B	34"NPT	316	SS		A2B	1"NPT	3168	S
A1C	34"NPT	Has	telloy C		A2C	1"NPT	Haste	lloy C
A1P	34"NPT	PFA	١					
DIN F	langes							
E01	25 mm	16 bar	RF 316/316L	SS	E02	25 mm	16 bar	RF CS
EP1	25 mm	40 bar	RF 316/316L	. SS	EP2	25 mm	40 bar	RF CS
EQ1	50 mm	16 bar	RF 316/316L	.SS	EQ2	50 mm	16 bar	RF CS
ER1	50 mm	40 bar	RF 316/316L	.SS	ER2	50 mm	40 bar	RF CS
ES1	80 mm	16 bar	RF 316/316L	.SS	ES2	80 mm	16 bar	RF CS
ET1	80 mm	40 bar	RF 316/316L	.SS	ET2	80 mm	40 bar	RF CS
EU1	100 mm	16 bar	RF 316/316L	.SS	EU2	100 mm	16 bar	RF CS
EV1	100 mm	40 bar	RF 316/316L	.SS	EV2	100 mm	40 bar	RF CS
EW1	150 mm	16 bar	RF 316/316L	.SS	EW2	150 mm	16 bar	RF CS
EX1	150 mm	40 bar	RF 316/316L	.SS	EX2	150 mm	40 bar	RF CS

Sanitary IriCiamps										
C2B	1"T	riClamp		316S	S	C4B	2"Tri	Clamp		316SS
C3B	1½"T	riClamp		316S	S					
41101	F1									
ANSI	Flang	jes								
DA1	1"	150#	RF	316/31	I6L	SS	DA2	1"	150#	RF CS
DB1	1½"	150#	RF	316/31	6L	SS	DB2	11/2"	150#	RF CS
DC1	2"	150#	RF	316/31	6L	SS	DC2	2"	150#	RF CS
DD1	21/2"	150#	RF	316/31	6L	SS	DD2	21/2"	150#	RF CS
DE1	1"	300#	RF	316/31	6L	SS	DE2	1"	300#	RF CS
DF1	11/2"	300#	RF	316/31	6L	SS	DF2	11/2"	300#	RF CS
DG1	2"	300#	RF	316/31	6L	SS	DG2	2"	300#	RF CS
DH1	21/2"	300#	RF	316/31	6L	SS	DH2	21/2"	300#	RF CS
DI1	3"	150#	RF	316/31	6L	SS	DI2	3"	150#	RF CS
DJ1	3"	300#	RF	316/31	6L	SS	DJ2	3"	300#	RF CS
DK1	4"	150#	RF	316/31	6L	SS	DK2	4"	150#	RF CS
DL1	4"	300#	RF	316/31	6L	SS	DL2	4"	300#	RF CS
DM1	6"	150#	RF	316/31	6L	SS	DM2	6"	150#	RF CS
DN1	6"	300#	RF	316/31	16L	SS	DN2	6"	300#	RF CS

#### 1.4 Dual Compartment Housing Detail

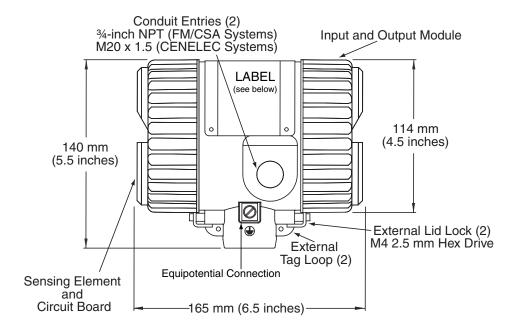

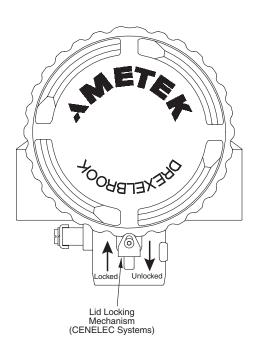


Figure 1-3
Dual Compartment Housing Detail



The Input/Output Module (IOM) is located on Customer Connection side; sensing element/circuit board are on opposite side.

#### Section 2: Installation

#### 2.1 Unpacking

Carefully remove the contents of the shipping carton and check each item against the packing list before destroying any packing material. If there is any shortage or damage, report it to the factory immediately.

#### 2.2 Mounting and Installation Guidelines



#### **CAUTION:**

The IntelliPoint RF instrument must be powered AFTER it is installed in the application and with material BELOW the sensing element.

The IntelliPoint RF instrument can be mounted vertically or horizontally at any angle. The mounting location should be as free as possible from vibration, corrosive atmospheres, and any possibility of mechanical damage. Ambient temperatures at electronics should be between -30°C to 70°C (-22°F to 158°F).

The IntelliPoint RF instrument uses a dual compartment housing and a completely encapsulated input/output module to reduce the possibility that damage may occur from water migrating into the housing through the conduit. To further reduce the possibility of damage caused by water in the conduit, install a drip loop and breather drain to purge any accumulating moisture. *See to Figure 2-1*.

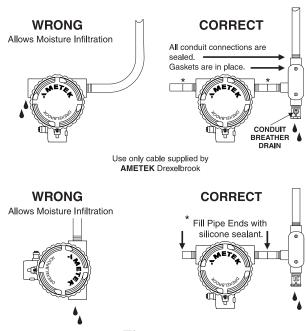


Figure 2-1
Recommended Conduit Connection

#### 2.2 Mounting and Installation Guidelines (Continued)

After system is installed and level is **below** sensing element, apply power. The RF Series instrument does not require any calibration or setpoint adjustments and is ready to detect change in level. If properly installed, the green LED lights when power is applied. The Red LED should not be flashing. If the Red LED is flashing, refer to *Section 4: Troubleshooting*.



Cable fittings supplied are weather-resistant. They are NOT certified as explosion-proof (XP) or flameproof (d) unless they are specifically marked.

The IntelliPoint RF instrument is rated Intrinsically Safe (I.S.) when power is provided from an I.S. supply.

#### **WARNING:**





IntelliPoint RF equipment is rated explosion-proof. When installing in explosion hazardous areas [rated "potentially hazardous" (EU) or "hazardous classified" (USA)] observe all national and local regulations as well as specifications in the certificate.

Mount sensing element using the following installation guidelines. *See Figure 2-2*.

When installing IntelliPoint RF instrument, ambient temperature at electronics must not exceed 70°C (158°F).

When installing flange-mounted sensing elements, keep mating surfaces and bolts free of paint and corrosion to ensure proper electrical contact with vessel. Avoid using excessive amounts of Teflon<sup>TM</sup> tape when installing threaded sensing elements.

Install systems with threaded NPT connection via wrench flats on the process connection ONLY.

Locate sensing element to avoid enhancing electrostatic discharge from process medium, as is good practice with any thermowell, displacer, or sampler. This includes correct bonding to the tank or silo wall.

If installation area is rated explosion-proof and requires conduit seal fittings, they should be used in accordance with company standards and local codes.

#### 2.2 Mounting and Installation Guidelines (Continued)

Mounting sensing element inside a pipe is not recommended.

Do not mount a Cote-Shield sensing element through a nozzle that exceeds length of first insulator.

Ensure that there are no obstructions or agitator blades to interfere with sensing element.

Rigid sensing elements can be mounted either vertically or horizontally.



Do Not Shorten the sensing element without checking with the factory. 1-800-527-6297 or 215-674-1234



After the system has been installed, a function test (See Section 4.2) should be performed.

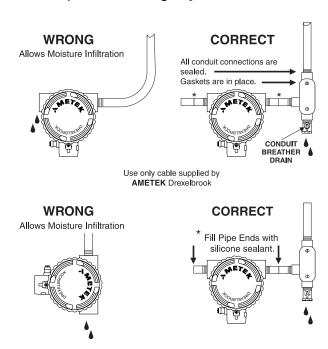



Figure 2-2
Installation Considerations



A full system function check (See Section 4.2) should be performed when:

- Any system component is changed or replaced by the user.
- Any system component is modified by the user.

#### 2.2.1 Installation of Flush-Mounted Sensing Elements

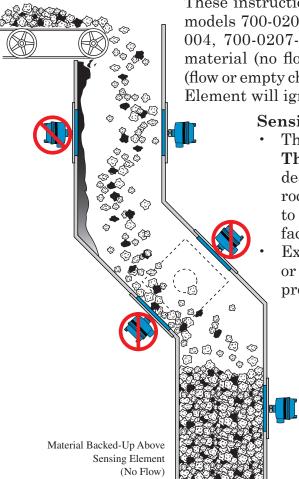

These instructions apply to all flush on/off sensing elements, models 700-0207-001, 700-0207-002, 700-0207-003, 700-0207-004, 700-0207-006. These systems will sense presence of material (no flow or plugged chute) and absence of material (flow or empty chute) at the sensing element. The Flush Sensing Element will ignore free falling material.

#### Sensing Element at the Top of a Chute.

- The flush sensing element should be mounted **In The Flow Stream**. These sensing elements are designed and built to withstand the impact of coal, rock, wood, chips, etc. This location is important to prevent excessive build up of material on the face of the sensing element.
  - Excessive build up, typically consisting of wet and/ or sticky fines, can occur if the sensing element is protected from falling material.

#### Sensing Element in an angle chute.

- Do not mount on the top or bottom.
- · Best mounted on either side

#### Sensing Element at the Bottom

- Mount on any side.
- Low-Level sensors can be used to detect a plug or to insure that a seal is present (chute is full at this point).

#### 2.3 Input Wiring





#### **WARNING:**

If IntelliPoint instrument is located in a hazardous environment, do not open the enclosure cover or make/break any electrical connections without first disconnecting electrical power at the source. Ensure that the wiring, electrical fittings and conduit connections conform to electrical codes for the specific location and hazard level.

The IntelliPoint RF instrument requires a 13-30 Vdc supply to operate. To access, remove the housing lid on the customer connections side to reveal the Input/Output Module (IOM). The IOM is an encapsulated assembly that contains the power supply, outputs and eight wiring terminals. IOM is held in place with three screws. *See Figure 2-3*.

#### 2.3 Input Wiring (Continued)

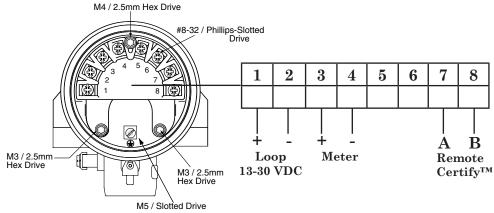


Figure 2-3
Input Wiring

#### 2.4 Spark Protection

Applications involving insulating granulars and insulating liquids may produce a static discharge that can damage the electronics. The RF series instrument is supplied with integral heavy-duty spark protection to prevent static discharges from damaging the electronic circuits.

#### 2.5 Circuit Board

The circuit board is located on the sensing element/circuit side of the housing (marked on label). Remove the housing lid to access the status LEDs, time delay adjustment, and configuration jumpers. *See Figure 2-4*.

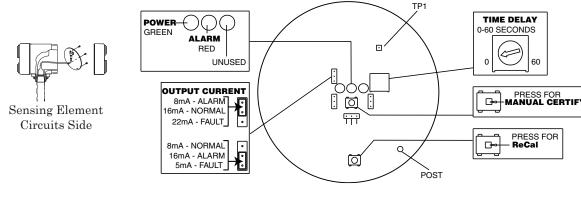


Figure 2-4 Circuit Board

NOTICE

Do **NOT** push the ReCal button without first ensuring the material being measured is below the sensing element

#### 2.5.1 Time Delay

The "Time Delay" adjustment is located on the sensing element/circuit board side of the housing (marked on label). It is used to help stop an oscillating current output due to agitation or waves in the vessel. The time delay adjustment can be field adjusted from 0 to 60 seconds. The unit is shipped with the Time Delay set to zero (0) seconds.

Safety Switches are set to Forward Acting Time Delay only. ie: When material first touches the sensing element, the switch enters into the alarm condition and stays in the alarm condition for the duration of the delay setting.



The Time Delay adjustment is a 270-Degree turn pot and is at zero seconds when in the full counter-clockwise position. Do not force the pot past the stop or damage will occur.

#### 2.5.2 Failsafe

"Failsafe" describes the level condition that causes the transmitter to go into alarm.

Safety Switches are only applicable to High Level Fail Safe (**HLFS**) applications. Fail Safe is factory pre-set, through software, to **HLFS**.

#### 2.5.3 Current Output Assignment

The Output Current can be configured using the jumpers as follows:

- Jumper on pin #1 and #2 creates:
   8mA Alarm, 16mA Normal, 22mA Fault
- Jumper on pin #2 and #3 creates:
   8mA Normal, 16mA Alarm, 5mA Fault

#### 2.5.4 Manual / Remote Certify™

The "Certify" test feature performs a confidence test of the system by duplicating the same signal as a high-level alarm condition without requiring the system to be removed from the tank. Simulating a high level with the Manual/Remote Certify feature:

• Checks the AutoVerify<sup>TM</sup> and system circuits to ensure proper operation.

#### 2.5.5 Manual / Remote Certify™ (Continued)

- Checks the integrity and continuity of the wiring connections.
- Verifies that the sensing element is working properly.

The "Manual Certify" test is initiated with the press of the Manual Certify Button located on the sensing element / circuit side of the housing.

The "Remote Certify" test is initiated by creating a momentary short between contacts 7 and 8 located on the power supply side of the housing. This can be done with a push button or relay closure.

After initializing the Certify test, the green LED flashes for 5 seconds and the red LED will illuminate. The current moves to the alarm condition for 2 seconds. If the red LED does not turn on, and the current does not move to the alarm condition, the Certify has detected a fault.

Consult Section 4: Troubleshooting.

#### 2.5.5 AutoVerify™

"AutoVerify" is a self-testing function that continuously checks the system for proper operation when the unit is in the High Level Failsafe (**HLFS**) mode and in normal condition.

- The Safety IntelliPoint switch is shipped with AutoVerify Enabled, through software.
   AutoVerify Can Not be Disabled on the Safety IntelliPoint.
- If a fault is detected during the AutoVerify cycle, both LEDs will flash alternately, and the current will go to the fault output of 5mA or 22mA. *See Section 2.5.4*

#### **AutoVerify Criteria**

- 1. In order for the Safety IntelliPoint to correctly detect a disconnected sensor, the sensor must generate an uncovered capacitance value greater than 5 pF. Typically, the active sensor length (active length = insertion length cote shield length) must be greater than 24 inches (610 mm).
- 2. Consult Factory for specialty sensors that may be available for shorter length requirements.

#### 2.5.6 Periodic Testing Requirement

The intent of periodic testing is to ensure the SIS continues to function according to design requirements. Periodic testing intervals should be calculated during the SIF design verification. this time interval must be made part of the maintenance procedure for this process.

#### 2.5.7 Re-Calibration



Do not push the "ReCal" Button without first ensuring the material being measured is below the sensing element.

If system is powered on the bench prior to installation, or moved from one tank to another, Re-Calibration is necessary to allow software to capture the air capacitance generated by sensing element in the tank.

Merely press and hold the "ReCal" Button for 5 seconds (*Shown in Figure 2-4*). Green LED flashes for 60 seconds before reset occurs.

[Remove power from the system while the green LED is flashing and reset will occur immediately].

The system is now ready for installation.

#### **Nonvolatile Memory**

The IntelliPoint has nonvolatile memory which allows the unit to re-start after power outages without recalibrating.

When The IntelliPoint is powered for the first time the internal microprocessor records and stores the "Air" value.

This is the uncovered value of the sensor mounted in the vessel. The IntelliPoint will also store the last covered value and the last uncovered value.

Whenever The IntelliPoint is powered it uses these values as a reference point to determine its current condition (normal or alarm).

The IntelliPoint has nonvolatile memory which retains the recorded values even if power is lost for months. When The IntelliPoint regains power after a power outage, the microprocessor compares the stored values to the current measured value. It will then determine its current status based on this.

#### Example:

Air value is 10pF covered value is 20pF Uncovered value is 11pF Setpoint = Alarm or recovery value.

#### 2.5.7 Recalibration (Continued)

For alarm this would typically be 2pF above the last uncovered value (13pF in this case). For recovery this would be halfway between the uncovered and covered value (15.5pF in this case). The setpoint is stored in memory to indicate the last status of the switch.


So, when the unit regains power the microprocessor reads the current value of the sensor and determines the status based on the stored values. It will only re-calibrate if the re-call button is pressed.

#### 2.6 Output & Status LEDs

There are two status LEDs located on the sensing element/circuit board side of the housing. One is used to indicate that the unit has power. The second LED is used to indicate the status of the unit: **Normal** or **Alarm**. **See Figure 2-5**.



Second Red LED is not used on the two wire transmitter.

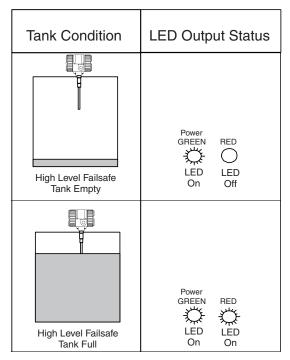

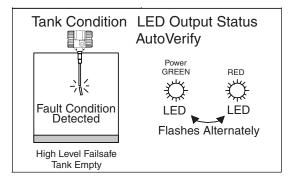


Figure 2-5
Output and LED Status

#### 2.7 Sensing Element Connection

Sensing element connects to the rear side of the circuit board and is factory-installed.



The sensing element is sealed to the housing and cannot be removed without permanent damage.

For IntelliPoint RF instruments that are mounted remotely from the sensing element, the cable connections from the sensing element to the electronic unit are made to the terminals on the sensing element side of the housing. See Figure 2-7. Connect Green (Ground) wire to green screw, Red (Shield) wire to red screw, and Blue (Center) wire to blue screw.

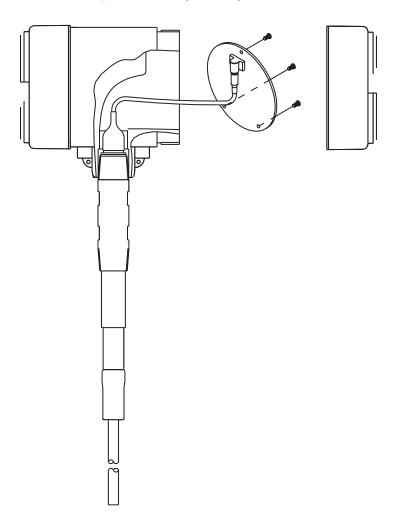


Figure 2-6
Sensing Element Connection (Integral Mounting)

#### 2.7 Sensing Element Connection (Continued)

For IntelliPoint RF instruments that are mounted remotely from the sensing element, the cable connections from the sensing element to the electronic unit are made to the terminals on the sensing element side of the housing (marked on label). **See Figure 2-7**. Connect Green (Ground) wire to Green screw, Red (Shield) wire to red screw, and Blue (Center) wire to blue screw.



See Section 6.4 for Spark Protection, Mounting and Wiring

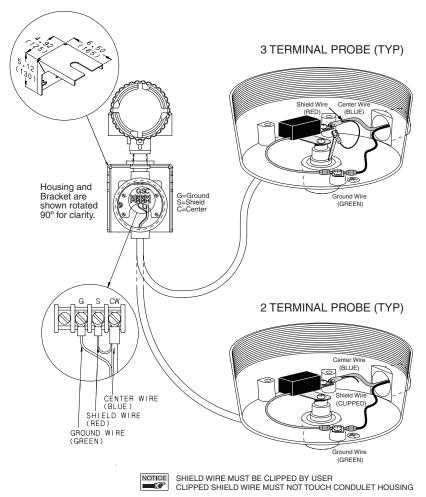


Figure 2-7
Sensing Element Connection (Remote Mounting)



After the system has been installed, a function test (See Section 4.2) should be performed.



A full system function check (See Section 4.2) should be performed when:

- Any system component is changed or replaced by the user.
- Any system component is modified by the user.

#### **Section 3: Spare Parts List**

O-ring	250-1-75
Housing ¾-inch NPT Conduit Entry	260-2-540
Housing M20 Conduit Entry	260-2-542
Input/Output Module	Consult Factory
Circuit Board	385-48-3-S

#### Section 4: **Troubleshooting**






#### WARNING:



If IntelliPoint instrument is located in a hazardous environment. do not open enclosure cover or make/break any electrical connections without first disconnecting electrical power at the source. Ensure that wiring, electrical fittings and conduit connections conform to electrical codes for the specific location and hazard level.

#### 4.1 **Testing Sensing Element**


To test the sensing element, disconnect the integral cable. See Figure 4.1.

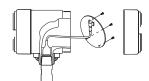

#### Sensing Element Circuits Side

Expect the following measurements:

Three Terminal Probes without Shield Tab

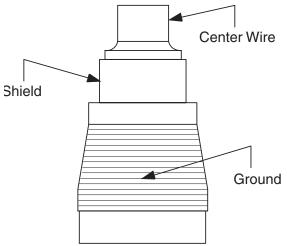

Measured Resistance (Sensor dry and clean):

Center Wire - Shield

∞ Ohms

Center Wire - Ground

∞ Ohms

Shield - Ground

Ohms

When tank level is known to be below the sensor, minimum acceptable values are:

CW-G 1000 ohms. CW-S 600 ohms. S-G 300 ohms.



If the readings are less than the minimum acceptable values:

- 1. Check to see if tank is full, or if a severe coating is present.
- 2. Clean sensor and re-measure the sensor resistances.

Note: Low resistance readings are acceptable if the sensor is covered with a conductive liquid. Also, low resistance readings can be the result of material lodging in a long mounting nozzle. Refer to Figure 2-2.

Note: A reading of zero ohms usually indicates a metal-to-metal short circuit. Check for contact with tank wall, mounting nozzle, or other tank structure.

Resistance readings must be taken using an analog ohmeter set to Rx1000 scale.

Figure 4.1 Testing Sensing Element

NOTICE

NOTICE

#### 4.2 Testing Electronic Unit



This test is only a test of the electronic unit for troubleshooting purposes, and does not serve as a Verify or Certify test of the complete system.

Use the following steps to test the electronic unit:

1. Be sure the environment is safe before removing the lid from the housing.



- 2. If possible to access the sensing element with the material below the sensor, or remove the IntelliPoint from the vessel, use your finger to touch TP1 (Shown in Figure 2-4) while holding any bare metal portion of the instrument housing with the other hand. The system should go to its alarm state.
- 3. Again with no material touching the sensing element, touch the tip of the sensing element with your finger, while holding any bare metal portion of the instrument housing with the other hand. The system should go to its alarm state.
- 4. If the IntelliPoint changes to the alarm state while touching test point TP 1, but not when touching the tip of the sensor, in most cases, the interconnecting cable is faulty. See Section 4.5: Testing Integral Cable, or Section 4.6 Testing Remote Cable.
- 5. If IntelliPoint is stuck in one state:



A. Remove power.

- B. Disconnect coax cable that joins sensing element to electronic unit.
- C. Apply power.



D. Repeat steps 3 and 4.

- E. If IntelliPoint changes state with sensing element disconnected, in most cases, sensing element is faulty. See Section 4.1: Testing Sensing Element.
- 6. If there was no action in any of steps 2, 3, or 4 and unit appears dead:
  - A. Remove and then reapply power.
  - B. Press ReCal Button (Shown in Figure 2-4).
  - C. Observe that green LED flashes for about 60 seconds.
  - D. Green LED should be lit after 60 seconds.
  - E. Touch test point (**Shown in Figure 2-4**) with your finger.
  - F. Alarm & Relay should change state. If so, circuit board is working properly.
  - G. Reinstall instrument and press **ReCal** Button.
- 7. If IntelliPoint fails all of above tests, in most cases instrument is faulty. Use a replacement Input/Output Module (**IOM**) or circuit board to determine fault. **Consult factory**.

#### 4.3 Over Range

If Red LED is flashing quickly (4 times/second), IntelliPoint has detected that uncovered sensing element capacitance exceeds limits of transmitter. Consult factory for pad capacitor values and instructions.

#### 4.4 Under Range

If Red LED is flashing slowly (once per second), IntelliPoint has detected that:

- 1. Pad capacitor value is too large. Consult factory for pad capacitor values.
- 2. Sensor is disconnected.
- 3. Sensor interconnecting cable is damaged.

#### 4.5 Testing Integral Cable


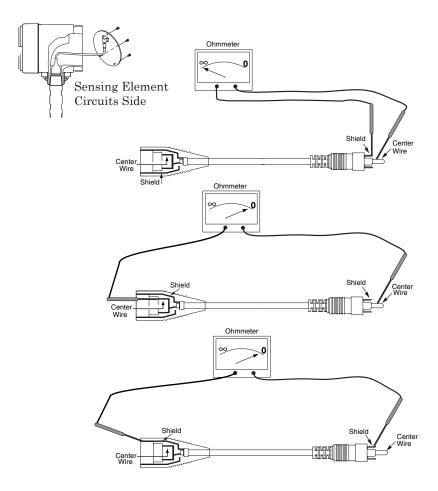


Figure 4-2
Testing Integral Cable

#### 4.6 Testing Remote Cable

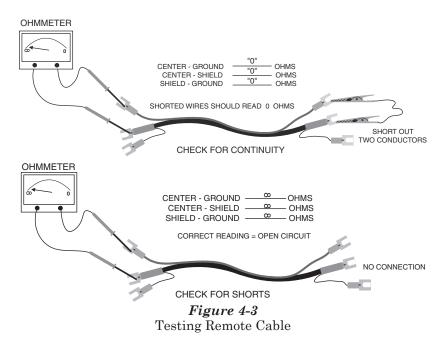

#### 4.7 Testing Power Supply

Power supply can be tested separately as follows:

- 1. Remove power from electronic unit.
- 2. Remove three screws holding circuit board into housing.
- 3. Disconnect sensing element connection. See to Section 2.7 Sensing Element Connection.
- 4. Reapply power.
- 5. Using a DC voltmeter, measure voltage from -5 to Common and +5 to Common. Correct readings are -5 to -6 and +5 to +6 Vdc. *See Figure 4-4*.

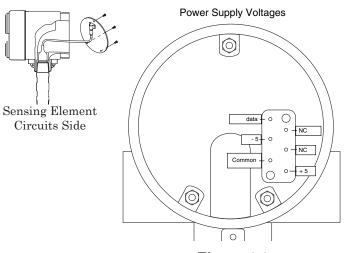


Figure 4-4
Testing Power Supply

#### 4.8 **Factory Assistance**

AMETEK Drexelbrook can answer any questions about this, or any Drexelbrook instrument. Call Customer Service at: 1-800-553-9092 (US and Canada) or +1 215 674-1234 (International).

If you require assistance and attempts to locate the problem have failed:

Contact your local Drexelbrook representative,



**Telephone** the Service department toll-free:

- 1-800-527-6297 (US and Canada)
- +1 215 674-1234 (International)

FAX: Service Department + 215-443-5117 **E-Mail:** drexelbrook.service@ametek.com

Please provide the following information:

- Instrument Model Number
- Sensing Element Model Number and Length
- Original Purchase Order Number
- Material being measured
- Temperature
- Pressure
- Agitation
- Brief description of the problem
- Checkout procedures that have failed

#### 4.9 **Field Service**

Trained field servicemen are available on a time-plusexpense basis to assist in start-ups, diagnosing difficult application problems, or in-plant training of personnel. Contact the service department for further details.

#### 4.10 **Customer Training**

Periodically, AMETEK Drexelbrook instrument training seminars for customers are held at the factory. These sessions are guided by Drexelbrook engineers and specialists, and provide detailed information on all aspects of level measurement, including theory and practice of instrument operation. For more information write to: AMETEK Drexelbrook, Communications/ Training Group

or call 215-674-1234.

#### 4.11 Equipment Return

In order to provide the best service, any equipment being returned for repair or credit must be pre-approved by the factory.

In many applications, sensing elements are exposed to hazardous materials.

- OSHA mandates that our employees be informed and protected from hazardous chemicals.
- Material Safety Data Sheets (MSDS) listing the hazardous materials to which the sensing element has been exposed MUST accompany any repair.
- It is your responsibility to fully disclose all chemicals and **decontaminate** the sensing element.



**To obtain a return authorization** (RA#), contact the Service department at 1-800-527-6297 (US and Canada) or + 215-674-1234 (International).

- Please provide the following information:
- Model Number of Return Equipment
- · Serial Number
- · Original Purchase Order Number
- Process Materials to which the equipment has been exposed.
- · MSDS sheets for any hazardous materials
- Billing Address
- Shipping Address
- Purchase Order Number for Repairs
- Please include a purchase order even if the repair is under warranty. If repair is covered under warranty, you will not be charged.

Ship equipment freight prepaid to:

AMETEK-DREXELBROOK. 205 KEITH VALLEY ROAD HORSHAM, PA 19044-1499 COD shipments will not be accepted

#### **Section 5: Specifications**

**Technology:** RF/Capacitance

**Safety:** SIL 2, FMEDA, IEC61508-2, 7.4.3.1 1999

(Exida)

Calibration: None

Modes of Operation: High level

**Repeatability:** 2mm (0.08 inch) conductive liquids

**Response Time:** Less than 1 second

**Time Delay:** 0 to 60 seconds forward acting

Ambient Electronics: -30 to 70°C (-28 to 158°F) KEMA

-40 to 70°C (-40 to 158°F) FM / CSA

Storage Temperature: -40 to 85°C (-40 to 185°F)

**Indicators:** LEDs: Green Power, Red Alarm Status

**Self-Check:** Continuous AutoVerify and Manual Certify

Power Supply: 13 to 30 VDC

Note: The minimum supply voltage at the transmitter terminal is: 13 VDC at 22mA (Fault) 19 VDC at 5mA (Fault)

**Power Consumption:** 1 watt maximum

Output: 8 mA - Alarm

16 mA - Normal 22 mA - Fault (or field-selectable) 8 mA - Normal 16 mA - Alarm 5 mA - Fault

**Housing (Electronics):** Dual Compartment, powder-coated

aluminum with two cable entries

Cable Entry: M20 x 1.5 CENELEC

34-inch NPT FM/CSA

Ingress Protection: IP66 NEMA 4, 4X

#### 5.1 Approvals



Explosion-proof for use in Class I, Division 1, Groups A, B, C, and D, Dust-Ignition proof for use in Class II and III, Division 1, Groups E, F, and G; Non-incendiary for use in Class I, Division 2, Groups A, B, C, and D; Suitable for use in Class II and III, Division 2, Groups F and G Hazardous (Classified) Indoor and Outdoor (Type 4, 4X, IP66) Locations with Intrinsically Safe connections to Class I, II, and III, Division 1, Groups A, B, C, D, E, F, and G Hazardous (Classified) locations in accordance with control drawing 420-0004-173-CD; Intrinsically Safe for use in Class I, II, and III, Division 1, Groups A, B, C, D, E, F, and G hazardous (Classified) locations in accordance with entity requirements and control drawing 420-0004-173-CD.

#### **ATEX**



#### Integral



II 1 GD EX ia IIC T5...T2 T 90°C NEMKO 03 ATEX 1612X  $\bigcirc$  0344

Temperature Class Process Temperature

T5	100°C
T4	135°C
T3	200°C
T2	230°C



#### Remote



II 1 GD EX ia IIC T5...T2 T90°C NEMKO 03 ATEX 1612X



#### 5.1 Approvals (Continued)



Class I, Groups A,B,C, and D with Intrinsically Safe Probe; ClassII, Groups E, F, and G; Class III

IntelliPoint RF Point Level System RXL4 Series; Rated supply: 18...200Vdc or 85...250Vac max.; 400Hz, 2W Relay: 250V, 5A with or without optional remote sensing element connection box; Temperature Code T5; Maximum Ambient Temperature +70°C; CSA Enclosure Type 4X.

IntelliPoint RF Two-Wire Point Level System RXT4 Series; Rated 30Vdc max., 140mA max. with or without optional remote sensing element connection box; Temperature Code T4; Maximum Ambient Temperature +70°C; CSA Enclosure Type 4X.

**Note:** The Intrinsically Safe Circuits remain internal to the device.


Class I, Div 2, Groups A, B, C, and D; Class II, Groups E, F, and G; Class III


IntelliPoint RF Two-Wire Point Level System RXT4 Series; Rated 30Vdc max., 140mA max.; Temperature Code T4; Maximum Ambient Temperature +70°C; CSA Enclosure Type 4X.





#### **Section 6: Control Drawings**


#### 6.1 FM Control Drawings

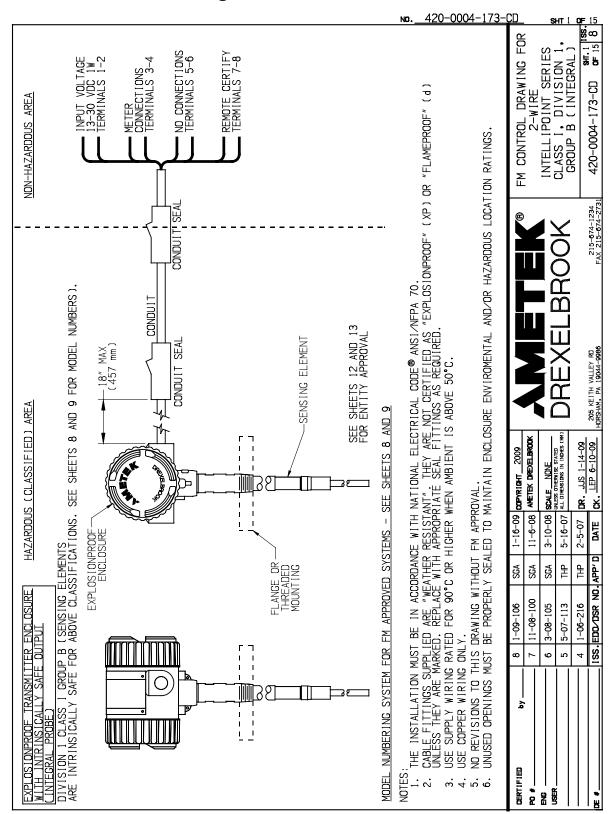


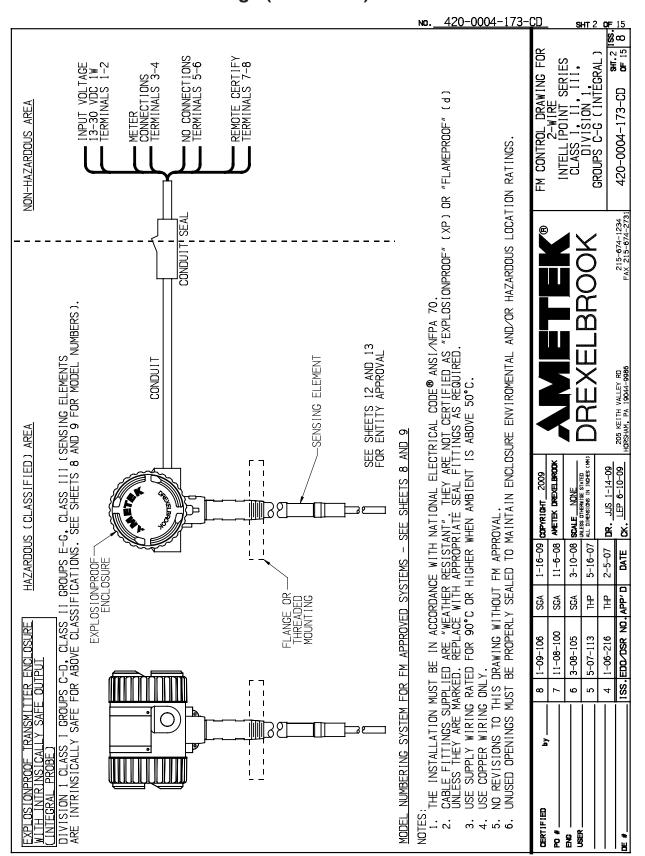


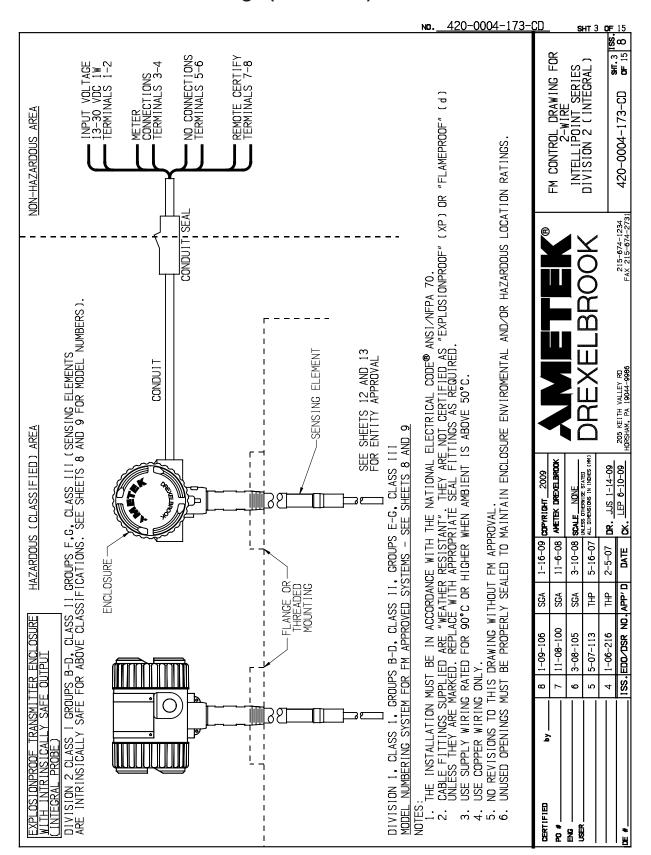

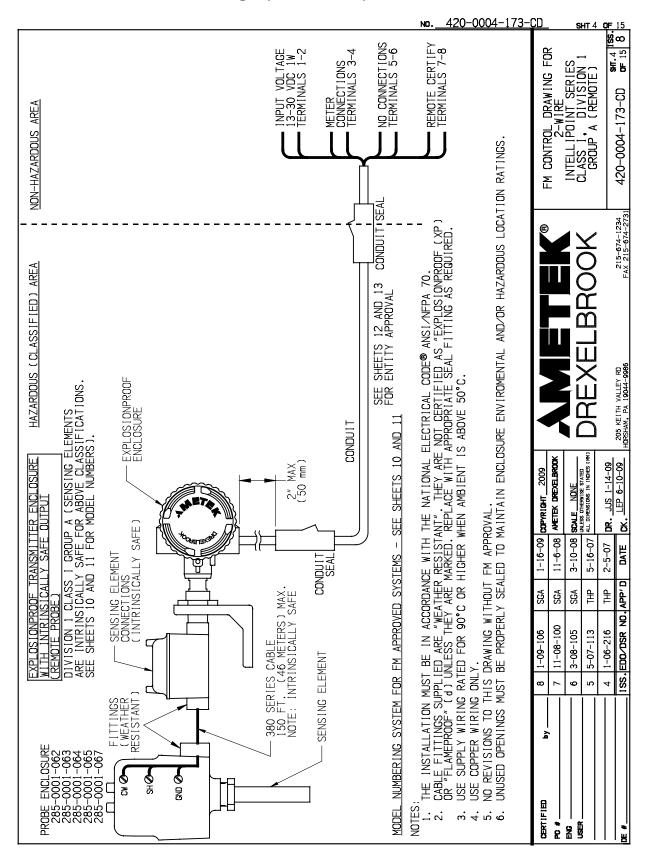


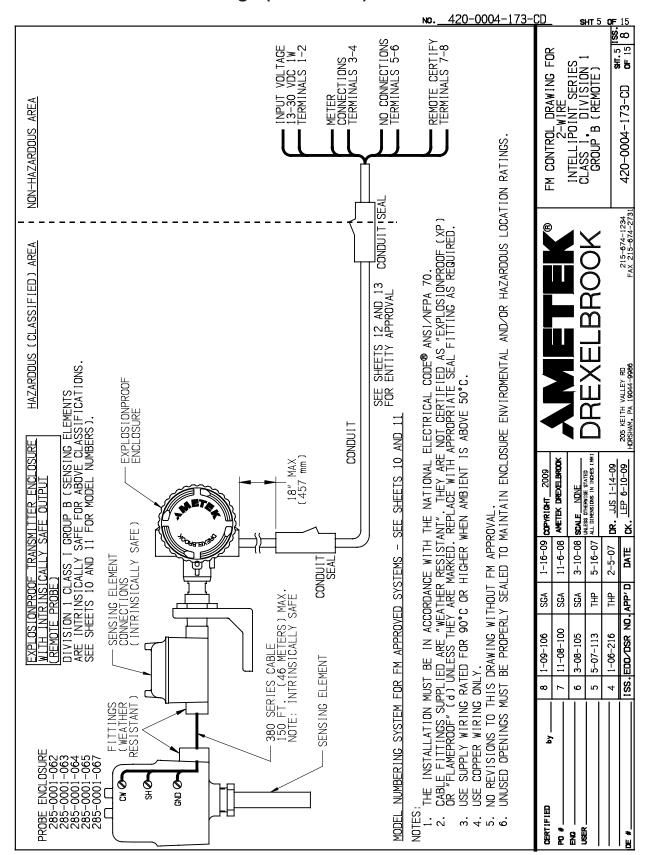

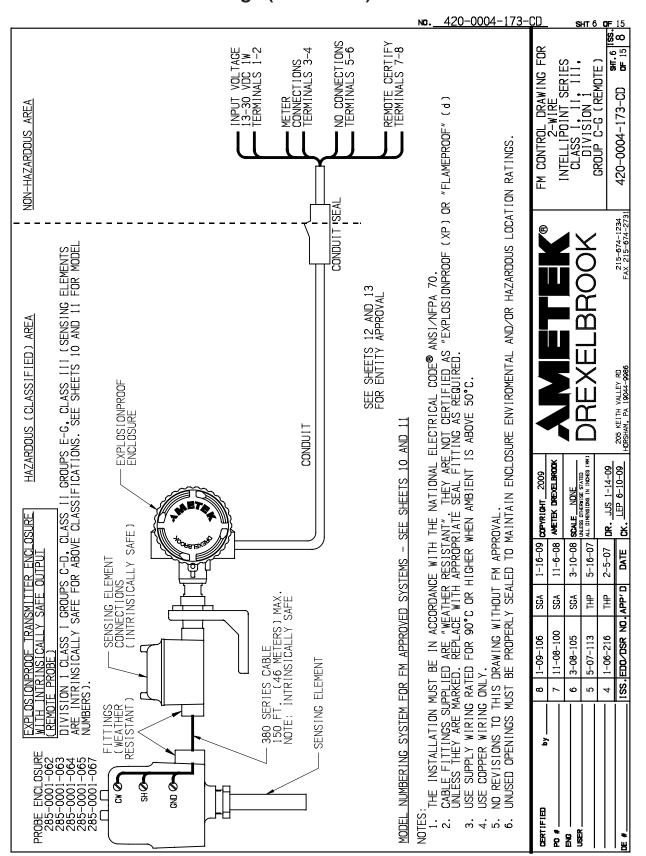

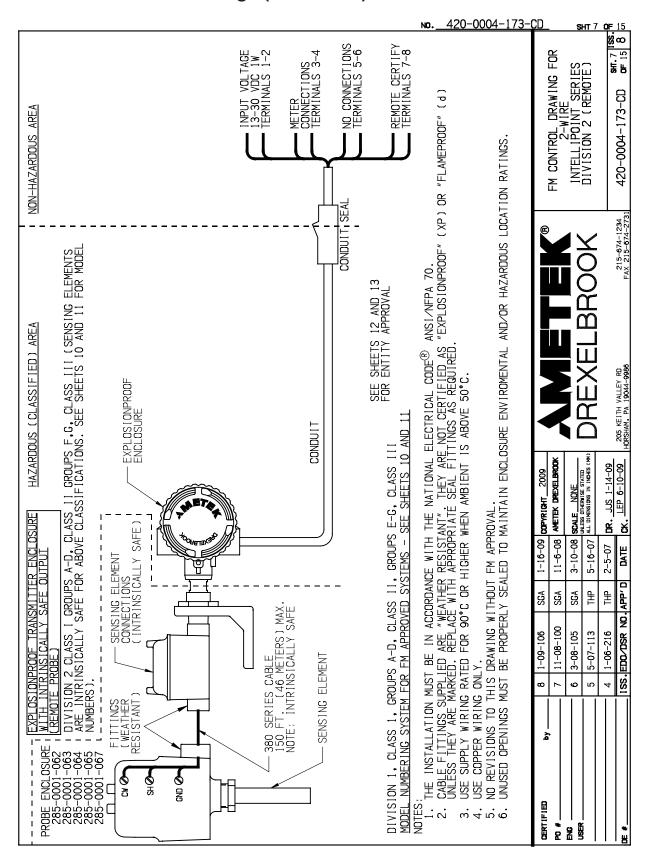



		I	$\neg$					С	01	UMI	NS.	9 AND UP DO NOT AFFECT SAFETY			$\neg$
1	2	3	4	5	6	7	8			11	_	V/11/2 01 20 110 17/11 20 1 0/11 21 1			$\dashv$
R	<u>-</u>	Ť	ь	-	_	c	_	*	_	+-	_	a = OPTIONS			$\dashv$
Ì	a	Ť	Ť	Ť			Ť					N = NO-CAL (STD)	L = 3	STANDARD AUTO CAL	
1	_											M = MANUAL SET POINT ADJUSTMENT		10pf AUTO CAL	
			$\dashv$									H = HI SENSITIVITY		10pf FIXED	$\dashv$
$\dashv$												G = HI SENSITIVITY MANUAL SET POINT ADJUSTMENT		HI SENSITIVITY .5pf FIXED	
1			ь									b = OPTIONS (8)			
7			3				1					(STD)			
7			7									DUAL SEAL			
1			В									DUAL SEAL			
7						С						c = 0, 1 OR Z SENSING ELEMENT	rs		
1							d					d = 0-4, 6-9, Z SENSING ELEME			
1												SENSING ELEMENTS			
						0	0					700-1202-021			
1							1					700-1202-022			
1							2					700-1202-024			
1							3					700-1202-028			
1			T				4					700-1202-042			
1			T				6					700-1202-032			
1							7					700-1202-020			
1							9					700-1202-034			
1						1	1					700-0201-005			
							2					700-0201-005 HAST C			
Ī							3					700-0201-036			
							6					700-0002-360			
							7					700-0202-036			
							8					700-0001-022			
1							9					700-0002-023			
1						Ζ	Z					SEE SHEET 9 FOR A LIST OF OTHER APPROVED	) INTEG	GRAL SENSING ELEMENTS	
											е	e = A-F, G, H, J, K, L OR Z			
												INSERTION LENGTH/COTE SHIELD LE	NGTH		
											Α	6"/2" & 152.4mm/50.8mm			
											В	12"/2" & 304.8mm/50.8mm			
											C	12"/3.5" & 304.8mm/88.9mm			
											D	18"/2" & 457.2mm/50.8mm		COPYRIGHT 2009  AMETEK DREXELBR	<b>YOV</b>
											E	18"/3.5" & 457.2mm/88.9mm			
											F	18"/10" & 457.2mm/254mm		SCALE NONE UNLESS OTHERWISE STATED	_
											G	18"/NO CSL & 457.2mm/NO CSL		ALL DIMENSIONS IN INCHES	
											Н	36"/10" & 914.4mm/254mm		DR. <u>JJS 1-14-</u> CK. <u>LEP 6-10-</u> C	<u>9</u> 9
											J	36"/NO CSL & 914.4mm/NO CSL			_
											K	48"/10" & 1219.2mm/254mm		PO #	
			$oldsymbol{ol}}}}}}}}}}}}}}} $								L	60"/10" & 1524mm/254mm		ENG	_
											Z	OTHER		USER	
											1	18"/6" & 457.2mm/152.4mm			
											2	12"/6" & 304.8mm/152.4mm			_
_	Т	, ,		100		_	٥.	T		. ^^	<b>T</b>	<b>A = ===</b>	<b>7</b> @	DE #	_
8	一		)9-				GA_	-		5-09	-1	AMETEK	ישי <i>ד</i>	FM APPROVED INTEGRAL	
7	$\dashv$		-08				GA	-		)-08	-			2-WIRE INTELLIPOINT	
6	<u>;</u>	3-0	)8 <u>–</u>	105		S	GA	3	-10	)-08	3	DREXELBROOK		MODEL NUMBERING SYSTE	М
5	<u>;                                    </u>	5-0	7-	113		LT	HP	<u></u> 5	-16	5-07	7_		•	430 0004 173 CD SHT. 8	22
₹	3.	EDC	1/DS	R N	w.	AF	P'D		D/	ΛTE	٦.	205 KEITH VALLEY RD 215-67 ORSHAM, PA 19044-9986 FAX 215-0	4-1234	420-0004-173-CD of 15	8

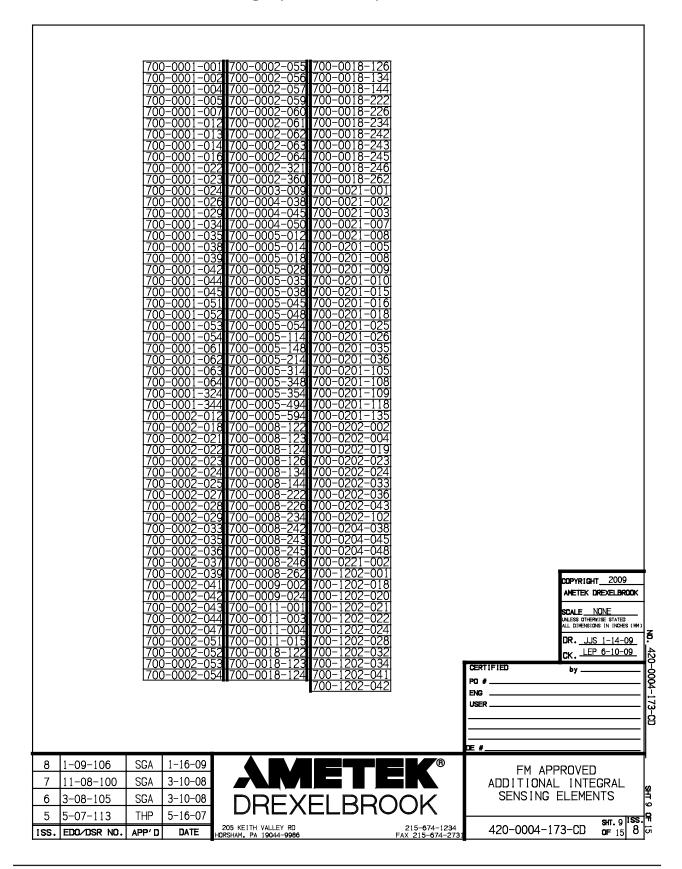

$\neg \neg$	$\overline{}$	П	_	П	CC	1111	MN	9 AND UP DO NOT AFFECT SAFETY		
1 2 3	3 4	5	6 7					3 9 AND OF DO NOT AFFECT GALETT		
Ra								a = OPTIONS		
a				Ħ	П		T	N = NO-CAL (STD)	L = STANDARD AUTO CAL	
$\Box$								M = MANUAL SET POINT ADJUSTMENT	T = 10pf AUTO CAL	
								H = HI SENSITIVITY	V = 10pf FIXED	
Ш								G = HI SENSITIVITY MANUAL SET POINT ADJUSTMENT	P = HI SENSITIVITY .5pf F	IXED
	b							b = OPTIONS (8)		
	3							(STD)		
	7							DUAL SEAL		
$\perp \! \! \perp$		c			Ш	_	_	c = 1-9, A-K CABLE LENGTHS		
$\dashv \downarrow$		Ш	d	-	Ш		╙	d = 0-3, 5, 6, OR Z SENSING ELEMENTS		
$\dashv \downarrow$	$\perp$	Ш	_	е	Ш	_	╙	e = 0-9, OR Z SENSING ELEMENTS		
$\dashv$	_	ш		Ļ	Ш	_	_	SENSING ELEMENTS		
$+\!\!+$	+	$\vdash$	10	0	Н	+	$\vdash$	700-1202-001		
$+\!+$	+	$\vdash$	+	1	H	+	+	700-1202-012		
$+\!+$	+	H	+	3	H	+	+	700-1202-014 700-1202-018		
$+\!+$	+	$\vdash$	+	4	H	+	+	700-1202-016 700-1202-041		
$+\!+$	+	+	+	6	H	+	+	700-1202-031		
++	+	₩	+	7	$\vdash$	+	╁	700-1202-010		
++	+	+	+	9	H	+	+	700-1202-033		
++	+	+	1	0	$\vdash$	+	+	700-0001-018		
+	+	#	Ť	1	H	+	T	700-0201-005		
++	$\top$	$\parallel \parallel$	$\top$	2	$\sqcap$	$\top$	T	700-0201-005 HAST C		
$\dashv \dagger$	$\top$	$\Box$	$\top$	3	Ħ	$\top$	T	700-0201-036		
$\top$	$\top$		$\top$	4	П	$\top$		700-0202-002		
$\dashv \vdash$	$\top$	$\parallel \perp \parallel$	$\top$	5	П	$\top$	T	700-0202-043		
				6				700-0002-360		
				7				700-0202-036		
				8				700-0001-022		
				9				700-0002-023		
			2	0				700-0209-002		
			3	1				700-0029-001		
				2				700-0029-002		
Ш		Ш	$\perp$	3	Ш		╙	700-0029-003		
$\dashv \downarrow$		Ш		4	Ш	_	┸	700-0029-004		
$\dashv \downarrow$	$\perp$	Ш	4	5	Ш	$\perp$	┺	700-0029-005		
+	+	ш	5	0	Ш	_	╀	700-0207-001		
	+	Ш	_	1	Ш	_	_	700-0207-002		
$+\!\!+\!\!\!+$	_		_	2	Н	_	-	700-0207-003		
$+\!\!+\!\!\!+$	+	$\vdash$	_	3		_	-	700-0207-004		
++	+	₩	+	4	$\vdash$	+	₩	700-0207-005		
$+\!+$	+	₩	-	5	$\vdash$	+	₩	700-0207-006		
++	+	₩	+	1	H	+	₩	700-0204-038 700-0204-002		
++	+	+	+	2	Н	+	+	700-0204-048		
++	+	$\vdash$	+	Z	H	+	+	SEE SHEET 11 FOR ADDITIONAL APPROVED REMOTE SENSING ELEMENTS		
++	+	$\vdash$	+	-	H	+	+	SEE SHEET II TOK ADDITIONAL ALTROYED KENOTE SENSING ELLHENTS		
$\dashv \dagger$	+	H	+	H	H	+	f	f = A-F, G, H, J, K, L OR Z		
$\dashv \uparrow$	+		$\top$	$\Box$	H	+	Ť	INSERTION LENGTH/COTE SHIELD LENGTH		COPYRIGHT 2009
++	+	$\parallel \perp \parallel$	+	$\sqcap$	$\vdash$	+	A	6"/2" & 152.4mm/50.8mm		AMETEK DREXELBROOK
++	$\top$	$\parallel \perp \parallel$	$\top$	Ħ	Ħ	$\top$	В	12"/2" & 304.8mm/50.8mm		and a MONE
	$\top$	$\Box$		Ħ	H		C	12"/3.5" & 304.8mm/88.9mm		SCALE NONE UNLESS OTHERWISE STATED
$\top$	$\top$				Ħ		D	18"/2" & 457.2mm/50.8mm		ALL DIMENSIONS IN INCHES (MM)
$\Box$		Ш		П	П		E	18"/3.5" & 457.2mm/88.9mm		DRJJS 1-14-09_
$\neg \neg$	_			П	П		F	18"/10" & 457.2mm/254mm		
1 1			_				G	18"/NO CSL & 457.2mm/NO CSL		- UK
$\dashv \uparrow$	+			1 1				36"/10" & 914.4mm/254mm	CERTIFIED	ku II
							Н	30 / 10		by
$\frac{+}{+}$						+	H	36"/NO CSL & 914.4mm/NO CSL	P0 #	
							-		ENG	
							J K L	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm		
							J K L Z	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER	ENG	
							J K L Z	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm	ENG	by
							J K L Z	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER	ENG	
							J K L Z	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm	ENGUSER	
8	11-	09-	106	5		SGA	J K L Z	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm	ENGUSER	
8	+-	-			-	SGA	J K L Z 1	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm	ENG USER USER USER USER USER USER USER USER	/ED REMOTE
8 7	+-	09-			-	SGA SGA	J K L Z 1	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm	ENG USER USER USER USER USER USER USER USER	/ED REMOTE
	11	-08	-10	00		SGA	J K L Z 1 2	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm	ENG USER  DE #  FM APPROV 2-WIRE IN	/ED REMOTE
7 6	11 3-	-08 08-	-10 105	00	,	SGA SGA	J K L Z 1 2	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm 1-16-09 3-10-08 3-10-08	ENG USER  DE #  FM APPROV 2-WIRE IN	/ED REMOTE TELLIPOINT ERING SYSTEM
7	11 3-	-08	-10 105	00	,	SGA	J K L Z 1 2	36"/NO CSL & 914.4mm/ND CSL 48"/10" & 1219.2mm/254mm 60"/10" & 1524mm/254mm OTHER 18"/6" & 457.2mm/152.4mm 12"/6" & 304.8mm/152.4mm	ENG USER  DE #  OF MAPPROV 2-WIRE IN MODEL NUMBE	/ED REMOTE TELLIPOINT RING SYSTEM

MODEL NUMBERS OF APPROVED REMOTE SENSING ELEMENTS 701-mnop-qrs-t LEVEL PROBE I = FAMILY NO. 0, 4m = FAMILY NO. O THROUGH 9, BLANK n = FAMILY NO. O THROUGH 9, BLANK o = O THROUGH 9, BLANK p = 0 THROUGH 9 q = FAMILY NO. O THROUGH 9, BLANK = FAMILY NO. O THROUGH 9, BLANK s = FAMILY NO. O THROUGH 9 t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY COPYRIGHT 2009 AMETEK DREXELBROOK SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM DR. <u>JJS 1-14-09</u> CK. LEP 6-10-09 420-0004-173-CD CERTIFIED PO # ENG . USER DE#. 1-09-106 SGA 1-16-09 FM APPROVED 3-10-08 11-08-100 SGA ADDITIONAL REMOTE SENSING ELEMENTS SGA 3-10-08 3-08-105 5-07-113 THP 5-16-07 205 KEITH VALLEY RD DRSHAM, PA 19044-998 420-0004-173-CD 8 5 ISS. EDO/DSR NO. APP'D DATE

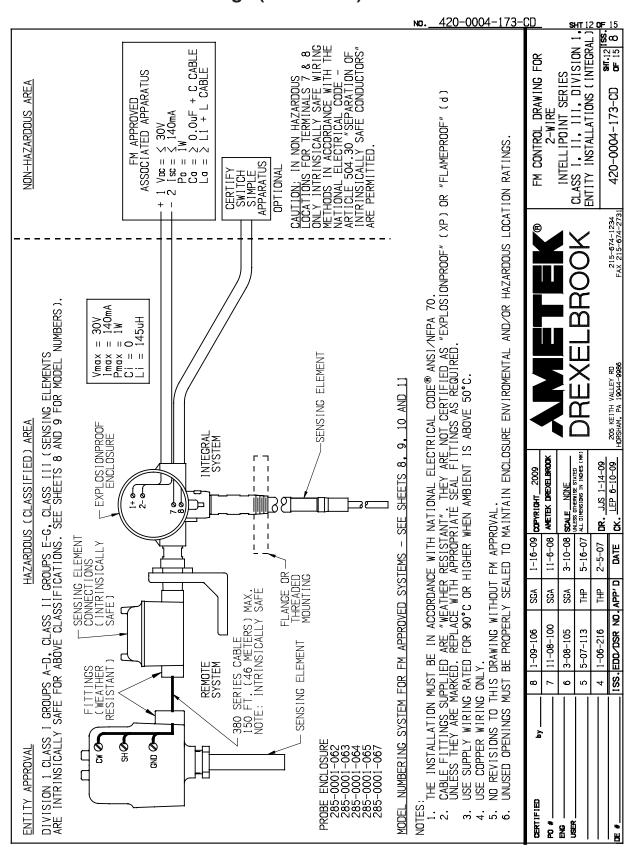


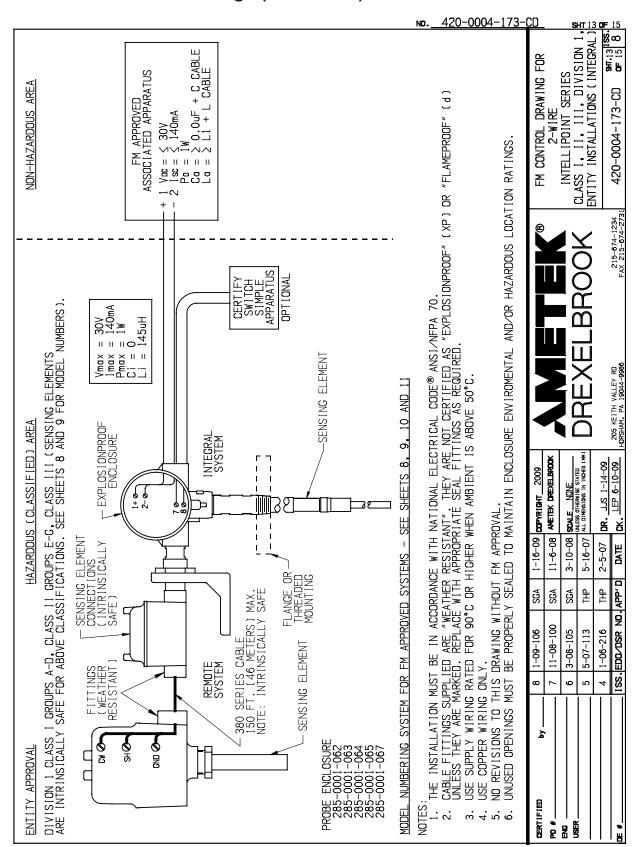


									-		_		11 AND UP DO NOT AFFECT SAFETY	
		4		6	7	-		10	11	12	_			
Sa	R	b	T	Ç	0	0	d	е	*	*	*	f		
a													a = SIL LEVEL 1 OR 2	
		b											b = OPTIONS	
													N = NO-CAL (STD) 2pF FIXED L = STANDARD AU	TO CAL 2pF AUTO
				С									c = OPTIONS ®	
$\perp$													3 = (STD)	
													7 = DUAL SEAL	
													C = DUAL SEAL	
4					_		d						d = 0, 1 OR Z SENSING ELEMENTS	
								е					e = 0-4, 6-9, Z SENSING ELEMENTS	
													SENSING ELEMENTS	
							0	0					700-1202-021	
4					_			1					700-1202-022	
								2					700-1202-024	
$\perp$	-							3					700-1202-028	
-	-				-			4	-				700-1202-042	
+					-			6					700-1202-032	
+					-			7					700-1202-020	
+					+			9	-				700-1202-034	
_	-				-		1	1	-				700-0201-005	
+					+			2	-				700-0201-005 HAST C	
+					+			3	-				700-0201-036	
+	-				_			6			Ш		700-0002-360	
-	-				_			7			Ш		700-0202-036	
-					+			8					700-0001-022 700-0003-033	
	-				+		7	9	-		Н		700-0002-023	NO ELEMENTO
+	-				-		Z	Ζ					SEE SHEET 9 FOR A LIST OF OTHER APPROVED INTEGRAL SENSI	NG ELEMENTS
					-							f	f A F C II I I I I OD 7	
+	+-				+				-		-	_	f = A-F, G, H, J, K, L OR Z INSERTION LENGTH/COTE SHIELD LENGTH	
-	1				+						Н	Α	6"/2" & 152.4mm/50.8mm	
					-							В	12"/2" & 304.8mm/50.8mm	
+	+				$\vdash$				$\vdash$		Н	C	12"/3.5" & 304.8mm/88.9mm	
+	+				$\vdash$				$\vdash$		Н	<u></u>	18"/2" & 457.2mm/50.8mm	
+					+				$\vdash$			E	18"/3.5" & 457.2mm/88.9mm	COPYRIGHT 2009
+	+-				+				$\vdash$			F	18"/10" & 457.2mm/254mm	AMETEK DREXELBROOK
+	+-				+				$\vdash$			G	18"/NO CSL & 457.2mm/NO CSL	SCALE NONE UNLESS OTHERWISE STATED
+	+-				+				$\vdash$			Н	36"/10" & 914.4mm/254mm	ALL DIMENSIONS IN INCHES (MM)
+	+	Н			+	Н		Н	+		Н	J	36"/NO CSL & 914.4mm/NO CSL	DR. <u>JJS 1-14-09</u> CK. <u>LEP 6-10-09</u>
+	+	Н			+	Н		Н	+		Н	K	48"/10" & 1219,2mm/254mm CERTIFIED	
+	+	Н			+			Н	+		Н	T.	60"/10" & 1524mm/254mm	by
+	+	Н			+			Н	$\vdash$		Н	Z	OTHER ENG	
+	+	Н			+			Н	+		Н	1	18"/6" & 457.2mm/152.4mm	
+	+	Н			+			Н	+		Н	2	12"/6" & 304.8mm/152.4mm	
									Ш			_		
0	, ,	\^	100		_	٠,	Τ,	4.	2 01	T			DE #	
<u>8</u> -	1-0					GA -	$\overline{}$		5-09	-				ED INTEGRAL
7	11-				-	GA	_		30-C	-1	4			NTELLIPOINT SERING SYSTEM
6	3-0	)8 <u>–</u>	105	5	S	GA	13	3-10	30-C	3				SYSTEMS
5	5-0	<u> 7</u>	113	3	L™	HP	5	5-16	5-07	7				SHT. 14 ISS
SS.	Enc	1/119	SR	NO	ΔE	P'E	ı 🗆	D/	ATE	٦.,	205	KEI	H VALLEY RD 215-674-1234 PA 19044-9986 FAX 215-674-2731 420-0004-	173-CD of 15 8

									CC	DLI	IMU	NS 11	AND UP DO NOT AFFECT SAFETY		
								10	11	12	13 1	4			
Sa	R	Ь	T .	С	d	0	е	f	*	*	* (				
a			4	Щ	_				Н				a = SIL LEVEL 1 OR 2		
+		b	+	+	_	$\dashv$			Н	$\vdash$	+		D = OPTIONS  N = NO-CAL (STD) 2pF FIXED	L = STANDARD AUTO CAL	2nF AUTO
+		+	+	С	_				$\vdash$	$\forall$	+		c = OPTIONS ®	L = STANDAND ACTO CAL	Zpi AOTO
$\top$			$\top$	Ť					П				3 = (STD)		
			T	T									7 = DUAL SEAL		
П					d								B = 1-9, A-K CABLE LENGTHS		
ш			$\perp$	Ш			е		Ш				e = 0-3, 5, 6, OR Z SENSING ELEMENTS		
$\perp$			4	Щ	_			f	$\vdash$		_		f = 0-9, OR Z SENSING ELEMENTS		
+		+	+	Н	_	4	_	0	$\vdash$	Н	+	_	ING ELEMENTS		
+		+	+	$\dashv$	_		_	1	+	Н	+		1202-001 1202-012		
+		+	$^{+}$	Н				2	H		+		1202-014		
$\top$			1	T				3	Ħ				1202-018		
								4					1202-041		
Ш								6					1202-031		
$\perp$			4	Щ				7	Ш				1202-010		
+		$\perp$	+	Н	_		•	9	$\vdash$	$\vdash$	_	_	1202-033		
+		+	+	+	$\dashv$	-	1	0	$\vdash$	$\dashv$	+		0001-018 0201-005		
+		+	+	+	$\dashv$			2	$\forall$	+	+		0201-005 0201-005 HAST C		
+		$\vdash$	+	$\forall$	$\dashv$			3	$\forall$	$\forall$	+		0201-036		
$\Box$			$\dagger$	_				4					0202-002		
Ш								5					0202-043		
П		П	Ţ	П				6			Ţ		0002–360		
$\perp$			4	Щ				7	Ш		4		0202-036		
+		4	+	Щ	_			8	Н	$\vdash$	4		0001-022		
+		+	+	$\mathbb{H}$	_		2	9	Н	$\dashv$	_	_	0002-023 0209-002		
+		+	+	+	-	_		1	_	Н	+		0229-002 0029-001		
+		+	+	$\forall$	_		_	2	$\vdash$	$\dashv$	+		0029-002		
$\top$		$\forall$	$^{\dagger}$	T				3	Ħ		$\top$	_	0029-003		
П			T	T				4					0029-004		
								5					0029-005		
$\perp \! \! \perp$			_	Щ			5	0	Ш				0207-001		
+			+	Щ	_	_		1	Н	Н	_		0207-002		
+		+	+	+	-			2	$\vdash$	$\dashv$	+		0207-003 0207-004		
+		+	+	╫	-	-		4	Н	Н	+		0207-004 0207-005		
$\top$			$^{+}$	Ħ	$\neg$	$\neg$		5	Н				0207-006		
$\top$		$\top$	T	T			6	0	_		1	_	0204-038		
								1				700-	0204-002		
$\perp$			1					2				_	0204-048		
$\perp$			_	Щ	_		Z	Z	Ш		_	SEE	SHEET 11 FOR ADDITIONAL APPROVED REMOTE SENSING ELEMENTS		
+		$\vdash$	+	4	_	4		Н	Н	$\vdash$	+	_	_ A_E C U I V I OD 7		
+		$\dashv$	+	+	-	$\dashv$		Н	$\forall$	$\vdash$	+	3	] = A-F. G. H. J. K. L OR Z NSERTION LENGTH∕COTE SHIELD LENGTH		2000
+		+	+	+	-	$\dashv$		Н	Н	$\dashv$	٠,		172" & 152.4mm/50.8mm		COPYRIGHT 2009
$\forall$		$\forall$	$^{\dagger}$	#				Н	Н	Н	_		2"/2" & 304.8mm/50.8mm		AMETEK DREXELBROOK
J			J										2"/3.5" & 304.8mm/88.9mm		SCALE NONE
П			Ţ	I					П				8"/2" & 457.2mm/50.8mm		UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
$\perp \! \! \perp$			$\perp$	Щ	_			Ц	Ш	Ц	- 1	_	8"/3.5" & 457.2mm/88.9mm		DR. JJS 1-14-09
$\dashv$		$\vdash$	$\perp$	4	_	_		Щ	$\vdash$	Ц	- I		8"/10" & 457.2mm/254mm		CK. LEP 6-10-09
+		$\vdash$	+	$\parallel$	_			Н	$\vdash$		_		8" /NO CSL & 457.2mm/NO CSL	- COTIFIED	
+		$\vdash$	+	+	_	-		Н	H	$\dashv$	_		36"/10" & 914.4mm/254mm 36"/ND CSL & 914.4mm/ND CSL	CERTIFIED	by
+		+	+	Н	-	+		Н	$\vdash$	Н	<u>`</u>		18"/10" & 1219.2mm/254mm	P0 #	
+		+	+	$\forall$	$\dashv$		Н	Н	$\forall$	$\forall$	⊢¦		00"/10" & 1524mm/254mm	ENG	
$\top$		$\dashv$	$\dagger$	$\parallel$	$\neg$			П	П	$\dashv$	7		OTHER	USER	
												1	8"/6" & 457.2mm/152.4mm		
											7	2	2"/6" & 304.8mm/152.4mm		
														DE #	
8	1	-0	Q-	-10	)6		Γ	SO	ìΑ	Т	1 – 1	6-09		FM APPROVE	IN REMOTE
	_					_	+			+			<b>AMETEK®</b>	2-WIRE INT	
7_	41	1-	30	<u>3-                                    </u>	10	<u>U</u>	$\perp$	St	Αi	Ļ	3−1	<u>0-08</u>			
6	13	3-0	8-	-10	)5			S	GΑ	1:	3-1	0-08		MODEL NUMBER	
	┰						T	TH		+		6-07	DREXELBROOK	SIL SY	
5	+	5-0					+			+			205 KEITH VALLEY RD 215-674-1234	400,0004,47	э_cn sнт.15 iss.
ISS.	- 1 -	EDO	'n	SR	· N	n.	Ι.	ΑPI	P' D	H	ם	ATE	203 RETTH VALLEY RD 215-674-1234 HORSHAM, PA 19044-9986 FAX 215-674-2731	420-0004-17	3-CD or 15 8

#### 6.2 NEMKO / ATEX Control Drawings

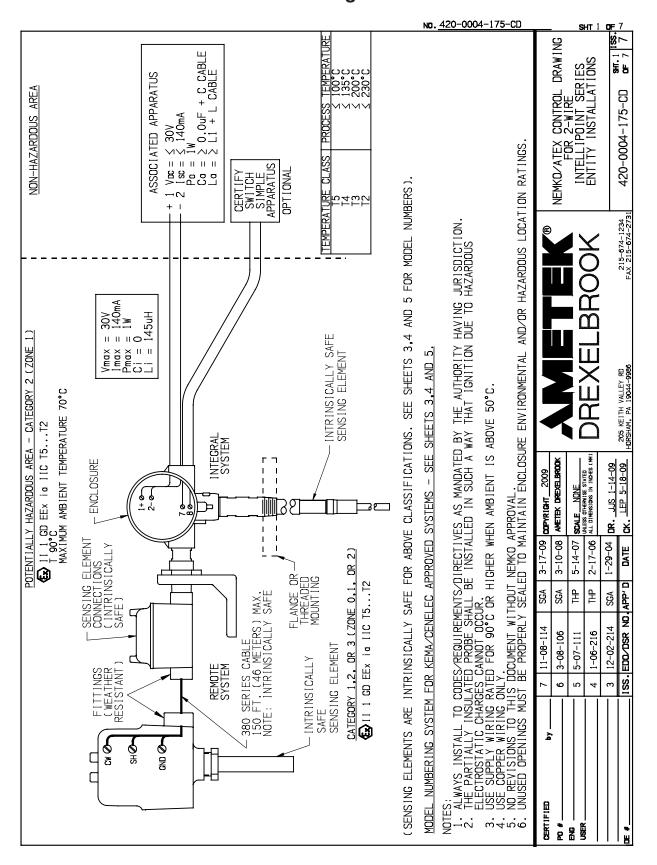

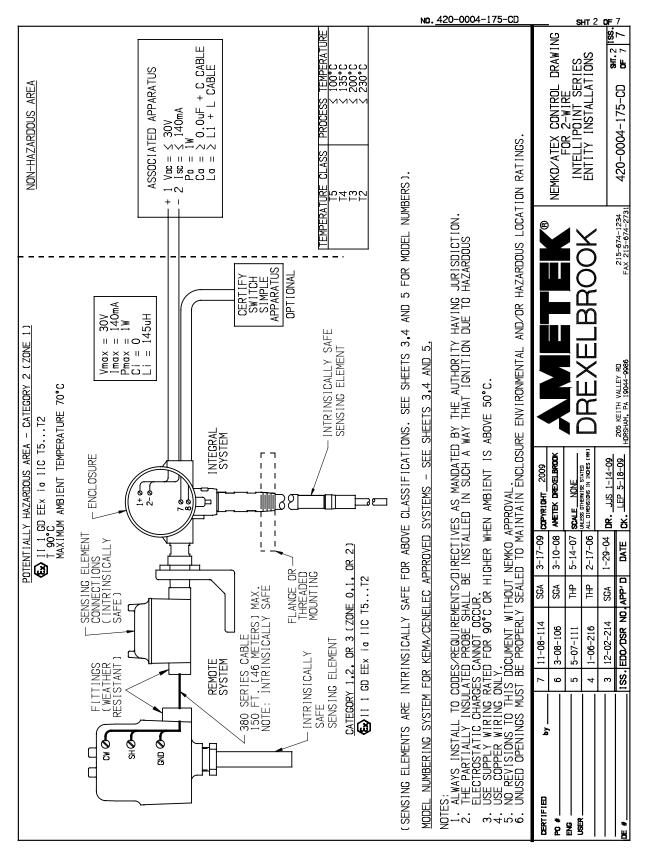

1   2	3	4	5	6	7	8	9	10	11	12		
1 ∠ ₹ a	_	_	-	$\overline{}$	_	_	*			_		
a	H	_			Ť	Ť				_	a = OPTIONS	
											N = NO CALIBRATION POINT LEVEL L = STANDARD AUTO CAL	
$\top$					1						M = MANUAL SET POINT T = 10pf AUTO CAL	
					1						H = HI SENSITIVITY V = 10pf FIXED	
											G = MANUAL SET POINT HI SENSITIVITY P = HI SENSITIVITY .5	of FIXED
		b									b = 2	
		2									M20 KEMA/CENELEC SYSTEMS	
		_				С					c = 0-4	
	П	$\exists$									SENSING ELEMENTS	
$\top$					0	0					700-1202-001	
П					T	1					700-1202-012	
П						2					700-1202-014	
						3					700-1202-018	
						4					700-1202-041	
						6					700-1202-032	
						7					700-1202-020	
						9					700–1202–034	
					1	1					700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT	
						2					700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT	
						3					700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT	
						6					700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT	
						7					700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT	
						8					700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT	
					_	9				-	700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT	
Ш					Z	Z				-	SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSI	NG ELEMENTS
Ш					4			*	*		SEE MOUNTING CHART	
Ш					4					d	d = A-F, G, H, J, K, L OR Z	
Ш					_					L.	INSERTION LENGTH/COTE SHIELD LENGTH	
					_		-			A	6"/2" & 152.4mm/50.8mm	
		_			_		-			В	12"/2" & 304.8mm/50.8mm	
		_			4	_				C	12"/3.5" & 304.8mm/88.9mm	
+		_			+					D	18"/2" & 457.2mm/50.8mm	
+		_			+					E	18"/3.5" & 457.2mm/88.9mm 18"/10" & 457.2mm/254mm	
+		_			+					-	18"/NO CSL & 457.2mm	
+	$\vdash$	$\perp$		$\vdash$	$\dashv$	_	-			G	36"/10" & 914.4mm/254mm	
+	$\vdash$	+	$\vdash$		$\dashv$	$\dashv$	1			H	36"/NO CSL & 914.4mm	COPYRIGHT 2009
$\vdash$		+	Н		$\dashv$	+	+			K	48"/10" & 1219,2mm/254mm	AMETEK DREXELBROOK
+	$\vdash$	+			+	+				L	60"/10" & 1524mm/254mm	
+	$\vdash$	+		+	$\dashv$	$\dashv$	$\vdash$			Z	00 / 10 & 1324mm / 234mm OTHER	SCALE NONE  UNLESS OTHERWISE STATED  ALL DIMENSIONS IN INCHES (MM
Н	H	+		$\vdash$	$\dashv$					1	18"/6" & 457.2mm/152.4mm	DR. JJS 1-14-09
+		+			$\dashv$					2	12"/6" & 304.8mm/152.4mm	LEP 5-18-09
					_						CERTIFIED	
											PO #	
											ENG	
											USER	
					_		_	_		_	E #	
7	1	1-08	3-11	14	Ľ	SGA		3-	17-	-09	NEMKO/ATE 2-WIRE IN	K_APPROVED
'		00	-106	s	1 :	SGA	. [	3-	10-	-08	2-WIRE IN	TELL I PO I NT
6	3.	-00-	100	_	_		_ '					
		-08- -07-				THP	7	5-	14-	07		RING SYSTEM
6	5		-111	1	┿	THP	$\dashv$		14- 17-			RING SYSTEM GRAL)


	П					С	ŌL	UN	1N:	9 AND UP DO NOT AFFECT SAFETY		
			5 6									
-	_	2	ь (	) c	d	*	*	*	е	ant lava		
<u> </u>		╫	$\vdash$	+	-			Н	_	a = OPTIONS  N = NO CALIBRATION POINT LEVEL L = STANDARD AU	TO CAL	
		╣	$\vdash$	+				H	_	M = MANUAL SET POINT T = 10pf AUTO C		
										H = HI SENSITIVITY V = 10pf FIXED		
										G = MANUAL SET POINT HI SENSITIVITY P = HI SENSITIV	ITY .5pf FIXED	
		Ц	Ь							b = 1-9, A-K CABLE OPTIONS (REMOTE)		
-		$\dashv$	$\vdash$	С	_			Н		c = 0-3, 5, 6, OR Z SENSING ELEMENTS d = 0-6, & 8, OR Z SENSING ELEMENTS		
		╫	$\vdash$	+	d			H		SENSING ELEMENTS		
		T	$\vdash$	0	0			П		700-1202-001		
					1					700-1202-012		
					2	_				700-1202-014		
-		$\dashv$			4	_				700-1202-018 700-1202-041		
		$\dashv$	$\vdash$		6	_				700-1202-041		
		T	$\vdash$		7	-				700-1202-010		
					9					700-1202-033		
		Ш		1	÷	-				700-0001-018 INTRINSICALLY SAFE SENSING ELEMENT		
		Щ		-	1	_				700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	$\vdash$	$\dashv$	$\vdash$	+	3	_		H		700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT 700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	$\vdash$	+	$\vdash$	+	4	_		H		700-0201-030 INTRINSICALLY SAFE SENSING ELEMENT		
	Ħ	_#		Ť	5	-				700-0202-043 INTRINSICALLY SAFE SENSING ELEMENT		
					6	_				700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT		
Ш		Щ			7	-				700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT		
		$\dashv$	$\vdash$	+	9	_			_	700-0001-022		
$\vdash$	$\vdash$	+	+	+,	0	-	-		_	700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT 700-0209-002 INTRINSICALLY SAFE SENSING ELEMENT		
		$\dashv$	$\forall$		1					700-0029-001 INTRINSICALLY SAFE SENSING ELEMENT		
					2					700-0029-002 INTRINSICALLY SAFE SENSING ELEMENT		
			Ц		3	-				700-0029-003 INTRINSICALLY SAFE SENSING ELEMENT		
Н.				+	4	_				700-0029-004 INTRINSICALLY SAFE SENSING ELEMENT		
		$\dashv$	$\vdash$	- 5	5	_			_	700-0029-005		
		$\dashv$	$\vdash$	Ť	1	-	<u> </u>			700-0207-002 INTRINSICALLY SAFE SENSING ELEMENT		
		T			2					700-0207-003 INTRINSICALLY SAFE SENSING ELEMENT		
	П		П		3	_				700-0207-004 INTRINSICALLY SAFE SENSING ELEMENT		
Н-		-#	_	+	4	_				700-0207-005 INTRINSICALLY SAFE SENSING ELEMENT		
-		╫	$\vdash$	-6	5	_			_	700-0207-006		
		$\dashv$	$\vdash$	_	1	_				700-0204-002 NINTHOTORIET SAIE SENSING ELEPIENT		
				6	2					700-0204-048		
		Ц		Z	Z				_	SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING EL	EMENTS	
-		$\dashv$	$\vdash$	+					е	e = A-F, G, H, J, K, L OR Z INSERTION LENGTH/COTE SHIELD LENGTH		
$\vdash$		╫	$\vdash$	+				H	Α	6"/2" & 152.4mm/50.8mm		COPYRIGHT 2009
		T	$\vdash$						В	12"/2" & 304.8mm/50.8mm		AMETEK DREXELBROOK
									C	12"/3.5" & 304.8mm/88.9mm		SCALE_NONE
		Щ							D	18"/2" & 457.2mm/50.8mm		UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
-		$\dashv$	$\vdash$	+					E F	18"/3.5" & 457.2mm/88.9mm 18"/10" & 457.2mm/254mm		DR. JJS 1-14-09
		╣	$\vdash$	+				Н	G	18"/NO CSL & 457.2mm		
		T	$\vdash$					Н	H	36"/10" & 914.4mm/254mm	CERTIFIED	
									J	36″∕NO CSL & 914.4mm		LEP 5-18-09
									K	48"/10" & 1219.2mm/254mm	PO #	
		Щ	Щ	-					L	60"/10" & 1524mm/254mm OTHER	USER	
		╫	$\vdash$	+				H	Z 1	18"/6" & 457.2mm/152.4mm		
$\vdash$	$\vdash$	$\dashv$	$\vdash$	+			H	Н	2	12"/6" & 304.8mm/152.4mm	1	
				-							DE #	
7	T	11.	-08	-11	4		SG/	1	1	3-17-09		, YDDDO//ED
_	+				T	₩			H		NEMKO∕ATEX 2-WIRE INT	APPKUVED
6	+	-	08-			┿	SG/		⊢		MODEL NUMBE	
5	$\perp$	5-	07-	111		Ľ	THE		Ľ	DREXELBROOK	( REM	RING SYSTEM   DTE)
4		1-	06-2	216		1	THE	,	2			янт. 4 ISS.
ISS.	F	DO.	⁄DS	R١	10·	A	PP	'D	Г	DATE 205 KEITH VALLEY RD 215-674-1234 HORSHAM, PA 19044-9986 FAX 215-674-2731	420-0004-17	
	ᅳ			• •	•	٠.,	•	_	_	FAX 213-0/4-2/31		


	700-mn0  m = n = 0 = p = q = r =	PP-qr FAMI FAMI O TH O TH FAMI FAMI FAMI	s-t LE' LY NO. LY NO. IROUGH ! IROUGH ! LY NO. LY NO. LY NO.	APPROVED INTR VEL PROBE  O THROUGH 9, 9, BLANK 9 O THROUGH 9, O THROUGH 9, O THROUGH 9 ER EXPANDED N	BLANK BLANK BLANK BLANK				(
7 6 5	11-08-114 3-08-106 5-07-111	SGA SGA THP	3-17-09 3-10-08 5-14-07 2-17-06	· ·	<b>ET</b>	<b>EK</b> ®	ADDITIONAL SAFE SENS	COPYRIGHT 2009 AMETEK DREXELBR SCALE NONE BALESS OTHERVISE STATES ALL DIMENSIONS IN INDEE DR. JJS 1-14-( LEP 5-18-0  INTRINSICALL SING ELEMENTS EMOTE)	No. 420-0004-175-CD SHT 5
ıss.	1-06-216 EDO/DSR NO.	APP' D		205 KEITH VALLEY RD HDRSHAM, PA 19044-9986		215-674-1234 FAX 215-674-27	420-0004-	-175-CD <b>знт.</b> 5 <b>о г</b> 7	iss. <del>9</del> 7 ∼

1 2	3	4 5	, A	7	А	g	10	11	12	13	14		1
		b T											
a	1		+	Ť	۲		-		<u> </u>		_	a = SIL LEVEL 1 OR 2	
-		ь	+									b = OPTIONS (7)	
			+									N = NO CALIBRATION POINT LEVEL 2pF FIXED	
		_	+					+				L = STANDARD AUTO CAL 2pF AUTO	
_		-	c					+				c = 2	
			2	$\vdash$			Н	-		Н		M20 KEMA/CENELEC SYSTEMS	
		_	1	+			d	+	$\vdash$	Н		d = 0-4	
		_	+	+			-	+	$\vdash$	Н		SENSING ELEMENTS	
						0	0					700-1202-001	
+			+			۲	1	+				700-1202-012	
		_	+	+			2	+				700-1202-014	
+			+	-			3	+				700-1202-018	
+		_	+	+			4	+				700-1202-041	
-			+	+			6	-		Н		700-1202-032	
		_	+				7	_		Н		700-1202-020	
	H	+	+	$\vdash$	H	$\vdash$	9	+	$\vdash$	Н		700-1202-020	
	H	+	+	$\vdash$	H	1	1	+	$\vdash$	Н		700-0201-005 INTRINSICALLY SAFE SENSING ELEMEN	т —
+	$\vdash$	+	+	+	$\vdash$	+	2	+		Н		700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMEN	
+	$\vdash$	+	+	+	$\vdash$		3	+	$\vdash$	Н		700-0201-036 INTRINSICALLY SAFE SENSING ELEMEN	
+	$\vdash$	+	+	$\vdash$	$\vdash$		6	+	$\vdash$	Н		700-0002-360 INTRINSICALLY SAFE SENSING ELEMEN	
+		_	+	+			7	+				700-0202-036 INTRINSICALLY SAFE SENSING ELEMEN	
+		-	+	+			8	+				700-0001-022 INTRINSICALLY SAFE SENSING ELEMEN	•
		_	+				9	_				700-0002-023 INTRINSICALLY SAFE SENSING ELEMEN	
_		+	+	+		Z	Z	+				SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SE	
+		-	+			_	-		*	*	*	SEE MOUNTING CHART	INOTINO ELEMENTO
+		-	+						H		е	e = A-F, G, H, J, K, L OR Z	
			+				Н	+			_	INSERTION LENGTH/COTE SHIELD LENGTH	
			+	+			Н	+			Α	6"/2" & 152.4mm/50.8mm	
			+								В	12"/2" & 304.8mm/50.8mm	
											C	12"/3.5" & 304.8mm/88.9mm	
											D	18"/2" & 457.2mm/50.8mm	
											Е	18"/3.5" & 457.2mm/88.9mm	
							П				F	18"/10" & 457.2mm/254mm	
							П				G	18"/NO CSL & 457.2mm	
							П				Н	36"/10" & 914.4mm/254mm	
											J	36"/NO CSL & 914.4mm	
											Κ	48"/10" & 1219.2mm/254mm	COPYRIGHT 2009
											L	60"/10" & 1524mm/254mm	AMETEK DREXELBROOK
											Z	OTHER	SCALE_NONE
											1	18"/6" & 457.2mm/152.4mm	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
											2	12"/6" & 304.8mm/152.4mm	DR. JJS 1-14-09
													LEP 5-18-09
												CERTIFIED	
												P0 #	
												ENG	
												USER	
												<u>L</u>	
7	· ·	1 00	111	$\overline{}$	C.C	٨	2	-17	00	Т		DE #	/ ADDDO\/ED
7	-	1-08-		+	SG			-17-		1		NEMKO/ATEX 2-WIRE IN MODEL NUMBE	
6	3	-08-	06	$\perp$	SG	A	3-	-10-	-08	1		THOUSE INCIDE	DINO CVCTEM
5	_ 5	-07-	11	_]	TH	Р	5-	-14-	-07	1			GRAL)
4	1	-06-2	216	T	TH	Р	2-	-17-	-06	1		DREXELBROOKsil s	O I LI IO
ISS.	_	0/DS		+	APF	ח יכ	$\vdash$	DAT	F	1	205	KEITH VALLEY RD 215-674-1234 420-0004-17	янт. 6 ISS. 75-CD он 7 7
٠٠٠.		دں س	, INC	•	WL.L	U	Щ.	וחש	_	HC	RSH	M, PA 19044-9986 FAX 215-674-2731 720 0004 1	U /

						Т	Т	CC	DLU	JMN	S 11 AND UP DO NOT AFFECT SAFETY		
2	3	4 5	5 6	7	8	9				13 14			
i a	R	b 1	2	С	0	d	e	*	*	* f			
a											a = SIL LEVEL 1 OR 2		
		ь		$\perp$	Ш		_	Ш			b = OPTIONS ⑦		
	_	4	$\perp$	_			4	Ш	4		N = NO CALIBRATION POINT LEVEL 2pF FIXED		
_	_		$\perp$	_	Ц	_	4	Ш	_		L = STANDARD AUTO CAL 2pF AUTO		
_	_		$\perp$	С	Ц		4	Ш	_		c = 1-9, A-K CABLE OPTIONS (REMOTE)		
$\perp$	_		$\perp$	_		d	4	Ш	_	_	d = 0-3, 5, 6, OR Z SENSING ELEMENTS		
+	_	$\perp$	+	╄	Н	4	e	Н	_	_	e = 0-6, & 8, OR Z SENSING ELEMENTS		
$\perp$	_	_		_	Н	$\rightarrow$	_	Н	_	_	SENSING ELEMENTS		
+	-	+	+	+	Н	이	_	Н	-	+	700-1202-001		
+	-	_	+	+	Н	_	1 2	Н	$\dashv$	_	700-1202-012 700-1202-014		
+-	$\dashv$	+	+	+	$\dashv$		3	Н	$\dashv$	_	700-1202-014 700-1202-018		
₩	$\dashv$	+	+	+	$\dashv$	_	4	Н	$\dashv$	+	700-1202-018		
+	$\dashv$	+	+	+	$\dashv$	_	6	Н	$\dashv$	+	700-1202-031		
+	$\dashv$	$\vdash$	+	+	$\dashv$	_	7	Н	$\dashv$		700-1202-010		
+	$\dashv$	+	+	+	$\dashv$	_	9	Н	$\dashv$	_	700-1202-033		
$\top$	$\dashv$	$\top$		T	T	_	ŏ	Н	$\dashv$		700-0001-018 INTRINSICALLY SAFE SENSING ELEMENT		
$\top$	_			T	П	_	1	П	$\exists$		700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT		
$\top$	T	$\top$		T	П	_	2	П	7		700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT		
T	T	$\top$		Т			3	П	7		700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT		
Г	╗		$\Box$				4				700-0202-002 INTRINSICALLY SAFE SENSING ELEMENT		
oxdot	J		$oxed{oxed}$				5		J		700-0202-043 INTRINSICALLY SAFE SENSING ELEMENT		
	J					_	6				700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT		
						_	7	П			700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT		<u> </u>
						_	8				700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT		
							9	Ш	_		700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT		
$\perp$				_		2	_	Ш	_		700-0209-002 INTRINSICALLY SAFE SENSING ELEMENT		
$\perp$	4			_		_	1	Ш	_	_	700-0029-001 INTRINSICALLY SAFE SENSING ELEMENT		
+	_	_	_	_	$\Box$		2	Ш	_	_	700-0029-002 INTRINSICALLY SAFE SENSING ELEMENT		
₩	_		-	+	Н	$\overline{}$	3	Н	4	_	700-0029-003 INTRINSICALLY SAFE SENSING ELEMENT		
$\perp$	-	4	+	+	-	_	4	Н	4	+	700-0029-004 INTRINSICALLY SAFE SENSING ELEMENT		
+	$\dashv$	$\perp$	+	+	$\dashv$	_	5	Н	$\dashv$	+	700-0029-005		
+	$\dashv$	+	+	+	$\dashv$	5	1	Н	$\dashv$	_	700-0207-001		
+	$\dashv$	+	+	+	$\dashv$	_	2	Н	$\dashv$	+	700-0207-002 INTRINSICALLY SAFE SENSING ELEMENT		
+	$\dashv$	+	+	+	$\dashv$		3	Н	$\dashv$	_	700-0207-004 INTRINSICALLY SAFE SENSING ELEMENT		
+	$\dashv$		+	+	$\dashv$	_	4	Н	$\dashv$	-	700-0207-005 INTRINSICALLY SAFE SENSING ELEMENT		
+	$\dashv$	+	+	+	$\dashv$		5	Н	$\forall$	+	700-0207-006 INTRINSICALLY SAFE SENSING ELEMENT		
+	$\dashv$	$\top$	$\top$	+	$\dashv$	6		Н	$\dashv$	$\top$	700-0204-038 INTRINSICALLY SAFE SENSING ELEMENT		
$\top$	寸			T		6	1	П	$\exists$		700-0204-002		
$\top$					П	6	2	П	T		700-0204-048		
$\top$						Z	z				SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENS	ING ELEMENTS	
$\Box$							$\neg$			f	f = A-F, G, H, J, K, L OR Z		
											INSERTION LENGTH/COTE SHIELD LENGTH		
										A	6"/2" & 152.4mm/50.8mm		
										В	12"/2" & 304.8mm/50.8mm		COPYRIGHT 2009
										C	12"/3.5" & 304.8mm/88.9mm		AMETEK DREXELBROOK
$\perp$	J		$\perp$	Ĺ		_[	_[	Ц	J	D	18"/2" & 457.2mm/50.8mm		SCALE_NONE
$\perp$			$\perp$		Ц		1	Ц		E	18"/3.5" & 457.2mm/88.9mm		UNLESS OTHERWISE STATED
$\perp$	Ц				Ц		_	Ш	_[	F	18"/10" & 457.2mm/254mm		ALL DIMENSIONS IN INCHES (MM:
$\perp$		$\perp$	$\perp$	_	Ц	$\perp$	4	Ш	_	G	18"/NO CSL & 457.2mm		DR. JJS 1-14-09
$\perp$	4		$\perp$		Ц	$\perp$	4	Ш	_	H	36"/10" & 914.4mm/254mm		<u>LEP 5-18-09</u>
+	_	$\perp$	$\perp$	_	Ц	$\perp$	4	Н	_	J	36"/NO CSL & 914.4mm	CERTIFIED	
+	4	$\vdash$	+	_	Ц	$\perp$	4	Н	_	K	48"/10" & 1219.2mm/254mm	P0 #	
+	_	4	$\perp$	_	Ц	$\perp$	4	Н	_	L	60"/10" & 1524mm/254mm	ENG	
$\bot$	_		$\perp$	_			4	Ш	_	Z	OTHER	USER	
+	_	_	+	₩	Н	_	4	Н	4	1	18"/6" & 457.2mm/152.4mm	-	
$\perp$										2	12"/6" & 304.8mm/152.4mm		
	_											DE #	
7		11-	-80-	114	.	8	G/	١.	3	-17-		NEMKO/ATE	(_APPROVED
6	Τ	3-0	08-1	06		5	G/	\ <u> </u>	3	-10-	AMETEK®	2-WIRE IN	ELLIPOINT
	+					_		_	_			MODEL NUMBE	KING SYSIEM
5	L	5-0	)7-1	11		Ľ	HF	_	_5	-14-	THEXELBROOK	( REM	
_	-		16 2	16		1	HF	, _	2	-17-	06   DULVERDUOOK	SIL S	191FW2
4		1-0	JU-2	10		,							
4 SS.	<u> </u>	1-( DO			_		•	ם' ם		DA	205 KEITH VALLEY RD 215-674-1234 HDRSHAM, PA 19044-9986 FAX 215-674-273	420-0004-17	sнт. 7 ISS 75-CD of 7

#### 6.3 CSA Control Drawings

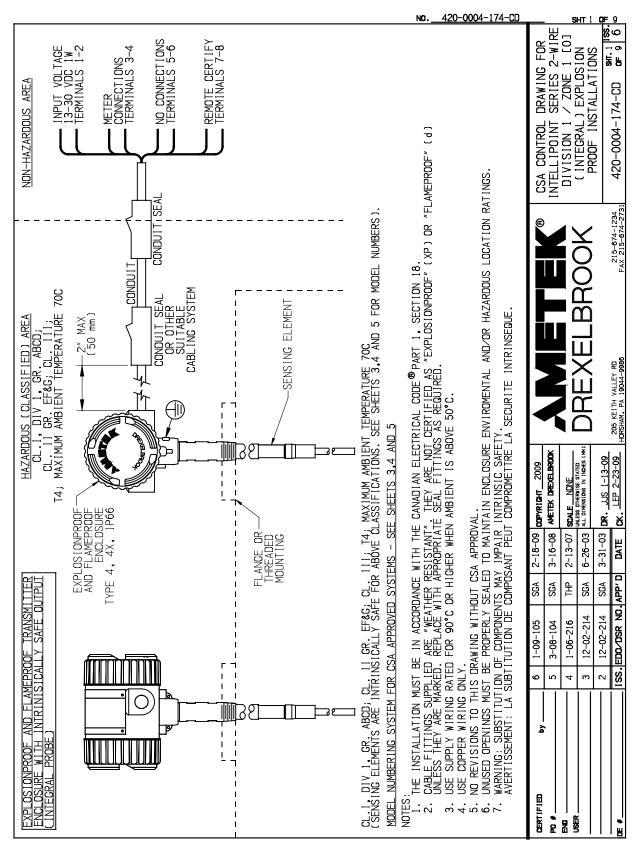


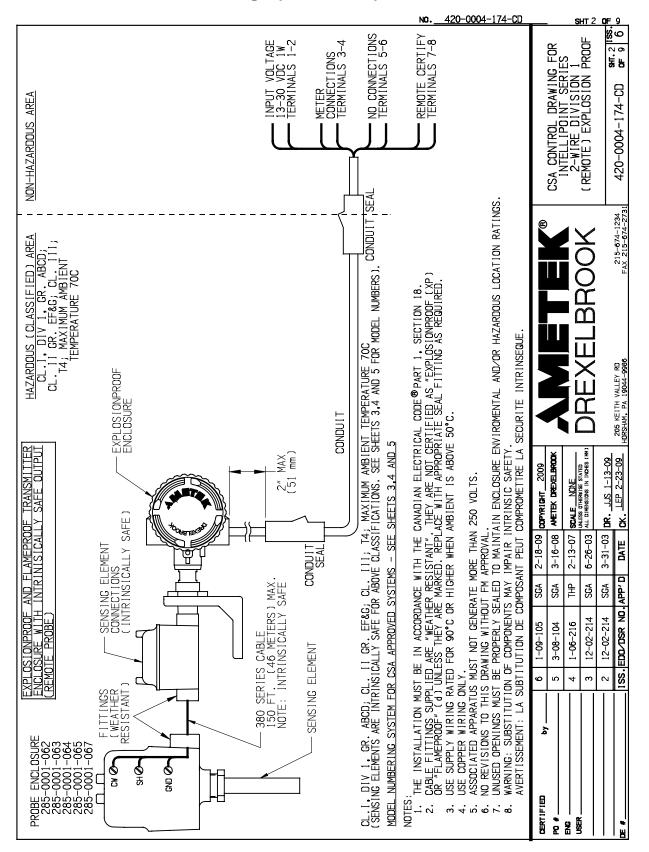


1	2	3	4	5	6	7	8	9	10	11	12	<del></del>		
R	а		b			0		*	_	+	d			
	а											a = OPTIONS		
	N											NO CALIBRATION POINT LEVEL		
	М											MANUAL SETPOINT ADJUSTMENT		
	Н											HI SENSITIVITY		
	G											HI SENSITIVITY MANUAL SETPOINT A	DJUSTMENT	
	L											STANDARD AUTO CAL		
	Τ											10pf AUTO CAL		
	٧											10pf FIXED		
	Р											HI SENSITIVITY .5pf FIXED		
			b									b = OPTIONS (6)		
			4									(STD)		
			8									DUAL SEAL		
			С									DUAL SEAL		
							С					c = 0-3		
												SENSING ELEMENTS		
							0					700-1202-021		
							1					700-1202-022		
							2					700-1202-024		
							3					700-1202-028		
								*	*	*		SEE MOUNTING CHART		
											d	d = A-F, H, K, L OR Z		
												INSERTION LENGTH/COTE SHIELD LENGT	TH	
											Α	6"/2" & 152.4mm/50.8mm		
											В	12"/2" & 304.8mm/50.8mm		
			_								C	12"/3.5" & 304.8mm/88.9mm		
											D	18"/2" & 457.2mm/50.8mm		
			_					_			E	18"/3.5" & 457.2mm/88.9mm		
		_	_					_		_	F	18"/10" & 457.2mm/254mm		
									-		G	18"/NO CSL & 457.2mm/NO CSL		
			_					_		_	Н	36"/10" & 914.4mm/254mm		
											J	36"/NO CSL & 914.4mm/NO CSL		COPYRIGHT 2009
			_					_		-	K	48"/10" & 1219.2mm/254mm		AMETEK DREXELBROOK
	_	_	-					+		_	7	60"/10" & 1524mm/254mm OTHER		SCALE NONE
	_		-					-			-			UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
	_	_	_								1	18"/6" & 457.2mm/152.4mm		DR. JJS 1-13-09
											2	12"/6" & 304.8mm/152.4mm		CK. LEP 2-23-09
													CERTIFIED	by
													PO # ENG	
													USER	
												<b> </b> -		
	_				_		_			_	_		E#	
6	$\perp$	1-0	09-1	05	$\downarrow$	SC	SA.	2-	18-	09		<b>AMETEK®</b>	CSA_API	PROVED
5	$\perp$	3-0	08-1	04	$\perp$	SC	GA.	3-	16-	08	ĺ		INTELL IPOIN	NT 2-WIRE
4		1-0	<b>06−</b> 2	16		TH	₽	2-	13-	07		DREXELBROOK I	MODEL NUMBEF INTEGRAL	
3		12	-02-	214		SC	SA_	6-	26-	03				SUT 2 ISS.
ISS	<u>.</u>	EDO.	/DSI	R N	0.	API	ם יפ		DAT	E	20	5 KEITH VALLEY RD 215-674-1234 SHAM, PA 19044-9986 FAX 215-674-2731	420-0004-174	-CD <b>o</b> F 9 6

			Т	Т	T		OL	.UN	/NS	S 9 AND UP DO	NOT AFFECT SAFETY		
1 2					8	(	10	11	12				
Ra	_	ь	c Z	l d	е		* *	*	f				
0		$\sqcup$	1	+	-	1	+		Н	a = OPTIONS	ATION		
N M	_	-	+	+	+	₩	+	$\vdash$	Н	NO CALIBE			
H		$\dashv$	+	+	+	#	+	+	Н	MANUAL SE HI SENSI			
G			$\top$			ľ	$\perp$		П		IVITY MANUAL SETPOINT		
L			I	T			I			STANDARD	AUTO CAL		
T	_	Щ	1	1	_	$\prod$	$\perp$	L	Ц	10pf AUTO			
P		$\dashv$	+	+	+	#	+	_	Н	10pf FIXE	D IVITY .5pf FIXED		
H	Н	ь	+	+	+	#	+	+	Н	b = OPTIONS			
$\Box$	П	4	$\top$			ľ	$\perp$		П	(STD)			
		8								DUAL SEAL			
Щ		Щ	С	Ψ.	1	Щ.	+	_	Н		( - CABLE OPTIONS (REMOTE)		
H	H	+	+	d	e	╫	+	+	Н		6, OR Z SENSING ELEMENTS  , OR Z SENSING ELEMENTS		
$\vdash$	H	$\dashv$	+	+	-	╫	+	+	Н	SENSING ELEMENT			
П	T	Ħ	$\top$	10	0	Ħ	T	T		700-1202-001	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
					1					700-1202-012	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
Щ		$\Box$		L	2			L		700-1202-014	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
Н	L	-	4	+	3		+	-		700-1202-018	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
+	Н	$\mathbb{H}$	+	+	6	-	+	+		700-1202-041 700-1202-031	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
$\vdash$	H	+	+	+	7	-	+	+	-	700-1202-031	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
	Π		_	T	9	-	İ	İ	_	700-1202-033	FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U		
			I	1	-	-	I			700-0001-018	INTRINSICALLY SAFE SENSING ELEMENT		
Щ	П	Щ	Ţ	Ţ	1		$\perp$	L		700-0201-005	INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	H	$\mathbb{H}$	+	+	2		+	$\vdash$		700-0201-005 HA			
+	H	+	+	+	4		+	+		700-0201-036 700-0202-002	INTRINSICALLY SAFE SENSING ELEMENT INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	Н		+	$^{+}$	5		$^{+}$	+	-	700-0202-043	INTRINSICALLY SAFE SENSING ELEMENT		
П	П	Ħ	1	T	6	-	$\top$			700-0002-360	INTRINSICALLY SAFE SENSING ELEMENT		
		П		I	7					700-0202-036	INTRINSICALLY SAFE SENSING ELEMENT		
Н	H	-	4	+	8	-	+	-	_	700-0001-022	INTRINSICALLY SAFE SENSING ELEMENT		
Н	H	+	+	+,	9	-	+	+	_	700-0002-023 700-0209-002	INTRINSICALLY SAFE SENSING ELEMENT INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	H	-	+		1		+	H		700-0209-002	INTRINSICALLY SAFE SENSING ELEMENT		
П	П	Ħ	1	Ť	2		T	T	_	700-0029-002	INTRINSICALLY SAFE SENSING ELEMENT		
				I	3	-			_	700-0029-003	INTRINSICALLY SAFE SENSING ELEMENT		
ш	L	4	_	+	4	-	$\perp$	L	_	700-0029-004	INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	H	+	+	+	5		+	┝		700-0029-005 700-0207-001	INTRINSICALLY SAFE SENSING ELEMENT INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	H	+	+	۲	1	-	+	H		700-0207-001	INTRINSICALLY SAFE SENSING ELEMENT		
П	T	_	1	T	2		T	T		700-0207-003	INTRINSICALLY SAFE SENSING ELEMENT		
					3					700-0207-004	INTRINSICALLY SAFE SENSING ELEMENT		
Щ		Щ	4	$\perp$	4		4	_		700-0207-005	INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	H	+	+	-	5	-	+	╀	_	700-0207-006 700-0204-038	INTRINSICALLY SAFE SENSING ELEMENT INTRINSICALLY SAFE SENSING ELEMENT		
$\vdash$	H	+	+	۲	1	-	+	H	_	700-0204-038	INTRINSICALLY SAFE SENSING ELEMENT		
	Т		_	t	2	-	Ť	T		700-0204-048	INTRINSICALLY SAFE SENSING ELEMENT		
				Z	. Z		I			SEE SHEET 4 FOR	ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING ELEMENTS		COPYRIGHT 2009
Щ	Г	П	Ţ	I	Γ	Ţ.	Γ	Г	f	f = A-F, H,			AMETEK DREXELBROOK
$\vdash$	H	$\dashv$	+	+	+	#	+	$\vdash$	H		NGTH/COTE SHIELD LENGTH		
+	Н	+	+	+	+	+	+	+	A B	6"/2" & 152 12"/2" & 30-			SCALENONE
$\vdash$	H		+	$^{+}$	$^{\dagger}$	$^{\dagger}$	$^{+}$	$^{\dagger}$	C		04.8mm/88.9mm		UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
口	I		#	İ	T		İ	T	D	18"/2" & 45			DR. JJS 1-13-09
			$\top$	$\top$			I		Ε		57.2mm/88.9mm		LEP 2-23-09
Щ	П	Щ		F	F	1	Ţ	F	F		7.2mm/254mm	- Continue	UK
$\vdash$	$\vdash$	$\dashv$	+	+	+	#	+	$\vdash$	G		457.2mm/ND CSL	CERTIFIED	by
$\vdash$	Н	+	+	+	+	╫	+	+	H	36"/10" & 9	4.4mm/254mm 914.4mm/ND CSL	P0 #	
$\vdash$	Н	+	+	+	+	#	+	+	K		19.2mm/254mm	ENG	
	T		⇈		T		İ		L	60"/10" & 1		USER	
									Z	OTHER		]	<u> </u>
Щ	$\Box$	$\prod$	_[	1	Ļ	μĺ	1	F	1		.2mm/152.4mm		
ᆣ	$\perp$		_	_	_	Ш	_	_	2	12"/6" & 30-	.8mm/152.4mm	DE #	
6	Т	1_	-09-	-10	5	_		SG	Δ	2-18-09			
├	$\dashv$						⊢				<b>AMETEK</b> ®	CSA AF	PROVED
5		3-	-08	-10	4		L	SG	4	3-16-08			TELL I PO I NT
4	Т	1-	-06-	-21	6			TH	,	2-13-07	•	MONET NOWBE	ERING SYSTEM \$\frac{\pi}{2}\$
H	$\dashv$			_	_		⊢				DREXELBROOK	I REN	
3		12	?-02	<u>-2</u>	:14	_	L	SG	٩	6-26-03			4 CD SHT. 4 ISS.
ISS	. [	EDC	1/0	SR	N	٥.	A	PP	<b>′</b> D	DATE HO	05 KEITH VALLEY RD 215-674-1234 SHAM. PA 19044-9986 FAX 215-674-273	420-0004-17	4-CD <b>o</b> = 9 6   4
				_	-		_		_	, no	TAX 213-074-273	1	

MODEL NUMBERS OF APPROVED INTRINSICALLY SAFE SENSING ELEMENTS 700-mnop-qrs-t LEVEL PROBE m = FAMILY NO. O THROUGH 9, BLANK n = FAMILY NO. O THROUGH 9, BLANK o = 0 THROUGH 9, BLANK p = 0 THROUGH 9 q = FAMILY NO. O THROUGH 9, BLANK = FAMILY NO. O THROUGH 9, BLANK s = FAMILY NO. 0 THROUGH 9 t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY COPYRIGHT 2009 AMETEK DREXELBROOK SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM DR. JJS 1-13-09 CK. LEP 2-23-09 CERTIFIED PO # ENG USER 1-09-105 SGA 2-18-09 CSA APPROVED
ADDITIONAL INTRINSICALLY
SAFE SENSING ELEMENTS 3-08-104 SGA 3-16-08 4 1-06-216 THP 2-13-07 ( REMOTE ) 3 12-02-214 SGA 6-26-03 янт. 5 ISS. 9 ог 9 6 Ф 420-0004-174-CD ISS. EDO/DSR NO. APP'D DATE

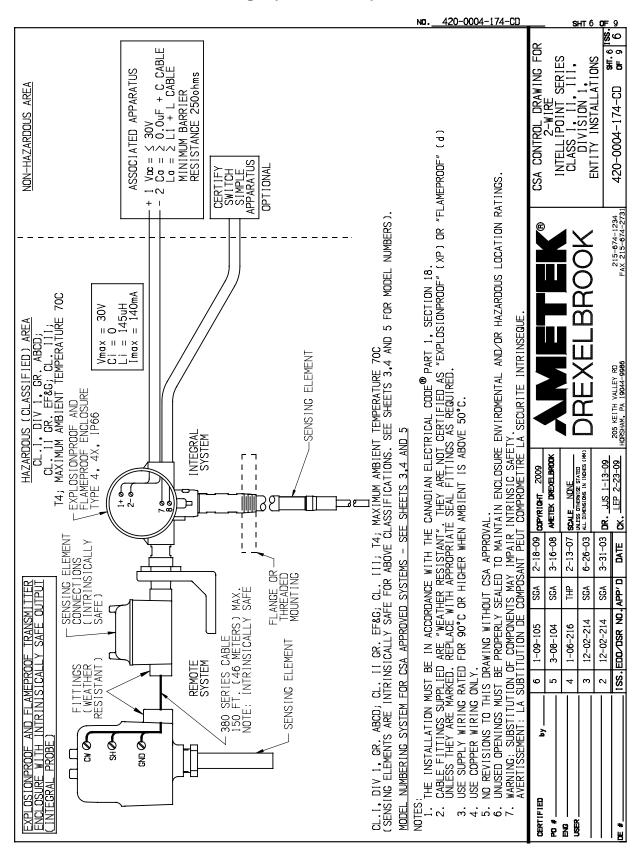


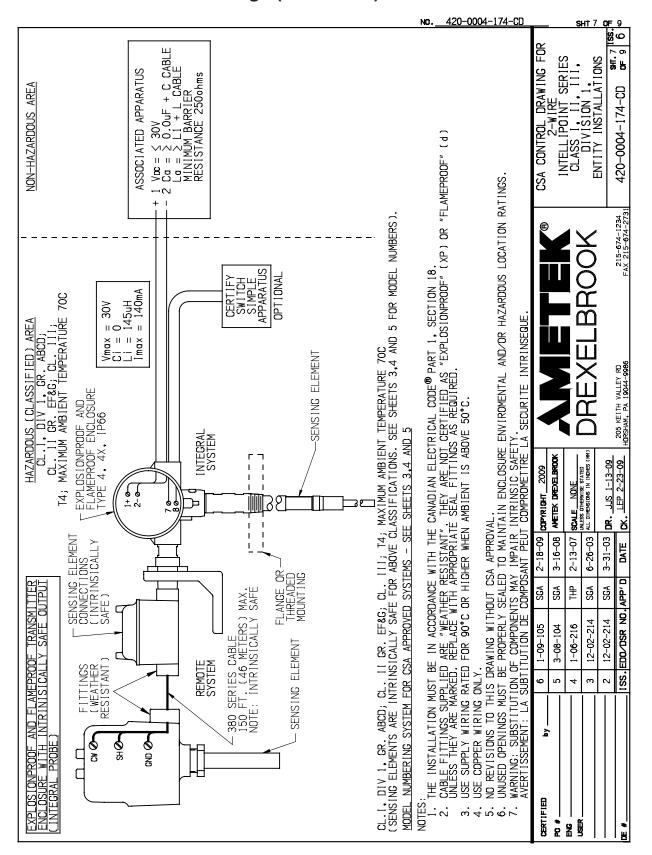


1	2	3	4	5	6	7	8	9	10	11	12	13	14	
S	_	R	b	T	c	0	_	0	_	*		*	e	
	a	1		_		+			u		<u> </u>		U	a = SIL LEVEL 1 OR 2
	u		b											b = OPTIONS
			N		$\dashv$									NO CALIBRATION POINT LEVEL 2pF FIXED
			1 1		_									STANDARD AUTO CAL 2pF AUTO
			_		С									c = OPTIONS 6
					4									(STD)
					8									DUAL SEAL
					c									DUAL SEAL
					-									3/4" NPT CSA SYSTEMS
					$\dashv$				d					d = 0-3
					$\dashv$				u					SENSING ELEMENTS
					$\dashv$				0					700–1202–021
					$\dashv$				1					700-1202-021
					$\dashv$				2					700-1202-024
					$\dashv$				3					700-1202-024
					$\dashv$					*	*	*		SEE MOUNTING CHART
					$\dashv$					-			е	e = A-F, H, K, L OR Z
					$\dashv$								Ç	INSERTION LENGTH/COTE SHIELD LENGTH
					_								Α	6"/2" & 152.4mm/50.8mm
													В	12"/2" & 304.8mm/50.8mm
					$\dashv$								C	12"/3.5" & 304.8mm/88.9mm
					_								D	18"/2" & 457.2mm/50.8mm
					$\dashv$								E	18"/3.5" & 457.2mm/88.9mm
													F	18"/10" & 457.2mm/254mm
													G	18"/NO CSL & 457.2mm/NO CSL
													Н	36"/10" & 914.4mm/254mm
													J	36"/NO CSL & 914.4mm/NO CSL
													K	48"/10" & 1219.2mm/254mm
													L	60"/10" & 1524mm/254mm
													Ζ	OTHER -
													1	18"/6" & 457.2mm/152.4mm COPYRIGHT 2009  AMETEK DREXELBROOK
													2	12" /6" 8 304 8mm / 152 /mm
														SCALE NONE  ALE DIPHENSE STATED  ALL DIPHENSIONS IN INDEES (MH)
														DR. JJS 1-14-09
														CK. LEP 2-23-09
														CERTIFIED by
														PO # ENG
														USER
6		1-0	9-1	05	Т	SGA		2-18	8-09	Т		A		CCA ADDDOVED
5	$\dagger$	3-0			T	SGA	-		5-08	-1	4	X		INTELLIPOINT 2-WIRE
4	$\top$	1-0	6-2	16	$\top$	THP	1	2-13	3-07	1	f	- <b>1</b>	71	INTECDAL CYCTEMS
3	$\dagger$	12-			$\dagger$	SGA	+		5-03	-1	L	ノt	٦t	
ISS	-	:DO/	DSF	NC.		PP'	D	D/	ATE	ا ا	205 K	EITH	VALL	EY RD 215-674-1234 4-9986 FAX 215-674-2731 420-0004-174-CD <b>о</b> г 9 6

1 2 3 4 5 6 S a R b T c			INS 11 AND UP DO NOT AFFECT SAFETY		
C   a   D   L   T   a   I					
	d 4 e f *	* *			
a	++++	-	a = SIL LEVEL 1 OR 2		
N N	++++		b = OPTIONS		
	++++	-	NO CALIBRATION 2pF FIXED STANDARD AUTO CAL 2pF AUTO		
l c	<del>-   -   -   -  </del>		c = OPTIONS 6		
1 4 1	<del>                                     </del>		(STD)		
8 1	<del>                                     </del>		DUAL SEAL		
	d		d = 1-9, A-K - CABLE OPTIONS (REMOTE)		
	e		e = 0-3, 5, 6, OR Z SENSING ELEMENTS		
	f		f = 0-6, & 8, OR Z SENSING ELEMENTS		
$\longrightarrow$			SENSING ELEMENTS		
<del></del>	0 0		700-1202-001 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2		
<del></del>	1 2	-	700-1202-012 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2. 700-1202-014 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2.		
<del>-                                     </del>	3	$\vdash$	700-1202-014 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2 700-1202-018 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2		
<del>                                     </del>	4	$\vdash$	700-1202-041 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2		
<del>                                     </del>	6		700-1202-031 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2		
<del>                                     </del>	7		700-1202-010 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2		
	9		700-1202-033 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2		
	1 0		700-0001-018 INTRINSICALLY SAFE SENSING ELEMENT		
	1		700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT		
+++++	2	$\vdash$	700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT		
<del>                                     </del>	3	$\vdash$	700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT		
<del>++++</del>	5	$\vdash$	700-0202-002   INTRINSICALLY SAFE SENSING ELEMENT   700-0202-043   INTRINSICALLY SAFE SENSING ELEMENT		
<del>+++++</del>	6	$\vdash$	700-0202-043 INTRINSTCALLY SAFE SENSING ELEMENT		
++++	1 7 7	$\vdash$	700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT		
<del>                                     </del>	8		700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT		
<del>                                     </del>	9		700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT		
	2 0		700-0209-002 INTRINSICALLY SAFE SENSING ELEMENT		
	3 1		700-0029-001 INTRINSICALLY SAFE SENSING ELEMENT		
	2		700-0029-002 INTRINSICALLY SAFE SENSING ELEMENT		
++++++++++++++++++++++++++++++++++++	3		700-0029-003 INTRINSICALLY SAFE SENSING ELEMENT		
<del></del>	4		700-0029-004 INTRINSICALLY SAFE SENSING ELEMENT		
<del></del>	5 0	-	700-0029-005 INTRINSICALLY SAFE SENSING ELEMENT 700-0207-001 INTRINSICALLY SAFE SENSING ELEMENT		
<del></del>	1 1	-	700-0207-001 INTRINSICALLY SAFE SENSING ELEMENT		
<del>                                     </del>	2		700-0207-002 INTRINSICALLY SAFE SENSING ELEMENT		
<del>                                     </del>	3		700-0207-004 INTRINSICALLY SAFE SENSING ELEMENT		
	4		700-0207-005 INTRINSICALLY SAFE SENSING ELEMENT		
	5		700-0207-006 INTRINSICALLY SAFE SENSING ELEMENT		
	6 0		700-0204-038 INTRINSICALLY SAFE SENSING ELEMENT		
	1		700-0204-002 INTRINSICALLY SAFE SENSING ELEMENT		
	2		700-0204-048 INTRINSICALLY SAFE SENSING ELEMENT		
<del></del>	Z   Z	-	SEE SHEET 4 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING EL	EMENTS	
<del></del>	++++	$\vdash$	g = A-F, H, K, L OR Z INSERTION LENGTH/COTE SHIELD LENGTH	1	
<del>                                     </del>	<del>-   -   -   -   -   -   -   -   -   -  </del>		A 6"/2" & 152.4mm/50.8mm		COPYRIGHT 2009
<del>                                     </del>	<del>                                     </del>	+	B 12"/2" & 304.8mm/50.8mm		ametek drexelbrook
<del>                                     </del>	<del>                                     </del>	$\vdash$	C 12"/3.5" & 304.8mm/88.9mm		COME NOME
			D 18"/2" & 457.2mm/50.8mm		SCALE NONE UNLESS OTHERWISE STATED
		Ш	E 18"/3.5" & 457.2mm/88.9mm		ALL DIMENSIONS IN INCHES (MM)
			F 18"/10" & 457.2mm/254mm		DR. <u>JJS 1-13-09</u>
$\Box$		$\sqcup \Box$	G 18"/NO CSL & 457.2mm/NO CSL		CK. LEP 2-23-09
+++++	++++	$\vdash$	H 36"/10" & 914.4mm/254mm	CERTIFIED	by
<del>                                     </del>	++++	$\vdash$	J 36"/NO CSL & 914.4mm/NO CSL	P0 #	•
++++	++++	$\vdash$	K 48"/10" & 1219.2mm/254mm	ENG	
<del>                                     </del>	++++	$\vdash$	L  QU"/1U" & 1524mm/254mm	USER	
<del>                                     </del>	<del>                                     </del>	++	1 18"/6" & 457.2mm/152.4mm		
<del>                                     </del>	<del>                                     </del>	+	2 12"/6" & 304.8mm/152.4mm		
			•		
		_		E #	
6 1-09-10	5 SGA	2-	·18-09	CSA APF	PROVED
5 3-08-10	4 SGA	٦.		2-WIRE INT	ILIO OVOTELI
		+		MODEL NUMBER	KING SYSTEM
4 1-06-21	6 THP	2-	DREXELBROOK I	( REMO	
	214 SGA	6-	26-03 DULLEDUOUN L	SIL SY	3 I LI13
3   12-02-2	אטכן דו.				
3 12-02-2		+	205 KEITH VALLEY RD 215-674-1234 HORSHAM, PA 19044-9986 FAX 215-674-2731	420-0004-174	


#### 6.4 Mounting and Wiring for Spark Protector Drawings

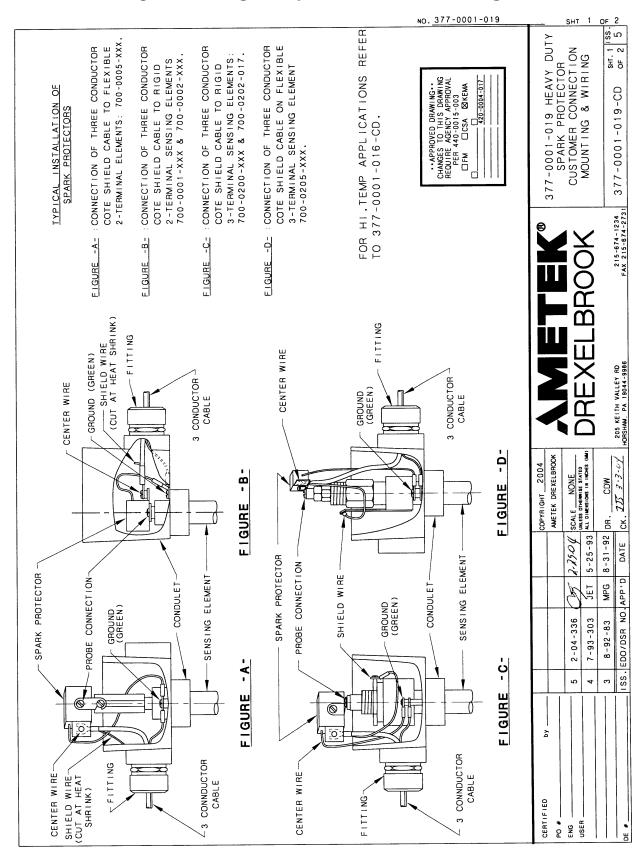

### 6.4 Mounting and Wiring for Spark Protector (Continued)

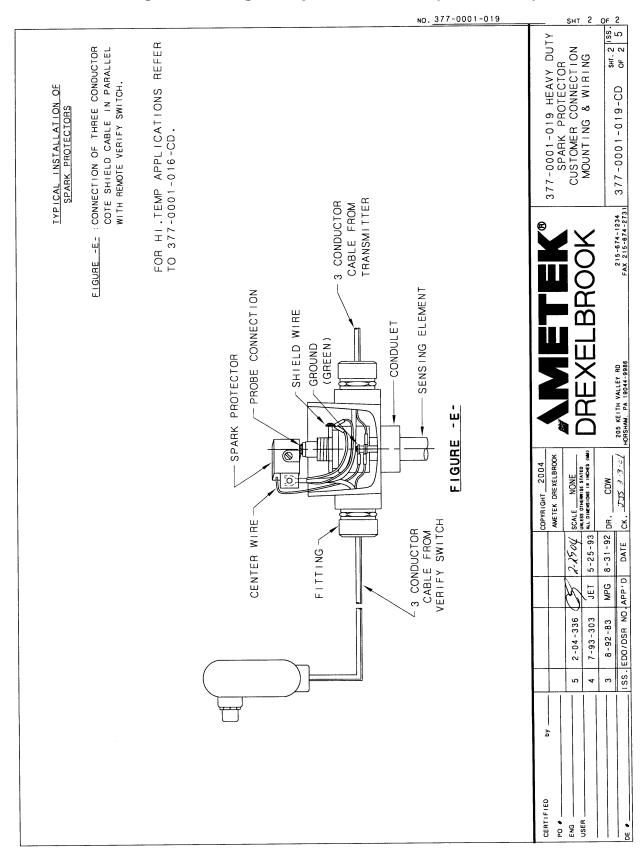


#### 6.4 Mounting and Wiring for Spark Protector (Continued)

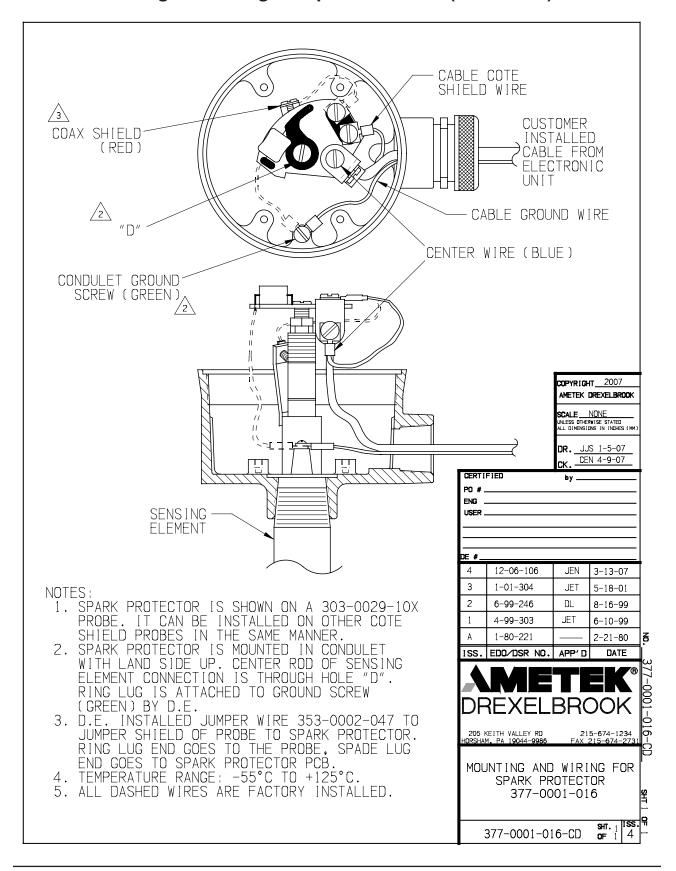

### 6.5 Adding a Padded Capacitor

Adding a radded eapaoner	
	NO. <u>330-0009-022-CD</u> SHT 1 OF 3
ADDING A PADDED CAPACITOR:  THE TUNING RANGE OF EACH POINT LEVEL SWITCH IS LIMITED. LONG INSERTION LENGTH SENSING ELEMENTS OR SENSING ELEMENTS MOUNTED IN PIPES OR NEAR METAL OBJECTS MAY GENERATE ENOUGH STANDING CAPACITANCE TO EXCEED THE THE TUNING RANGE OF THE SWITCH.  THE ADDITION OF AN EXTERNAL PADDING CAPACITOR WILL INCREASE THE TUNING RANGE OF THE UNIT. TUNING RANGES AND EXAMPLES OF INCREASES CAN BE FOUND FOR EACH TYPE OF POINT LEVEL ELECRONIC SWITCH ON SHEET THREE.  WHEN A PADDING CAPACITOR IS REQUIRED, AN NPO CAPACITOR SHOULD BE ADDED TO THE PADDING TERMINALS AS INDICATED ON SHEET 2. ADDITIONAL PADS CAN BE ADDED IN PARALLEL IF PADDING IS IN EXCESS OF THE MAXIMUM RECOMMENDED TUNING RANGE CANNOT BE REACHED.  TABLE ON SHEET 3, PLEASE CONTACT THE FACTORY SERVICE DEPARTMENT.	RS ATTACH THE LEADS UNDER SCREWS.  COPPRIGHT 2005  METER GREEK BROWN  AND STATE NOW FOR THE LEADS ON THE LEADS ON THE LEADS ON THE LEADS ON THE LEADS ON THE LEADS ON THE LEADS ON THE LEADS ON THE CONTROL ON THE CONTR


### 6.5 Adding a Padded Capacitor (Continued)

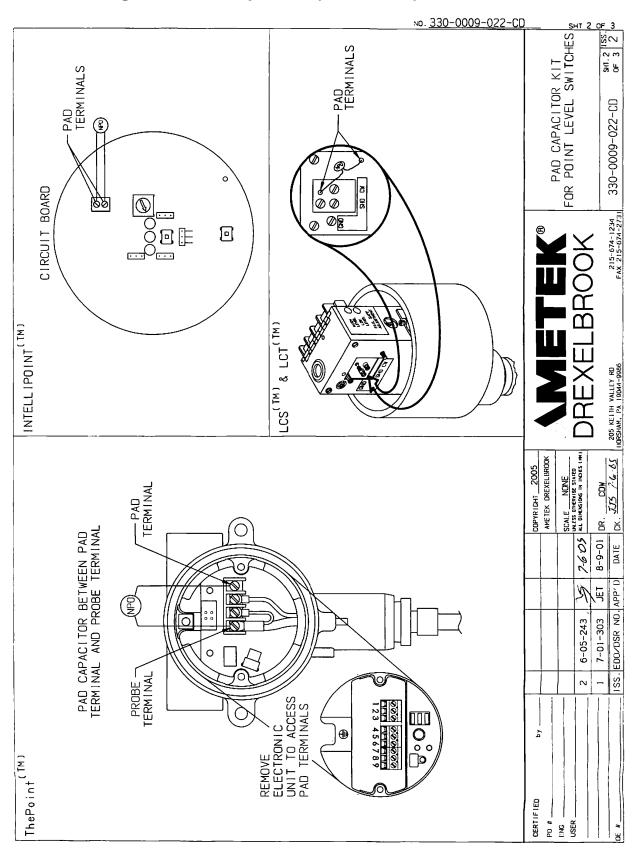


# 6.5 Adding a Padded Capacitor (Continued)

tuning range	50 to 75pF	120 to 180pF	50 to 75pF	120 to 180pF	50 to 75pF	200 to 300pF	16 to 24pF	180 to 270pF	16 to 24pF	180 to 270pF	AD CABACITOR K	FOR POINT LEVEL SWITCHES
Padding Example	Adding a 10pF cap will change the range to 3pF to 28pF	Adding a 10pF cap will change the range to 3pF to 63pF	Adding a 10pF cap will change the range to 10 to 35pF	Adding a 10pF cap will change the range to 10 to 70pF	Adding a 10pF cap will change the range to 43pF to 68pF	Adding a 10pF cap will change the range to 43pF to 143pF	Adding a 10pF cap will change the range to 10 to 18pF	Adding a 10pF cap will change the range to 30 to 120pF	Adding a 10pF cap will change the range to 10 to 18pF	Adding a 10pF cap will change the range to 30 to 120pF	(1)	
Padding Ratio	1:3	52	=	Ξ.	4.33:1	4.33:1	Ξ:	3:1	Ξ	3:1		
Un-padded Tuning Range	0 to 25pF	0 to 60pF	0 to 25pF	0 to 60pF	0 to 25pF	0 to 100pF	0 to 8pF	0 to 90pF	0 to 8pF	0 to 90 pF	25 00x	
Model Numbers	PHL, PPL, PGL	PNL, PLL, PTL, PVI, PML	PHT, PPT, PGT	PNT, PLT, PTT, PVT, PMT	RHL, RPL, RGL RHT, RPT, RGT	RNL, RLL, RTL, RVL, RML RNT, RLT, RTT, RVT, RMT	406-6020, 406-6022	406-6000, 406-6002	406-6220, 406-6222	406-6200, 406-6202	COPYRIGHT 2005 AMETEK DREXELBROOK	SCALE NONE SCALE NONE STATE ALL DIRESTORS IN INDES INTO
Sensitivity	High	Standard	High	Standard	High	Standard	High	Standard	High	Standard		6-05-243
PRODUCT	ThePoint <sup>TM</sup> Line Powered	ThePoint™ Linc Powered	ThePoint <sup>TM</sup> Two Wire	ThePoint <sup>TM</sup> Two Wire	Intellipoint <sup>TM</sup> (Line Powered and Two Wire)	Intellipoint <sup>TM</sup> (Line Powered and Two Wire)	rcs	CCS	LCT	LCT	by	2

#### 6.6 Dual Seal Assembly for 700 Series Sensing Elements

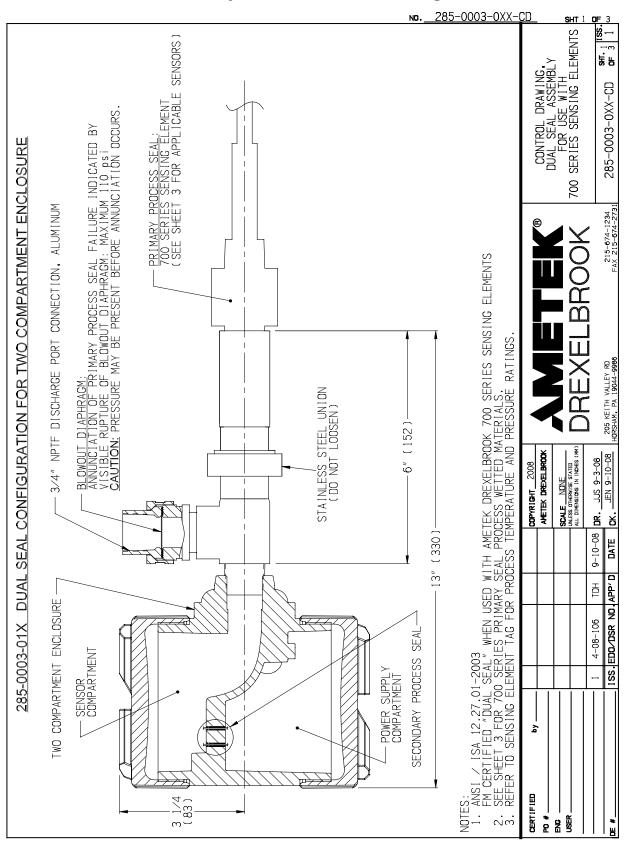

### 6.6 Dual Seal Assembly (Continued)

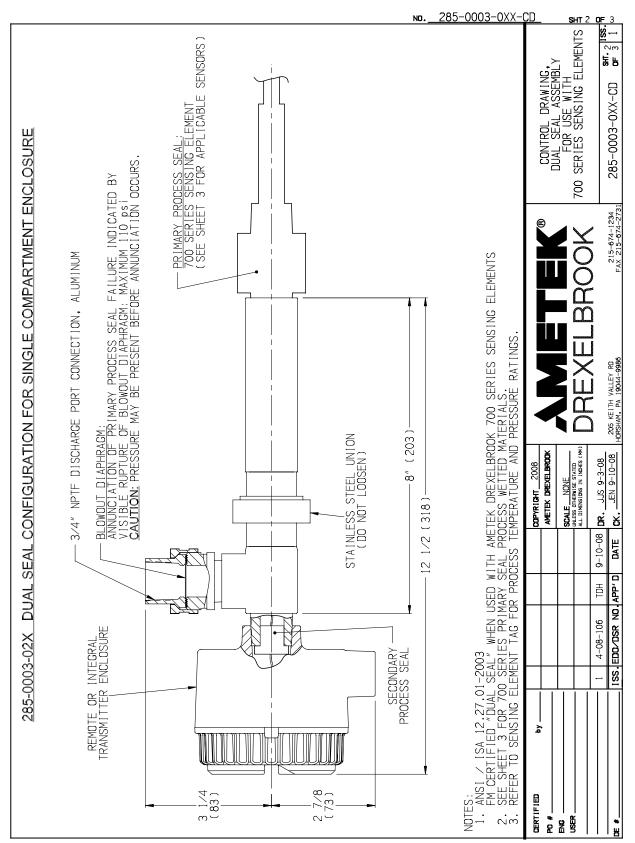

### 6.6 Dual Seal Assembly (Continued)

PRIMARY SEAL   WETTED   SEAL   WETTED   SEAL   WETTED   SEAL   WETTED   SEAL   WETTED   SEAL   WETTED   SEAL   WETTED   SEAL	### WETTED  ##WATERIALS    PRIMARY SEAN   WETTED
PRIMARY SEAL   MATERIALS   MATERIALS   MATERIALS   MATERIALS   MATERIALS   700-0002-054   FEP/TEV   700-1202-010   700-0002-054   FEP/TEV   700-1202-010   700-0002-054   FEP/TEV   700-1202-010   700-0002-054   700-1202-012   700-0002-054   700-1202-012   700-0002-054   700-1202-012   700-0002-054   700-1202-012   700-1202-013   700-0002-054   700-1202-023   700-1202-023   700-1202-023   700-1202-033   700-1202-033   700-1202-033   700-1202-033   700-1202-033   700-1202-033   700-1202-033   700-1202-033   700-1202-033   700-1202-034   700-1202-034   700-0201-056   700-1202-034   700-1202-041   700-0201-056   700-1202-041   700-1202-061   700-1202-041   700-0201-059   700-1202-041   700-1202-061   700-	### MATERIALS   PENMARY SEAN SEAN SEAN SEAN SEAN SEAN SEAN SEAN
PRIMARY SEAL   WETTED   WETT	######################################
PRIMARY SEAL   MATTED     MATTED     MATTERALS   T00-0002-054     TFE/316SS   T00-0002-054     TFE/316SS   T00-0002-321     316SS   T00-0002-321     TFE/316SS   T00-0201-025     TFE/316SS   T00-0201-025     TFE/316SS   T00-0201-025     TFE/316SS   T00-0201-025     TFE/316SS   T00-0201-055     TFE/316SS	# WETTED WETTED WETTED MATERIALS TEF/316SS TO0-0002-054 TO0-0002-057 TO0-0002-057 TO0-0002-224 TO0-0002-224 TO0-0002-321 316SS TO0-0002-321 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-025 TO0-0201-059 TO0-0201
PRIMARY SEAL   WETTED   WATERIALS   TFE/316SS   TFE/	# WETTED WETTED MATERIALS  TFE/316SS  TFE/31

#### Appendix A: SIL Declaration of Conformity





#### **SIL Declaration of Conformity**

Functional safety of level measuring device according to IEC 61508-2 1999

AMETEK Drexelbrook 205 Keith Valley Rd. Horsham Pennsylvania 19044

declares as manufacturer, that the level measuring device

#### Intellipoint RXTX Series

Is suitable for the use in a safety instrumented system for SIL 1(overfill protection) according to standard IEC61508-2, Sec. 7.4.3.1 1999, if the safety instructions are observed.

The data in this declaration provides the required hardware failure data and does not contain any software assessment required for the full functional safety requirements of IEC 61508

The third party FMEDA with analysis of the safety critical and dangerous faults provides, under the assumption of an annual functional test cycle the following parameters:

exida.com°

SIL (Safety Integrity level) :

HFT (Hardware Fault tolerance) : 0

SFF (Safe failure fraction) : 88.7

PFD<sub>avg (Fail to Danger)</sub> : 5.0 x 10<sup>-4</sup>

λ<sub>du</sub> (failure rate dangerous undetected faults) : 116 FIT

 $\lambda_{dd}$  (failure rate dangerous detected faults) : 605 FIT

 $\lambda_{su}$  (failure rate safe undetected faults) : 287 FIT

 $\lambda_{sd}$  (failure rate safe detected faults) : 17 FIT

Steven G. Arnold

AMETEK Drexelbrook

Quality Assurance & Product Safety Manager

July = 7, 2004

Date

420-0	0004-255	Sht. 1 of 1	APP'D BY SGA		
ISSUE	EDO NO.	APP'D	DATE		
1	5-04-213	SGA	5/27/04		
2	7-04-215	50+	7/29/64		

#### Appendix A: SIL Declaration of Conformity (Continued)



### **AMETEK**

#### **SIL Declaration of Conformity**

Functional safety of level measuring device according to IEC 61508-2 1999

AMETEK Drexelbrook

205 Keith Valley Rd. Horsham Pennsylvania 19044

declares as manufacturer, that the level measuring device

#### **Intellipoint RXTX Series**

Is suitable for the use in a safety instrumented system for **SIL 2** (overfill protection) according to standard IEC61508-2, Sec. 7.4.3.1 1999, if the safety instructions are observed.

The data in this declaration provides the required hardware failure data and does not contain any software assessment required for the full functional safety requirements of IEC 61508

The third party FMEDA with analysis of the safety critical and dangerous faults provides, under the assumption of an annual functional test cycle the following parameters:

exida.com°

SIL (Safety Integrity level) : 2

HFT (Hardware Fault tolerance) : 0

SFF (Safe failure fraction) : 93.2%

PFD<sub>avg (Fail to Danger)</sub> : 3.2 x 10<sup>-4</sup>

 $\lambda_{du}$  (failure rate dangerous undetected faults) : 73 FIT

 $\lambda_{dd}$  (failure rate dangerous detected faults) : 686 FIT

 $\lambda_{su}$  (failure rate safe undetected faults) : 300 FIT

 $\lambda_{sd}$  (failure rate safe detected faults) : 0 FIT


Steven G. Arnold AMETEK Drexelbrook

Quality Assurance & Product Safety Manager

July 27, 2009

420-0004-267		Sht. 1 of 1	APP'D BY SGA
ISSUE	EDO NO.	APP'D	DATE,
1	7-04-215	54	7/29/04
			, ,

#### Appendix B: CE Mark Declaration of Conformity

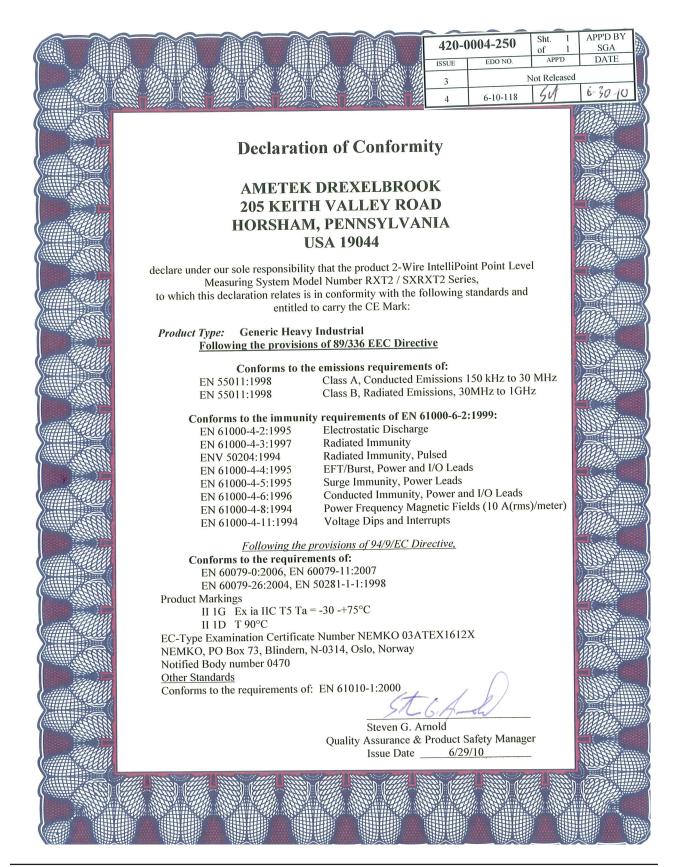

#### TERMS AND CONDITIONS OF SALE



GENERAL: ALL ORDERS ARE SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS. ANY ACCEPTANCE OF ANY OFFER OF BUYER FOR ANY GOODS OR SERVICES IS CONDITIONED UPON THESE TERMS AND CONDITIONS, AND SELLER OBJECTS TO ANY ADDITIONAL OR DIFFERENT TERMS PROPOSED BY BUYER IN ANY DOCUMENT, WHICH SHALL NOT BE BINDING UPON SELLER. No salesman or other party is authorized to bind the AMETEK DREXELBROOK Division of AMETEK, Inc. (hereinafter "Seller") by any agreement, warranty, statement, promise, or understanding not herein expressed, and no modifications shall be binding on Seller unless the same are in writing and signed by an executive officer of Seller or his or her duly authorized representative. Verbal orders shall not be executed until written notification has been received and acknowledged by Seller.

**QUOTATIONS:** Written quotations are valid for thirty (30) days unless otherwise stated. Verbal quotations expire the same day they are made.

PRICES: All prices and terms are subject to change without notice. Buyer-requested changes to its order ("Orders"), including those affecting the identity, scope and delivery of the goods or services, must be documented in writing and are subject to Seller's prior approval and adjustments in price, schedule and other affected terms and conditions. Orders requiring certified test data in excess of commercial requirements, are subject to a special charge.

**ORDER ACCEPTANCE:** All Orders are subject to final approval and acceptance by Seller at its office located at 205 Keith Valley Road, Horsham, Pennsylvania 19044.

**TERMS OF PAYMENT:** Seller's standard terms of payment for Buyers who qualify for credit are net thirty (30) days from date of invoice. All invoices must be paid in United States dollars.

CREDIT: Seller reserves the right at any time to revoke any credit extended to Buyer or otherwise modify terms of payment if Buyer fails to pay for any shipments when due or if in Seller's opinion there is a material adverse change in Buyer's financial condition. Seller may, at its option, cancel any accepted Order if Buyer fails to pay any invoices when due.

**DELIVERY:** Shipments are F.O.B place of manufacture ("Shipping Point") and the Buyer shall pay all freight, transportation, shipping, duties, fees, handling, insurance, storage, demurrage, or similar charges from Shipping Point. Delivery of goods to common carrier shall constitute delivery and passing of title to the Buyer, and all risk of loss or damage in transit shall be borne by Buyer. Any claims or losses for damage or destruction after such delivery shall be the responsibility of Buyer.

Seller reserves the right to make delivery in installments which shall be separately invoiced and paid for when due, without regard to subsequent deliveries. Delay in delivery of any installment shall not relieve Buyer of its obligation to accept remaining deliveries.

Acknowledged shipping dates are approximate only and based on prompt receipt of all necessary information from Buyer and Buyer's compliance with terms of payment.

TAXES: All sales, excise and similar taxes which Seller may be required to pay or collect with respect to the goods and/or services covered by any Order, shall be for the account of the Buyer except as otherwise provided by law or unless specifically stated otherwise by Seller in writing.

TERMINATION AND HOLD ORDERS: No Order may be terminated by Buyer except upon written request by Buyer and approval by Seller, and if said request is approved by Seller, under the following conditions: (1) Buyer agrees to accept delivery of all of the units completed by Seller through the workday on which Seller receives the written termination request; (2) Buyer agrees to pay to Seller all direct costs and expenses applicable to the portion of the Order that is incomplete.

#### WARRANTY

A. <u>Hardware</u>: Seller warrants its goods against defects in materials and workmanship under

normal use and service for one (1) year from the date of invoice.

B. Software and Firmware: Unless otherwise specified, Seller warrants for a period of one (1)

B\_SORWare and F-irmware: Unless otherwise specified, Seller warrants for a period of one (1) year from date of invoice that standard software or firmware, when used with Seller specified hardware, shall perform in accordance with Seller's published specifications. Seller makes no representation or warranty, expressed or implied, that the operation of the software or firmware shall be uninterrupted or error-free, or that functions contained therein shall meet or satisfy the Buyer's intended use or requirements.

C. Services: Seller warrants that services, including engineering and custom application,

- C. <u>Services</u>: Seller warrants that services, including engineering and custom application, whether provided on a fixed cost or time and material basis, shall be performed in accordance with generally accepted industry practices.
- D. Remedies: Seller's liability under this section is restricted to replacing, repairing, or issuing credit (at Seller's option) for any returned goods and only under the following conditions: (1) Seller must be promptly notified, in writing, as soon as possible after the defects have been noted by the Buyer, but not later than (1) year from date of invoice from Seller; (2) The defective goods are to be returned to the place of manufacture, shipping charges prepaid by the Buyer; (3) Seller's inspection shall disclose to its satisfaction that the goods were defective in materials or workmanship at the time of shipment; (4) Any warranty service (consisting of time, travel and expenses related to such services) performed other than at Seller's factory, shall be at Buyer's expense.
- E.<u>Repaired/Reconditioned Goods</u>: As to out-of-warranty goods which Seller has repaired or reconditioned, Seller warrants for a period of sixty (60) days from date of its invoice only new components replaced in the most recent repair(reconditionies).
- reconditioned, seller warrants for a period of sixty (e.u.) aays from date of its invoice only new components replaced in the most recent repair/reconditioning.

  F. Returns and Adjustments: No goods may be returned unless authorized in advance by Seller and then only upon such conditions to which Seller may agree. Buyer must obtain an RMA (Return Material Authorization) number from Seller prior to any return shipment and such RMA number must appear on the shipping label and packing slip. Buyer shall be responsible for the returned goods until such time as Seller receives the same at its plant and for all charges for packing, inspection, shipping, transportation, or insurance associated with returned goods. In the event that credit for returned goods is granted, it shall be at the lesser of the then current prices or the original purchase price. Claims for shortage or incorrect material must be made within five (5) days after receipt of shipment.

ALL OTHER WARRANTIES, FOR ANY OF SELLER'S GOODS OR SERVICES, WHETHER ORAL, WRITTEN, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PURPOSE ARE EXCLUDED.

INTELLECTUAL PROPERTY: Seller's sale of goods or provision of related documentation or other materials to Buyer shall not transfer any intellectual property rights to Buyer unless Seller specifically agrees to do so in writing. Seller shall retain ownership of all applicable patents, trademarks, copyrights and other intellectual property rights. Buyer shall not use, copy or transfer any such items in violation of Seller's intellectual property rights or applicable law, or for any purposes other than that for which the items were furnished.

Seller shall defend any lawsuit brought against the Buyer based on a claim that the design or construction of the goods sold hereunder by Seller infringe any United States or Canadian Patent, Copyright or Mask Work Registration, provided that Buyer prompty notifies Seller of such claim in writing and further provided that, at Seller's expense, (1) Buyer gives Seller the sole right to defend or control the defense of the suit or proceeding, including settlement, and (2) Buyer provides all necessary information and assistance for that defense. In the event of a charge of infringement, Seller's obligation under the agreement shall be fulfilled if Seller, at its option and expense, either (i) settles such claim; (ii) procures for Buyer the right to continue using such goods; (iii) replaces or modifies goods to avoid infringement; or (iv) accepts the return of any infringing goods and refunds their purchase price; or (iv) defends against such claim.

If Buyer furnishes specifications or designs to Seller, the obligations of Seller set forth above shall not apply to goods made by Seller using such specifications or designs, and Buyer shall defend, indemnify and hold Seller harmless against any third party claims for infringement which arise out of Seller's use of specifications or designs furnished by Buyer.

SOFTWARE LICENSE: If goods purchased hereunder include software ("Software"), Buyer may use the Software only as part of the goods. Buyer may not use, copy, or transfer any of the Software except as may be permitted under the applicable License Agreement provided with the goods. Buyer's right to use, copy or transfer the Software shall terminate upon termination of Buyer's right to use the goods.

PACKAGING/WEIGHTS AND DIMENSIONS: Buyer specified packing or marking may be subject to additional charges not otherwise included in the price of the goods. Published weights and dimensions are estimates or approximate only and are not warranted.

FORCE MAJEURE: Seller shall not be responsible for delays in delivery or any failure to deliver due to causes beyond Seller's control, including but not limited to the following items: acts of God, war, terrorism, mobilization, civil commotion, riots, embargoes, domestic or foreign governmental regulations or orders, governmental priorities, port congestion, acts of the Buyer, its agents or employees, fires, floods, strikes, lockouts and other labor difficulties, shortages of or inability to obtain shipping space or transportation, inability to secure fuel, supplies or power at current prices or on account of shortages thereof, or due to limitations imposed by the extent of availability of Seller's normal manufacturing facilities.

If a delay excused per the above extends for more than ninety (90) days and the parties have not agreed upon a revised basis for continuing providing the goods or services at the end of the delay, including adjustment of the price, then Buyer, upon thirty (30) days' prior written notice to Seller may terminate the Order with respect to the unexecuted portion of the goods or services, whereupon Buyer shall promptly pay Seller its reasonable termination charges upon submission of Seller's invoices thereof.

LIMITATION OF LIABILITY: Seller's liability for any claim of any kind, except infringement of intellectual property rights, shall not exceed the purchase price of any goods or services which give rise to the claim. SELLER SHALL IN NO EVENT BE LIABLE FOR BUYER'S MANUFACTURING COSTS, LOST PROFITS, LOSS OF USE OF THE GOODS OR SERVICES, COST OF CAPITAL, COST OF SUBSTITUTE GOODS, FACILITIES, SERVICES OR REPLACEMENT POWER, DOWNTIME COSTS, CLAIMS OF BUYER'S CUSTOMERS FOR DAMAGES, OR OTHER SPECIAL, PROXIMATE, INCIDENTAL, INDIRECT, EXEMPLARY OR CONSEQUENTIAL DAMAGES. Any action against Seller must be brought within eighteen (18) months after the cause of action accrues. These disclaimers and limitations of liability shall apply regardless of the form of action, whether in contract, tort or otherwise, and further shall extend to the benefit of Seller's vendors, appointed distributors and other authorized resellers as third-party beneficiaries.

PROHIBITION FOR HAZARDOUS USE: Goods sold hereunder generally are not intended for application in and shall not be used by Buyer in the construction or operation of a nuclear installation or in connection with the use or handling of nuclear material, or for any hazardous activity or critical application, where failure of a single component could cause substantial harm to persons or property, unless the goods have been specifically approved for such a use or application. Seller disclaims all liability for any loss or damage resulting from such unauthorized use and Buyer shall defend, indemnify and hold harmless the Seller against any such liability, whether as a result of breach of contract, warranty, tort (regardless of the degree of fault or negligence), strict liability or otherwise.

**EXPORT CONTROL:** Buyer shall comply with all export control laws and regulations of the United States, and all sales hereunder are subject to those laws and regulations. Seller shall not be named as shipper or exporter of record for any goods sold hereunder unless specifically agreed to in writing by Seller. At Seller's request, Buyer shall furnish Seller with end-use and end-user information to determine export license applicability. Buyer warrants, in accordance with U.S. Export Law, that goods sold hereunder shall not be destined for facilities or activities involving nuclear, chemical or biological weapons, or related missile delivery systems in named prohibited regions or countries.

GOVERNING LAW: Seller intends to comply with all laws applicable to its performance under any order. All matters relating to interpretation and effect of these terms and any authorized changes, modifications or amendments thereto shall be governed by the laws of the Commonwealth of Pennsylvania. No government contract regulations or clauses shall apply to the goods or services, this agreement, or act to bind Seller unless specifically agreed to by Seller in writing.

NON-WAIVER BY SELLER: Waiver by Seller of a breach of any of these terms and conditions shall not be construed as a waiver of any other breach.

SEVERABILITY AND ENTIRE AGREEMENT: If any provision of these terms and conditions is unenforceable, the remaining terms shall nonetheless continue in full force and effect. This writing, together with any other terms and conditions Seller specifically agrees to in writing, constitutes the entire terms and conditions of sale between Buyer and Seller and supercedes any and all prior discussions, and negotiations on its subject matter.



205 Keith Valley Road, Horsham, PA 19044
U.S. and Canada: 1-800-553-9092
24-Hour Service: 1-800-527-6297
International: +1 215-674-1234
Fax: +1 215-674-2731
E-mail: drexelbrook.info@ametek.com
Website: www.drexelbrook.com