



Installation & Maintenance Instructions

IntelliPoint RF™ RMT Series

Two-Wire Point Level Switch
with Manual Calibration/Set Point

DREXELBROOK®

A Leader In Level Measurement Solutions

AMETEK®



Reading Office

Cutbush Park, Danehill, Lower Earley,
Reading, Berkshire. RG6 4UT. UK.
Tel: +44 (0)118 9311188
Email: info@able.co.uk

Aberdeen Office

Unit 6 Airside Business Park, Kirkhill Industrial Estate,
Dyce, Aberdeen. AB21 0GT. UK.
Tel: +44 (0)1224 725999
Email: ab@able.co.uk

Internet: www.able.co.uk
e-procurement: www.247able.com
Registered in England No: 01851002
VAT No: GB 417 2481 61





Leader in
Level Measurement

Technical Assistance: 1-800-527-6297
Outside North America: +1-215-674-1234

Installation and Operating Instructions

IntelliPoint RF™ RMT Series Two-Wire Point Level Switch with Manual Calibration/Set Point

U.S. and Canada: 1-800-553-9092
24-Hour Service: 1-800-527-6297
International: +1 215-674-1234
Fax: +1 215-674-2731
E-mail: drexelbrook.service@ametek.com
Website: www.drexelbrook.com

AMETEK Drexelbrook makes no warranty of any kind with regard to the material contained in this manual, including, but not limited to, implied warranties or fitness for a particular purpose. Drexelbrook shall not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of material.

© AMETEK Drexelbrook

EDO #03-10-100
RMTXX1-LM
Issue #10

IntelliPoint RF™ RMT Series Two-Wire Point Level Switch with Manual Calibration/Set Point



AMETEK®
DREXELBROOK
An ISO 9001 Certified Company


205 Keith Valley Road, Horsham, PA 19044
U.S. and Canada: 1-800-553-9092
24-Hour Service: 1-800-527-6297
International: +1 215-674-1234
Fax: +1 215-674-2731
E-mail: drexelbrook.info@ametek.com
Website: www.drexelbrook.com

Register your

IntelliPoint RF

and extend your warranty to 36 months

**36 Month Warranty
Registration at...
www.drexelbrook.com**

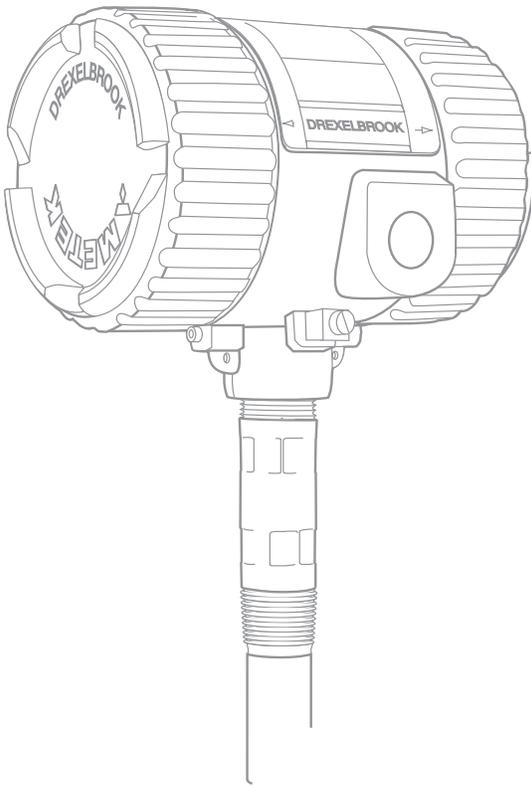

Extend your warranty!

...from 12 months to 36 months by registering your purchase. Please go to www.drexelbrook.com. Click on "Contact Us" then "Warranty Registration" and fill out the form.

Contents

Contents

Section 1:	Introduction	1
1.1	System Description	1
1.2	Technology	1
1.3	Model Number	2
1.4	Dual Compartment Housing	4
Section 2:	Installation	5
2.1	Unpacking	5
2.2	Mounting and Installation Guidelines	5
2.3	Installation of Flush-Mounted Sensing Elements	7
2.4	Input Wiring	8
2.5	Spark Protection	8
2.6	Circuit Board	9
2.7	Output and LED Status	11
2.8	Sensing Element Connection	12
Section 3:	Calibration	15
3.1	Setpoint Control	15
3.2	Adjustable Differential Controls	16
3.3	Calibration Procedures	17
Section 4:	Spare Parts List	23
Section 5:	Troubleshooting	25
5.1	Testing Sensing Element	25
5.2	Testing Electronic Unit	26
5.3	Over Range	26
5.4	Under Range	26
5.5	Testing Integral Cable	27
5.6	Testing Remote Cable	27
5.7	Testing Power Supply	28
5.8	Factory Assistance	29
5.9	Field Service	29
5.10	Customer Training	29
5.11	Equipment Return	30
Section 6:	Specifications	31
Section 7:	Control Drawings	33
7.1	FM Control Drawings	33
7.2	NEMKO / ATEX Control Drawings	48
7.3	CSA Control Drawings	53
7.3	CSA Control Drawings	55
7.4	Mounting and Wiring for Spark Protector Drawings	64
7.5	Adding a Padded Capacitor	67
7.6	Dual Seal Assembly for 700 Series Sensing Elements	70
Appendix A:	Shortening or Lengthening the Sensing Element	A-1

Section 1

Section 1: Introduction

1.1 System Description

The AMETEK Drexelbrook, **IntelliPoint RMT and RGT Series** point level switches detect the presence or absence of material and provide a current output for control functions. The RMT and RGT IntelliPoint™ switches are calibrated through a simple potentiometer adjustment.

Since the IntelliPoint RMT Series requires calibration and setpoint adjustments, it is not capable of operating in non-dedicated tanks.

1.2 Technology


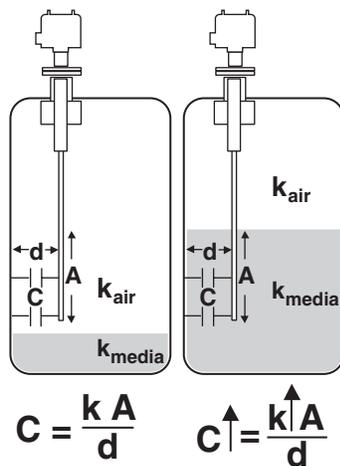


Figure 1-1
Simple Capacitance Probe

In a simple capacitance probe-type sensing element, when the level rises and material covers the probe, the capacitance within the circuit between the probe and the media (conductive applications), or the probe and the vessel wall (insulating applications), increases. This is due to the dielectric constant (k) of the material which causes a bridge imbalance. The signal is demodulated (rectified) and amplified, then the output is increased. There are drawbacks, however, especially when there is coating of the probe.

An RF Admittance level transmitter is the next generation. Although similar to the capacitance concept, IntelliPoint employs a radio frequency signal and adds the Cote-Shield circuitry within the Electronics Unit. This patented Cote-Shield circuitry is designed into the IntelliPoint series and enables the instrument to ignore the effect of buildup, that is, material coating on the sensing element. The sensing element is mounted in the vessel and provides a change in RF admittance indicating the presence or absence of material.

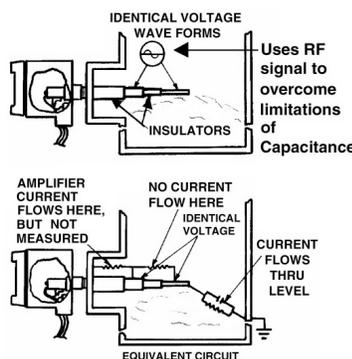

The Cote-Shield element of the sensor prevents the transmission of RF current through the coating on the sensing element. The only path to ground available for the RF current is through the material being measured.

The result is an accurate measurement regardless of the amount of coating on the probe, making it the most versatile technology available by far. Not only does it work with all types of materials, it's well suited to a very broad range of conditions, from cryogenics to high temperature, from vacuum all the way to 10,000psi pressure.

1.3 Model Number

● Technology				
R	RF Admittance			
● Measurement Type				
M	Manual Calibration			
G	Manual Calibration (High Sensitivity)			
● Input				
T	Two-Wire Power Supply, 13-30 Vdc			
● Housing				
0	No Approvals, NEMA 4X/IP66, M20 X 1.5 conduit entries			
1	No Approvals, NEMA 4X/IP66, ¾" NPT conduit entries			
2	ATEX Approved, NEMA 4X/IP66, M20 X 1.5 conduit entries			
3	FM Approved, NEMA 4X/IP66, ¾" NPT conduit entries			
4	CSA Approved, NEMA 4X/IP66, ¾" NPT conduit entries			
5	No Approvals, NEMA 4X/IP66, M20 X 1.5 conduit entries, Dual Seal, Perm-a-Seal sensors – only			
6	No Approvals, NEMA 4X/IP66, ¾" NPT conduit entries, Dual Seal, Perm-a-Seal sensors – only			
7	FM Approved, NEMA 4X/IP66, ¾" NPT conduit entries, Dual Seal, Perm-a-Seal sensors – only			
8	CSA Approved, NEMA 4X/IP66, ¾" NPT conduit entries, Dual Seal, Perm-a-Seal sensors – only			
9	No Approvals, NEMA 4X/IP66, M20 X 1.5 conduit entries, Dual Seal, Non Perm-a-Seal sensors – only			
A	No Approvals, NEMA 4X/IP66, ¾" NPT conduit entries, Dual Seal, Non Perm-a-Seal sensors – only			
B	FM Approved, NEMA 4X/IP66, ¾" NPT conduit entries, Dual Seal, Non Perm-a-Seal sensors – only			
C	CSA Approved, NEMA 4X/IP66, ¾" NPT conduit entries, Dual Seal, Non Perm-a-Seal sensors – only			
● Electronics				
0	Integral			
1	Remote, no cable			
2	Rmt. w/ 3 m (10 ft.) G.P. Cable			
3	Rmt. w/ 7.6 m (25 ft.) G.P. Cable			
4	Rmt. w/ 10.6 m (35 ft.) G.P. Cable			
5	Rmt. w/ 15.2 m (50 ft.) G.P. Cable			
6	Rmt. w/ 23 m (75 ft.) G.P. Cable			
7	Rmt. w/ (25 ft.) Tri-Ax Cable			
8	Rmt. w/ (50 ft.) Tri-Ax Cable			
9	Rmt. w/ (75 ft.) Tri-Ax Cable			
A	Rmt. w/ (10 ft.) Hi-Temp. Cable			
B	Rmt. w/ (25 ft.) 1st 10ft Hi-Temp. Cbl.			
C	Rmt. w/ (35 ft.) 1st 10ft Hi-Temp. Cbl.			
D	Rmt. w/ (50 ft.) 1st 10ft Hi-Temp. Cbl.			
E	Rmt. w/ (75 ft.) 1st 10ft Hi-Temp. Cbl.			
F	Rmt. w/ (5 ft.) G.P. Cable			
G	Rmt. w/ (5 ft.) Tri-Ax Cable			
H	Rmt. w/ (10 ft.) Tri-Ax Cable			
J	Rmt. w/ (35 ft.) Tri-Ax Cable			
K	Rmt. w/ (5 ft.) Hi-Temp. Cable			
● Output				
0	8-16 mA Output			
● Sensing Element				
	Application	Sensing Element	Pressure/Temperature	Wetted Parts
00	General purpose	700-1202-001 remote 700-1202-021 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and PEEK
01	Floating roof with cable attachment and brass bottom weight	700-1202-012 remote 700-1202-022 integral	13.8 bar @ 177°C (200 PSI @ 350°F)	316SS, Brass, and PEEK
02	General purpose, longer insertion lengths with cable attachment and 316SS bottom weight	700-1202-014 remote 700-1202-024 integral	13.8 bar @ 177°C (200 PSI @ 350°F)	316SS and PEEK
03	Proximity	700-1202-018 remote 700-1202-028 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and PEEK with 76 mm (3) 316SS proximity plate
04	General purpose, high temperature and pressure	700-1202-041 remote 700-1202-042 integral	69 bar @ 121°C (1000 PSI @ 250°F) 20.7 bar @ 232°C (300 PSI @ 450°F)	316SS and PEEK
06	General purpose with FDA approved materials of construction	700-1202-031 remote 700-1202-032 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and FDA grade PEEK
07	General purpose Granular materials	700-1202-010 remote 700-1202-020 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and PEEK with 7/8 inch dia. 316SS collar
09	General purpose Granular materials with FDA approved materials of construction	700-1202-033 remote 700-1202-034 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and FDA grade PEEK with 7/8 inch dia. 316SS collar
10	Corrosive liquids (2)(4)(9)	700-0001-018 remote	3.4 bar @ 149°C (50 PSI @ 300°F)	PFA
11	General purpose, higher pressure TFE compatibility required	700-0201-005 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and TFE
12	Corrosive material, higher pressure	700-0201-005 int/rem Hastelloy C	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 450°F)	Hastelloy C and TFE
13	Sanitary (3)	700-0201-036 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 300°F)	316/316L SS and TFE
14	General Purpose, low pressure	700-0202-002 int/rem	3.4 bar @ 149°C (50 PSI @ 300°F) 1.4 bar @ 232°C (20 PSI @ 450°F)	316SS and TFE
15	Heavy duty, agitated tanks or material	700-0202-043 remote	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and TFE
16	High Integrity Seal for Hazardous Materials	700-0002-360 int/rem	34.5 bar @ 149°C (500 PSI @ 300°F)	PFA
17	Sanitary (3) lowpressure	700-0202-036 int/rem	3.4 bar @ 149°C (50 PSI @ 300°F)	316SS and TFE
18	Corrosive material, higher pressure with waterlike viscosity (4)	700-0001-022 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 34.5 bar @ 149°C (500 PSI @ 300°F)	TFE
19	Interface Measurement	700-0002-023 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 34.5 bar @ 149°C (500 PSI @ 300°F)	316SS and TFE
20	Miniature Pilot Plant Sensor (1)(7)	700-0209-002 remote	6.9 bar @ 121°C (100 PSI @ 250°F) 0 bar @ 232°C (0 PSI @ 450°F)	316 SS and TFE

Continued on Next Page

1.3 Model Number (continued)

Continued from Previous Page

Fly Ash Precipitators, Baghouse, and Economizers (1) (6)			
Application	Sensing Element	Pressure/Temperature	Wetted Parts
31 No hopper Installation	700-0029-001 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
32 Hopper Installation up to 200mm (8 inches)	700-0029-002 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
33 Hopper Installation up to 406mm (16 inches)	700-0029-003 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
34 Hopper Installation up to 521mm (20.5 inches)	700-0029-004 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
35 Hopper Installation up to 635mm (25 inches)	700-0029-005 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
Plugged Chute Detection (1) (5)			
Application	Sensing Element	Pressure/Temperature	Wetted Parts
50 Flush Mount Sensor 305mm ² (12 inches ²) heavy duty	700-0207-001 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	304 SS and Polyurethane
51 Flush Mount Sensor 305mm ² (12 inches ²) higher temperature	700-0207-002 remote	0.1 bar @ 149°C (1 PSI @ 300°F)	304 SS and TFE
52 Flush Mount Sensor 305mm ² (12 inches ²) with curved radius 153, 229, 305 mm (6, 9, or 12 inches)	700-0207-003 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	304 SS and Neoprene
53 Flush Mount Sensor 305mm ² (12 inches ²) extra heavy duty	700-0207-004 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	410 SS and UHMW Polyethylene
55 Flush Mount Sensor 203mm ² (8 inches ²) heavy duty	700-0207-006 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	304 SS and Polyurethane
High Pressure / High Temperature			
60 High Pressure & Temp.	700-0204-038 remote	137.9 bar @ 93°C (2000 PSI @ 200°F) 68.9 bar @ 260°C (1000 PSI @ 500°F)	316SS and Ceramic
61 High Temperature	700-0204-002 remote	0 bar @ 816°C (0 PSI @ 1500°F)	316SS and Ceramic
62 High Pressure & Temp.	700-0204-048 remote	275.8 bar @ 316°C (4000 PSI @ 600°F)	316SS
ZZ Sensing Element	Not Listed		

● **Mounting Type** (See separate Mounting Chart for first three digits)

	IL	CSL		IL	CSL
xxx1	457 mm (18")	152 mm (6")	xxxG	457 mm (18")	0 mm (0")
xxx2	305 mm (12")	152 mm (6")	xxxH	914 mm (36")	254 mm (10")
xxxA	152 mm (6")	51 mm (2")	xxxJ	914 mm (36")	0 mm (0")
xxxB	305 mm (12")	51 mm (2")	xxxK	1219 mm (48")	254 mm (10")
xxxC	305 mm (12")	89 mm (3.5")	xxxL	1524 mm (60")	254 mm (10")
xxxD	457 mm (18")	51 mm (2")	P00X	IL/CSL Other	
xxxE	457 mm (18")	89 mm (3.5")	A1BX	IL/CSL factory set for Fly Ash	
xxxF	457 mm (18")	254 mm (10")	xxxZ	Other	



Not all mounting options available with all sensing elements

Notes: CSL (Cote-Shield Length) should extend through Nozzle + Typical "Wall Buildup" + 2 Inches

- (1) Available with remote electronics only
- (2) Use A1P mounting option
- (3) Choose only sanitary mounting options
- (4) Available with 0-inch CSL only
- (5) Use P00X mounting option
- (6) Use A1B mounting option
- (7) Use A8B mounting option (1/4-inch NPT)
- (8) Choose from flange mounting only
- (9) FM approved with remote electronics only

NPT Threads

A1B 3/4"NPT	316SS	A2B 1"NPT	316SS
A1C 3/4"NPT	Hastelloy C	A2C 1"NPT	Hastelloy C
A1P 3/4"NPT	PFA		

Sanitary TriClamps

C2B 1"TriClamp	316SS	C4B 2"TriClamp	316SS
C3B 1 1/2"TriClamp	316SS		

DIN Flanges



E01 25 mm 16 bar	RF 316/316L SS	E02 25 mm 16 bar	RF CS
EP1 25 mm 40 bar	RF 316/316L SS	EP2 25 mm 40 bar	RF CS
EQ1 50 mm 16 bar	RF 316/316L SS	EQ2 50 mm 16 bar	RF CS
ER1 50 mm 40 bar	RF 316/316L SS	ER2 50 mm 40 bar	RF CS
ES1 80 mm 16 bar	RF 316/316L SS	ES2 80 mm 16 bar	RF CS
ET1 80 mm 40 bar	RF 316/316L SS	ET2 80 mm 40 bar	RF CS
EU1 100 mm 16 bar	RF 316/316L SS	EU2 100 mm 16 bar	RF CS
EV1 100 mm 40 bar	RF 316/316L SS	EV2 100 mm 40 bar	RF CS
EW1 150 mm 16 bar	RF 316/316L SS	EW2 150 mm 16 bar	RF CS
EX1 150 mm 40 bar	RF 316/316L SS	EX2 150 mm 40 bar	RF CS

ANSI Flanges

DA1 1" 150#	RF 316/316L SS	DA2 1" 150#	RF CS
DB1 1 1/2" 150#	RF 316/316L SS	DB2 1 1/2" 150#	RF CS
DC1 2" 150#	RF 316/316L SS	DC2 2" 150#	RF CS
DD1 2 1/2" 150#	RF 316/316L SS	DD2 2 1/2" 150#	RF CS
DE1 1" 300#	RF 316/316L SS	DE2 1" 300#	RF CS
DF1 1 1/2" 300#	RF 316/316L SS	DF2 1 1/2" 300#	RF CS
DG1 2" 300#	RF 316/316L SS	DG2 2" 300#	RF CS
DH1 2 1/2" 300#	RF 316/316L SS	DH2 2 1/2" 300#	RF CS
DI1 3" 150#	RF 316/316L SS	DI2 3" 150#	RF CS
DJ1 3" 300#	RF 316/316L SS	DJ2 3" 300#	RF CS
DK1 4" 150#	RF 316/316L SS	DK2 4" 150#	RF CS
DL1 4" 300#	RF 316/316L SS	DL2 4" 300#	RF CS
DM1 6" 150#	RF 316/316L SS	DM2 6" 150#	RF CS
DN1 6" 300#	RF 316/316L SS	DN2 6" 300#	RF CS

1.4 Dual Compartment Housing

*Figure 1-3
Dual Compartment Housing Detail*

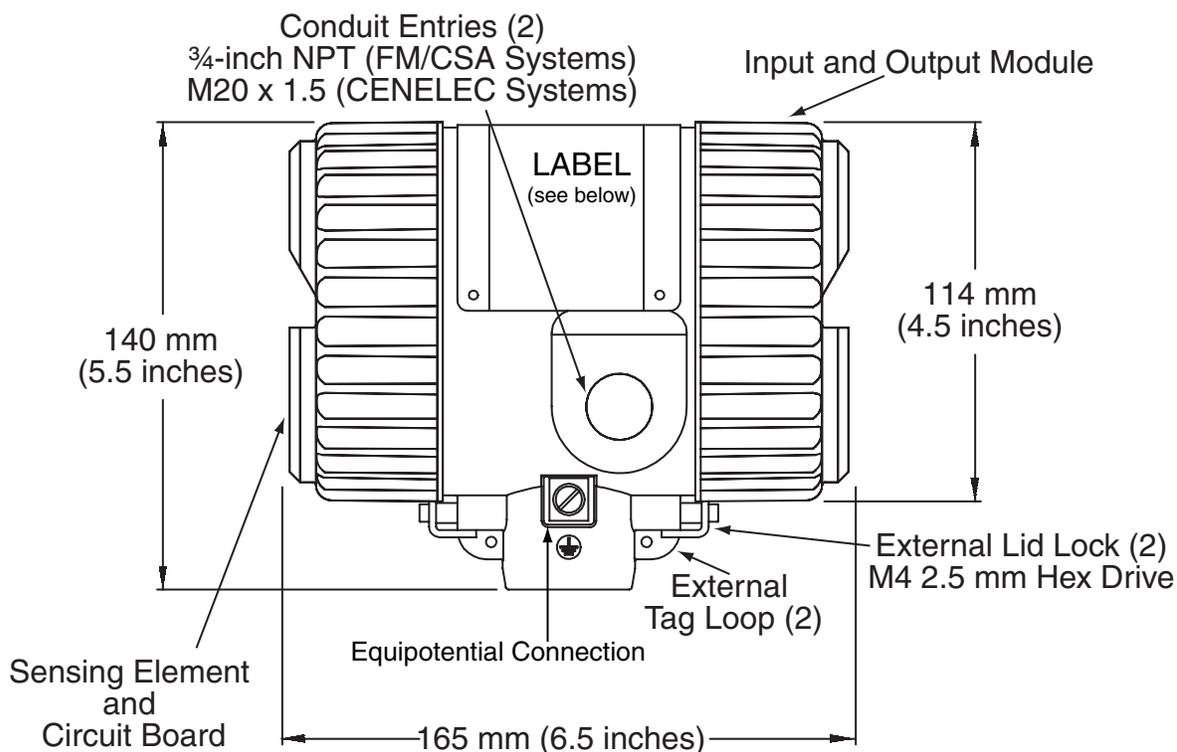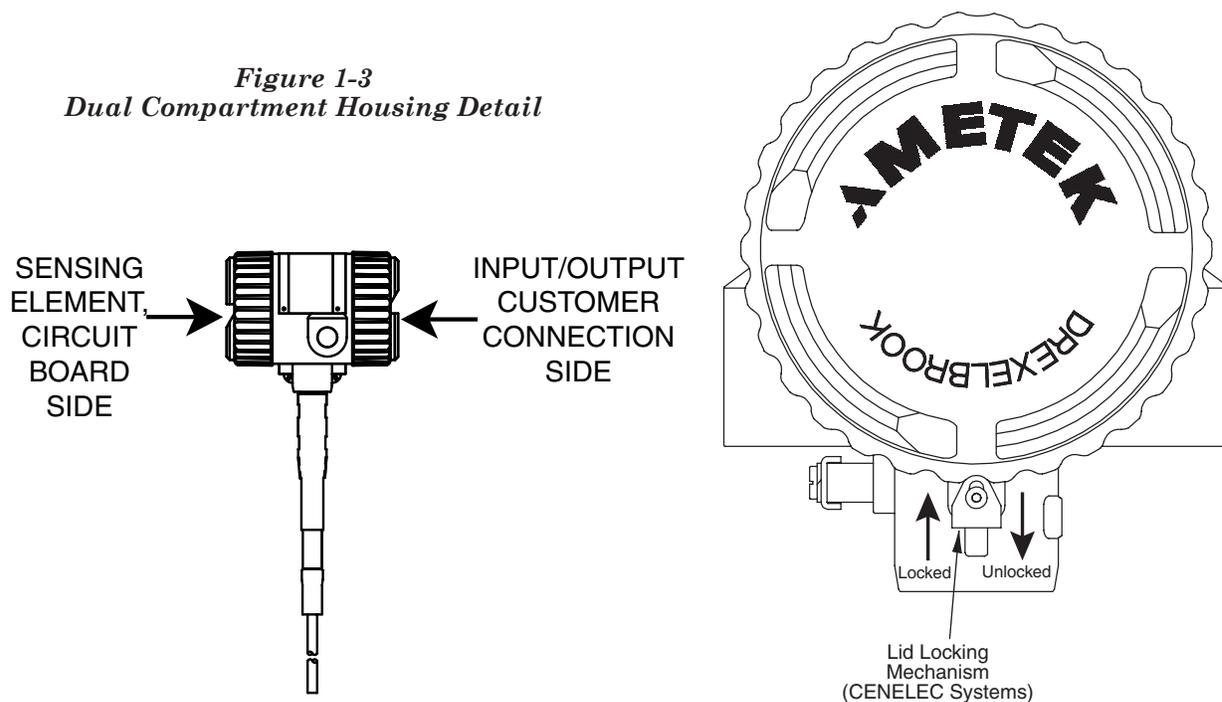

The Input/Output Module (IOM) is located on Customer Connection side; sensing element/circuit board are on opposite side.

Section 2: Installation

2.1 Unpacking

Carefully remove the contents of the shipping carton and check each item against the packing list before destroying any packing material. If there is any shortage or damage report it to the factory immediately.

2.2 Mounting and Installation Guidelines

The IntelliPoint RF instrument can be mounted vertically, horizontally, or at an angle. The mounting location should be as free as possible from vibration, corrosive atmospheres, and the possibility of mechanical damage. Ambient temperatures at the electronics should be between -30 to 70°C (-22 to 158°F).

The IntelliPoint RF utilizes a dual compartment housing and a completely encapsulated input/output module, to reduce the possibility of damage occurring from water migrating into the housing through the conduit.

To further reduce the possibility of damage caused by water in the conduit, install a drip loop and breather drain to purge any accumulating moisture. Refer to *Figure 2-1*.

When properly installed, the GREEN LED will illuminate when power is applied. The RED LED should not be flashing.

If the RED LED is flashing, refer to Section 5, Troubleshooting.

NOTICE
 Cable fittings supplied are weather-resistant. They are NOT certified as explosionproof (XP) or flameproof (d) unless they are specifically marked.

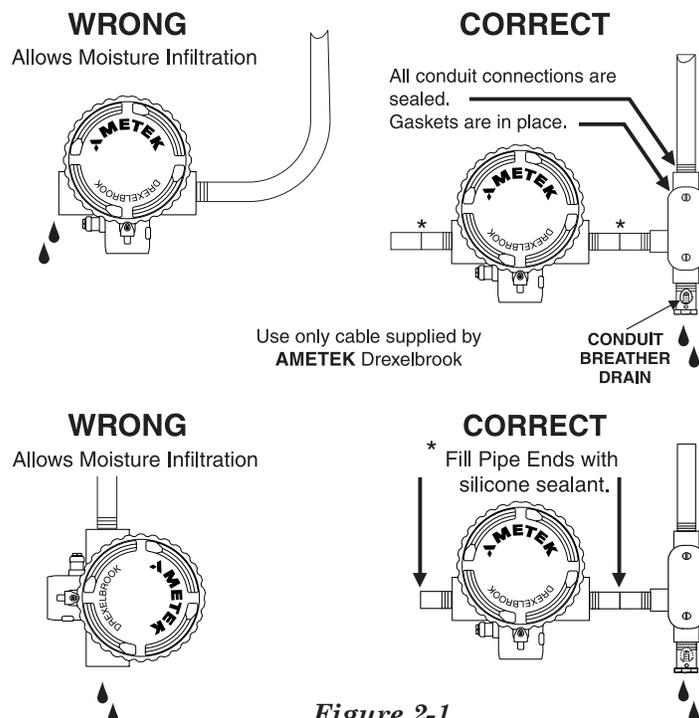


Figure 2-1
 Recommended Conduit Connection

2.2 Mounting and Installation Guidelines (continued)



The IntelliPoint RF instrument is rated intrinsically safe (I.S.) when power is provided from an I.S. supply.



WARNING:

The IntelliPoint RF equipment is rated explosion-proof. When installing in explosion hazardous areas [rated “potentially hazardous” (EU) or “hazardous classified” (USA)] observe all national and local regulations as well as specifications in the certificate.


Mount the sensing element using the installation guidelines in *Figure 2-2*.

When installing IntelliPoint RF instrument, ambient temperature at electronics must not exceed 70°C (158°F).

When installing flange-mounted sensing elements, keep mating surfaces and bolts free of paint and corrosion to ensure proper electrical contact with vessel. Avoid using excessive amounts of TFE tape when installing threaded sensing elements.



Install systems with threaded NPT connection via wrench flats on the process connection **ONLY**.

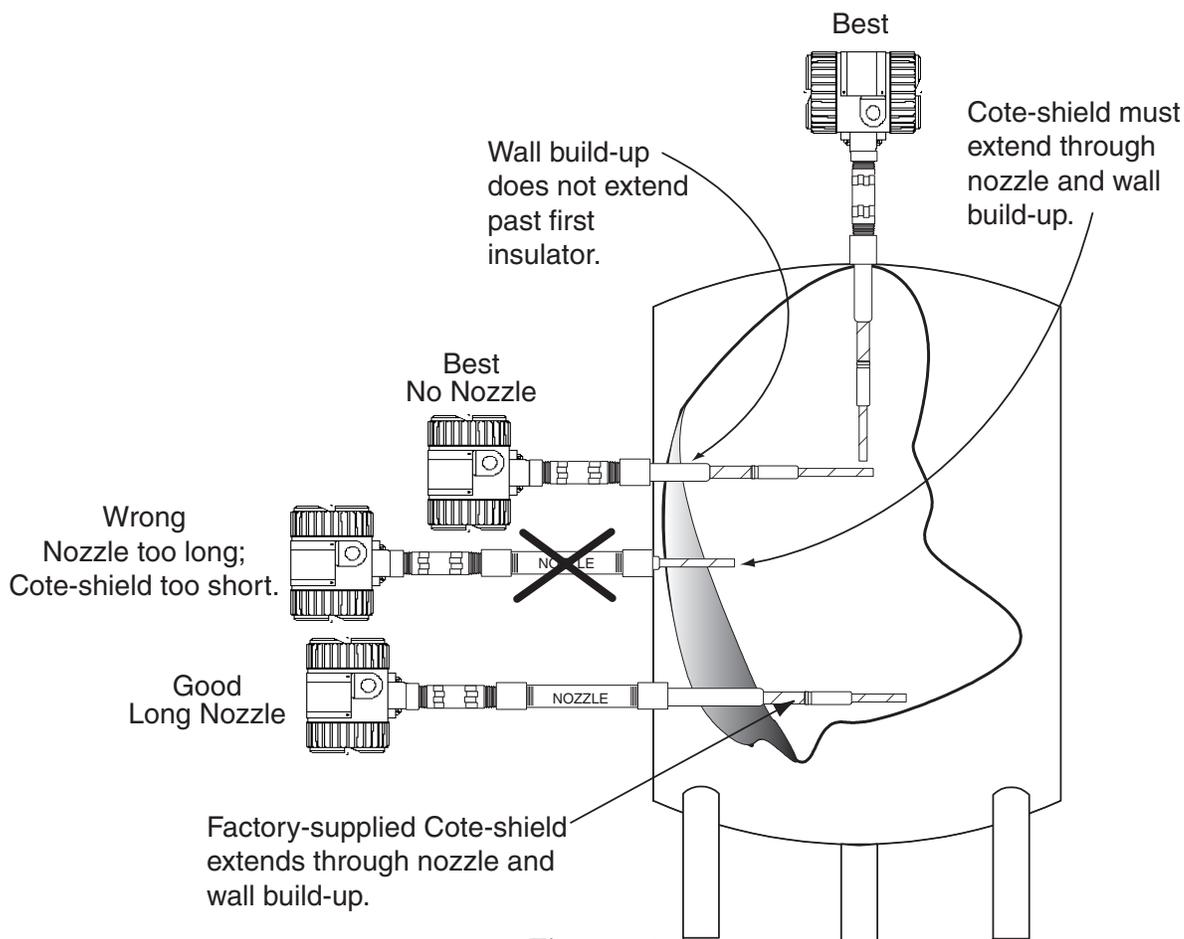

*Figure 2-2
Installation Considerations*

2.2 Mounting and Installation Guidelines (continued)

Mount the sensing element as to avoid enhancing electrostatic discharge from the process medium, as is good practice with any thermowell, displacer, or sampler. This includes correct bonding to the tank or silo wall.

If installation area is rated explosion-proof and requires conduit seal fittings, they should be used in accordance with company standards and local codes.


Mounting the sensing element inside a pipe is not recommended.

Do not mount a Cote-Shield sensing element through a nozzle that exceeds the length of first insulator.


Ensure there are no obstructions or agitator blades to interfere with sensing element.

Rigid sensing elements can be mounted either vertically or horizontally.

2.3 Installation of Flush-Mounted Sensing Elements

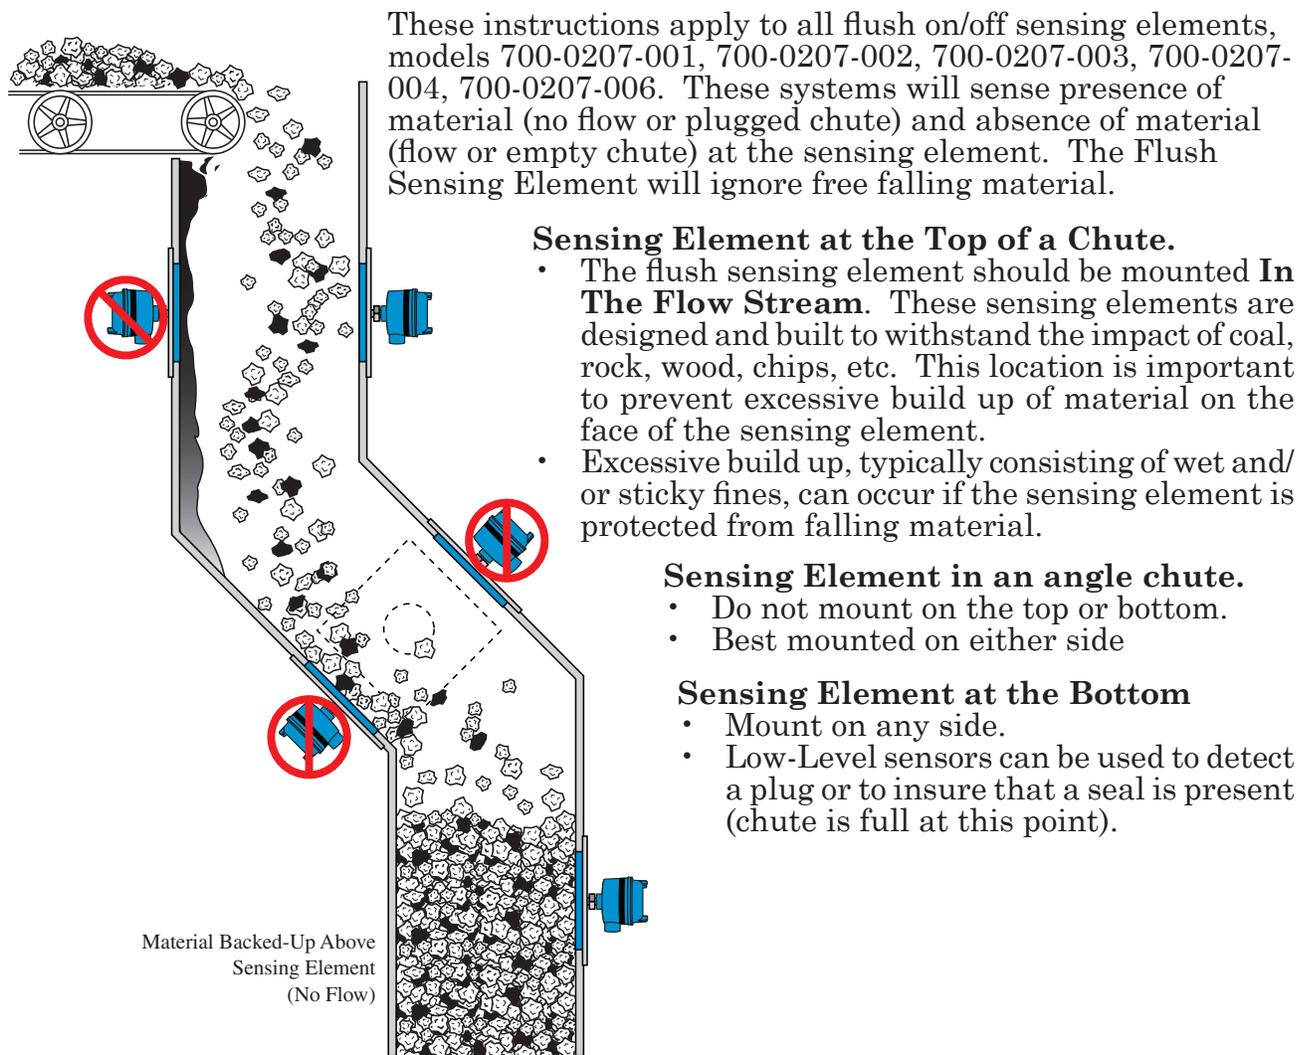

2.4 Input Wiring

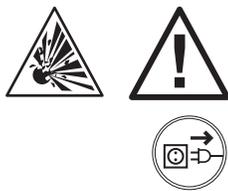

WARNING:

If the IntelliPoint instrument is located in a hazardous environment, do not open the enclosure cover or make/break any electrical connections without first disconnecting electrical power at the source. Ensure that the wiring, electrical fittings and conduit connections conform to electrical codes for the specific location and hazard level.

The IntelliPoint RF instrument requires a 13-30 Vdc supply to operate. To access, remove the housing lid on the customer connections side to reveal the Input/Output Module (IOM). The IOM is an encapsulated assembly that contains the power supply, outputs and eight wiring terminals. IOM is held in place with three screws. *See Figure 2-3.*

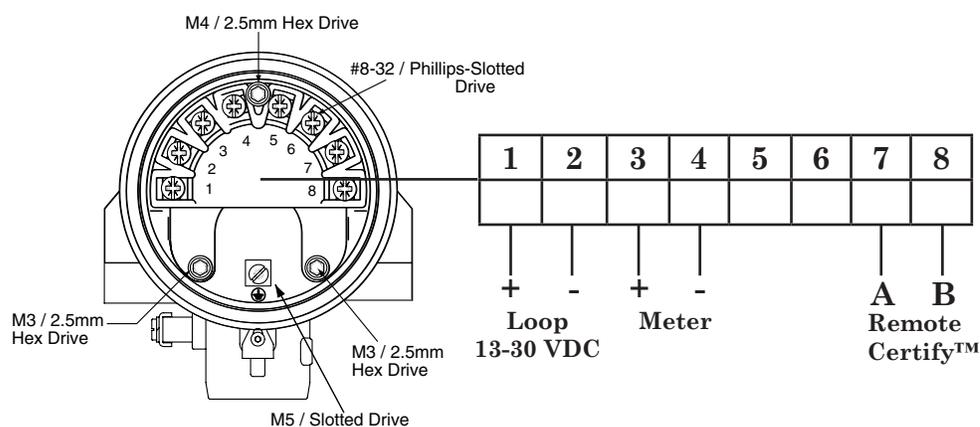


Figure 2-3
Input Wiring

2.5 Spark Protection



Applications involving insulating granulars and insulating liquids may produce a static discharge that can damage the electronics. The RF series instrument is supplied with integral heavy-duty spark protection to prevent static discharges from damaging the electronic units.

2.6 Circuit Board

The circuit board is located on the sensing element/circuit side of the housing (marked on label). Remove the housing lid to access the status LEDs, time delay adjustment, and configuration jumpers. *See Figure 2-4.*

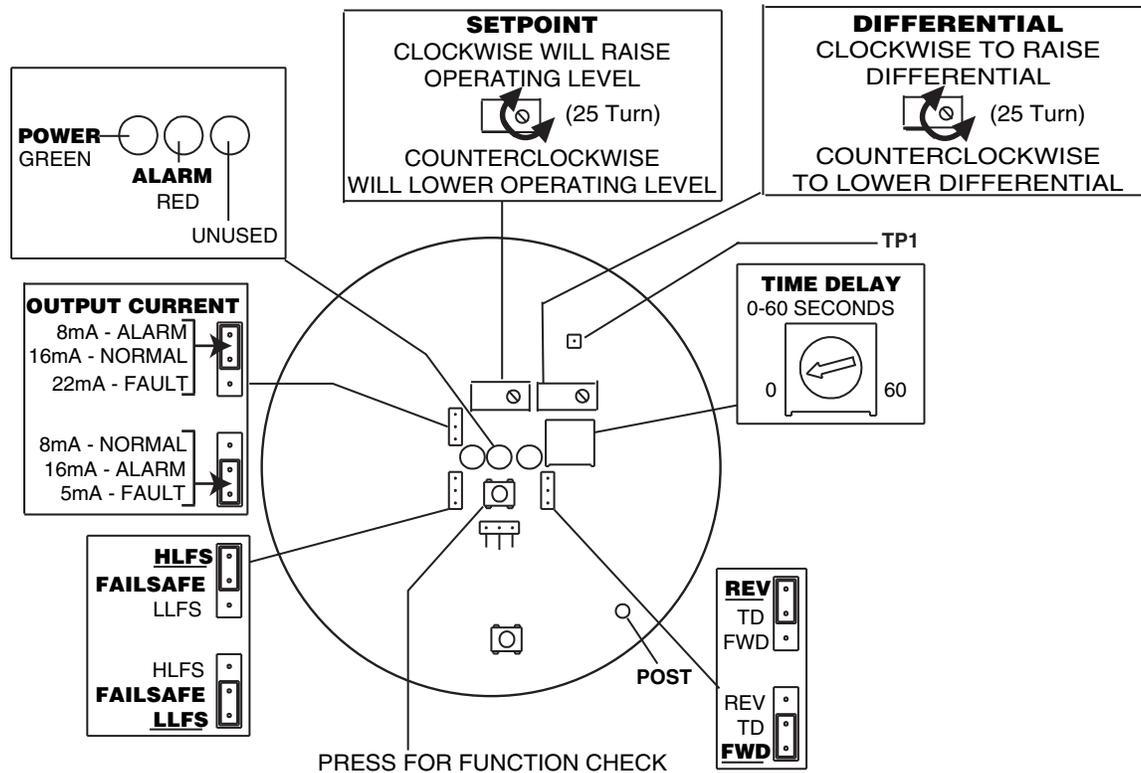


Figure 2-4 Circuit Board (Sensing Element Circuits View)

2.6.1 Time Delay

The TIME DELAY adjustment is located on the sensing element/circuit board side of the housing. It is used to help stop an oscillating relay output due to agitation or waves in the vessel. The time delay adjustment can be field-adjusted from 0 to 60 seconds. The unit is shipped with the TIME DELAY setting at zero (0) seconds.




The Time Delay adjustment is a 270-Degree turn pot and is at zero seconds when in the full counter-clockwise position. Do not force the pot past the stop or damage will occur.

2.6.2 Time Delay Action

Time delay action describes whether the relay contacts are delayed from going into the alarm state or recovering from an alarm state.

- FWD: Delays system from coming out of alarm.
- REV: Delays system from going into alarm.
- Instrument is supplied with TIME DELAY action set in forward mode (FWD) position.
- Time delay action is field-selectable using jumper located on sensing element/circuit board side of housing.

2.6.3 Failsafe

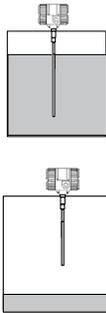

"Failsafe" describes the level condition that causes the transmitter to go into alarm.

- The Failsafe is field-selectable using a jumper located on the sensing element/circuit board side of the housing.
- High Level Failsafe (**HLFS**) is the condition when the probe is covered, the unit goes into alarm.
- Low Level Failsafe (**LLFS**) is the condition when the probe is uncovered, the unit goes into alarm.
- The instrument is supplied with the failsafe jumper set in high level (**HLFS**) position.

2.6.4 Current Output Assignment

The Output Current can be configured using the jumpers as follows:

- Jumper on pin #1 and #2 creates:
8mA - Alarm, 16mA - Normal, 22mA - Fault
- Jumper on pin #2 and #3 creates:
8mA - Normal, 16mA - Alarm, 5mA - Fault

2.6.5 Function Check

The **Function Check (High Level Fail Safe Only)** test feature performs a confidence test of the system by duplicating the same signal as a high-level alarm condition without requiring the system to be removed from the tank.

Simulating a high level with the **Function Check** feature:

- Forces unit into an alarm condition.

The **Function Check** test is initiated with the press of the **Function Check** button located on the sensing element/circuit side of the housing. After pressing the button, the green LED flashes for 5 seconds and the red LED illuminates. The output is moved to the alarm condition for 2 seconds. If the red LED does not light, and the loop current does not move to the alarm condition, the Manual Certify test has detected a fault. Consult the trouble-shooting section of this Instruction Manual.

2.7 Output and LED Status

There are two status LEDs located on the sensing element/circuit board side of the housing. One is used to indicate the unit has power. The other LED is used to indicate the status of the unit: NORMAL or ALARM. See *Figure 2-4*.



Second Red LED is not used on the Two-Wire Transmitter

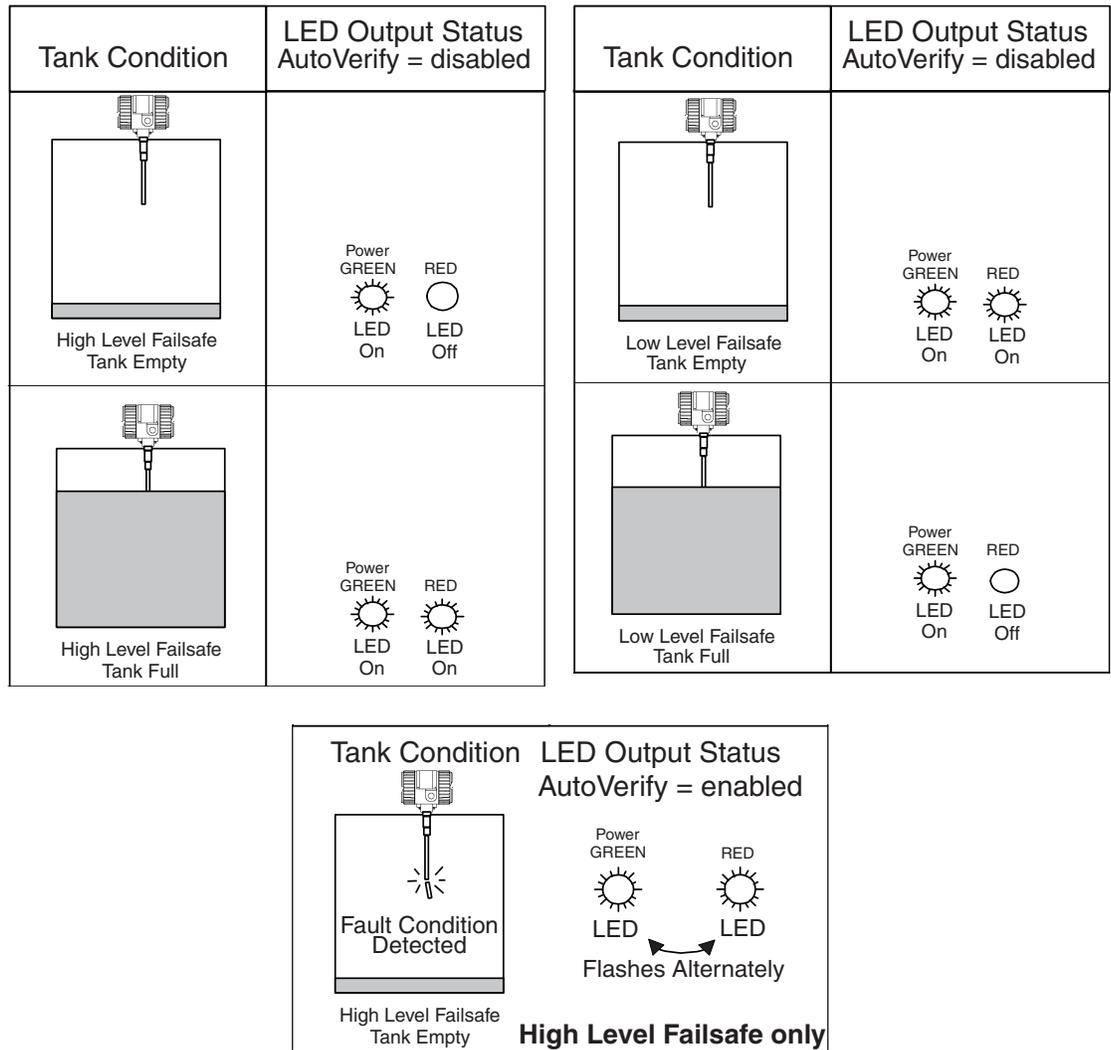


Figure 2-5
Output and LED Status

2.8 Sensing Element Connection

Sensing element connects to the rear side of the circuit board and is factory-installed.



The sensing element is sealed to the housing and cannot be removed without permanent damage.

For IntelliPoint RF instruments that are mounted remotely from the sensing element, the cable connections from the sensing element to the electronic unit are made to the terminals on the sensing element side of the housing. See Figure 2-7. Connect Green (Ground) wire to green screw, Red (Shield) wire to red screw, and Blue (Center) wire to blue screw.

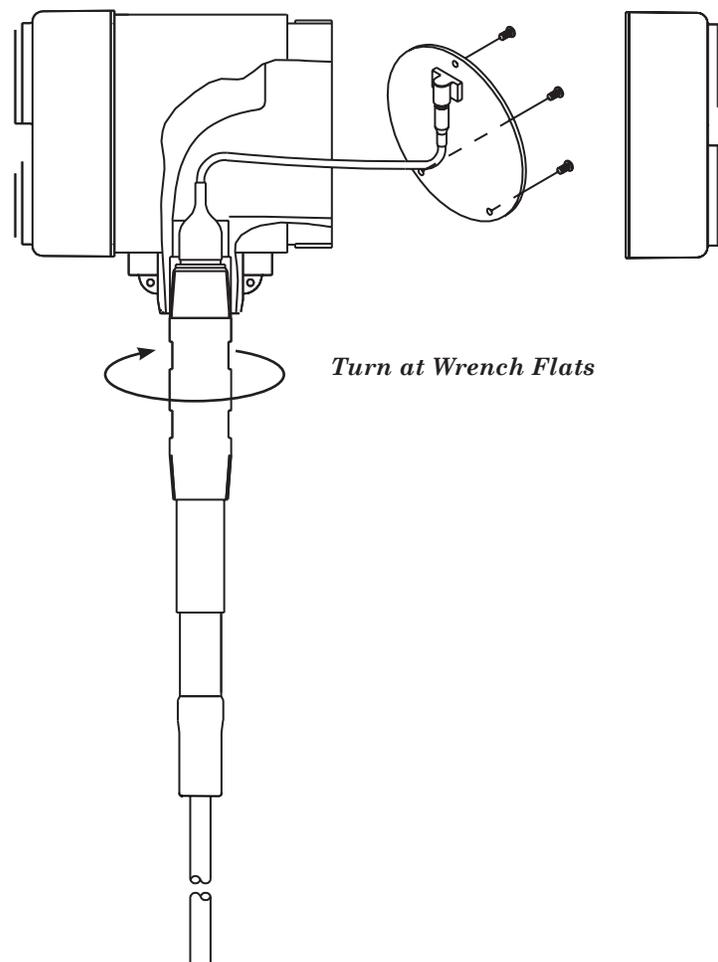


Figure 2-6
Sensing Element Connection
(Integral Housing)

2.8 Sensing Element Connection (continued)

For IntelliPoint RF instruments that are mounted remotely from the sensing element, the cable connections from the sensing element to the electronic unit are made to the terminals on the sensing element side of the housing. See **Figure 2-7**. Connect Green (Ground) wire to green screw, Red (Shield) wire to red screw, and Blue (Center) wire to blue screw.

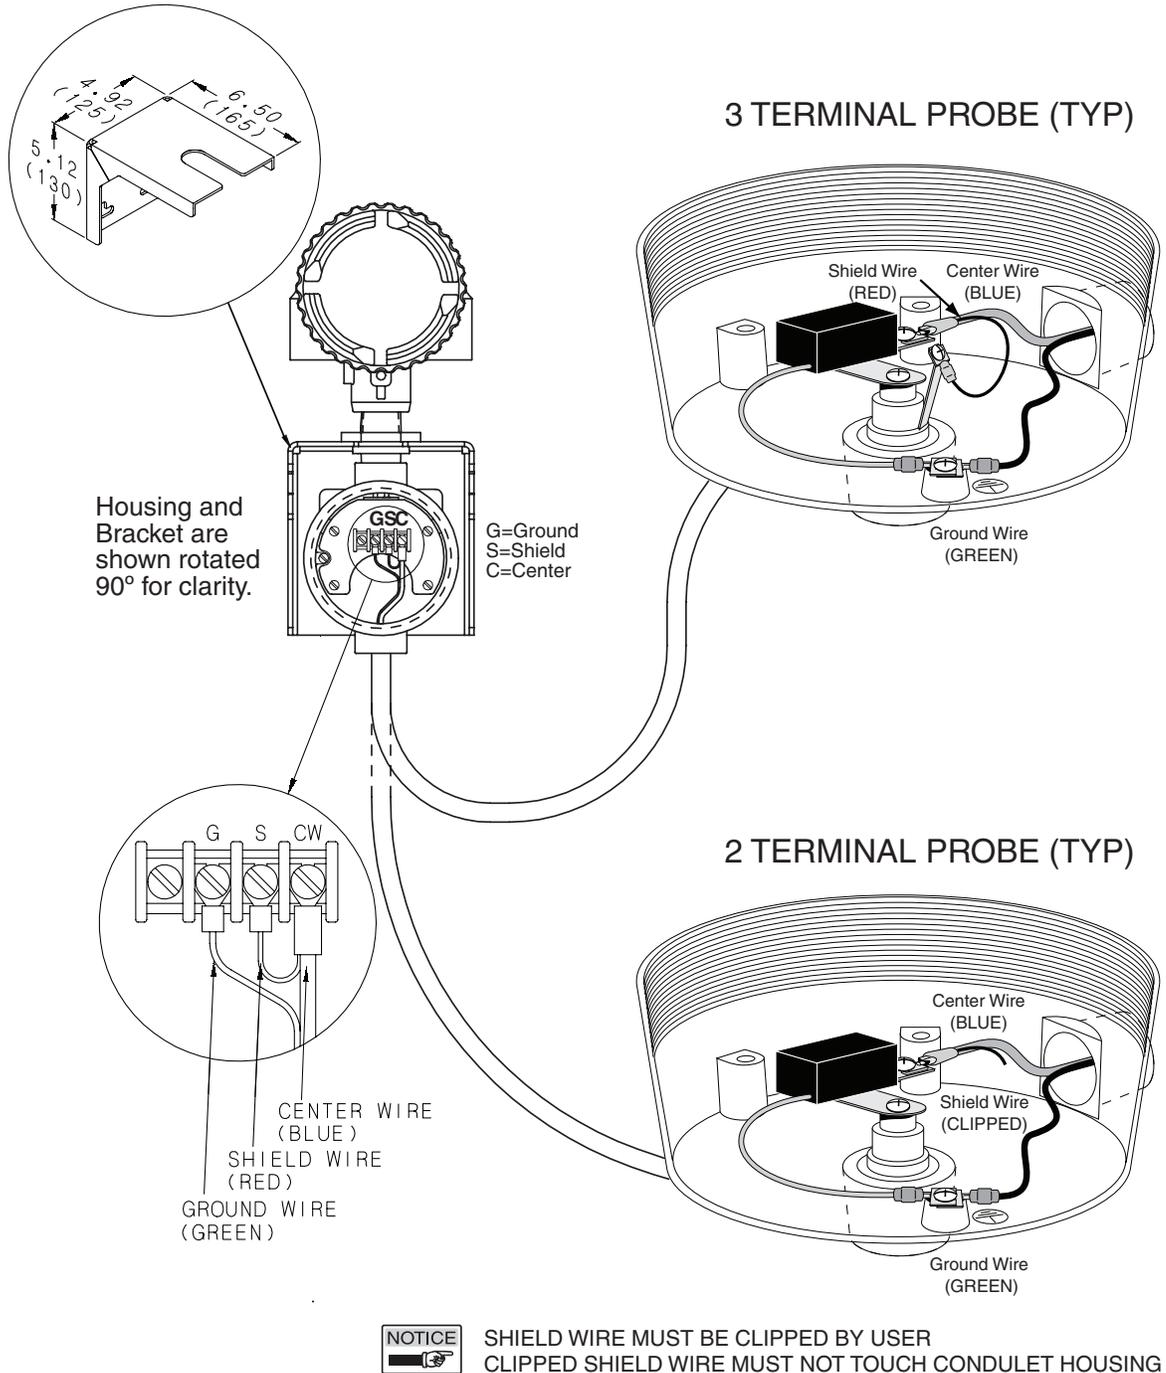


Figure 2-7
Sensing Element Connection
(Remote Housing)

Section 3

Section 3: Calibration



WARNING:

Before removing the explosion-proof housing cover in a potentially hazardous area, make certain that the area is safe. When calibration is complete, the cover must be replaced. Each conduit from the explosion-proof case must be equipped with an approved seal fitting.

3.1 Setpoint Control

There is a single adjustment located on top of the instrument that controls the point at which the Alarm/ Normal condition switches. A Red LED indicates the Alarm condition.

Each revolution of the control changes the operating point approximately 4 pF. (For high-sensitivity models, each revolution will change operating point approximately 1 pF.)

Turning the adjustment clockwise will raise the level at which the Alarm/Normal condition switches. Turning the adjustment counterclockwise will lower the level at which the Alarm/Normal condition switches. Refer to **Figure 3-1** and **Section 3.3**.


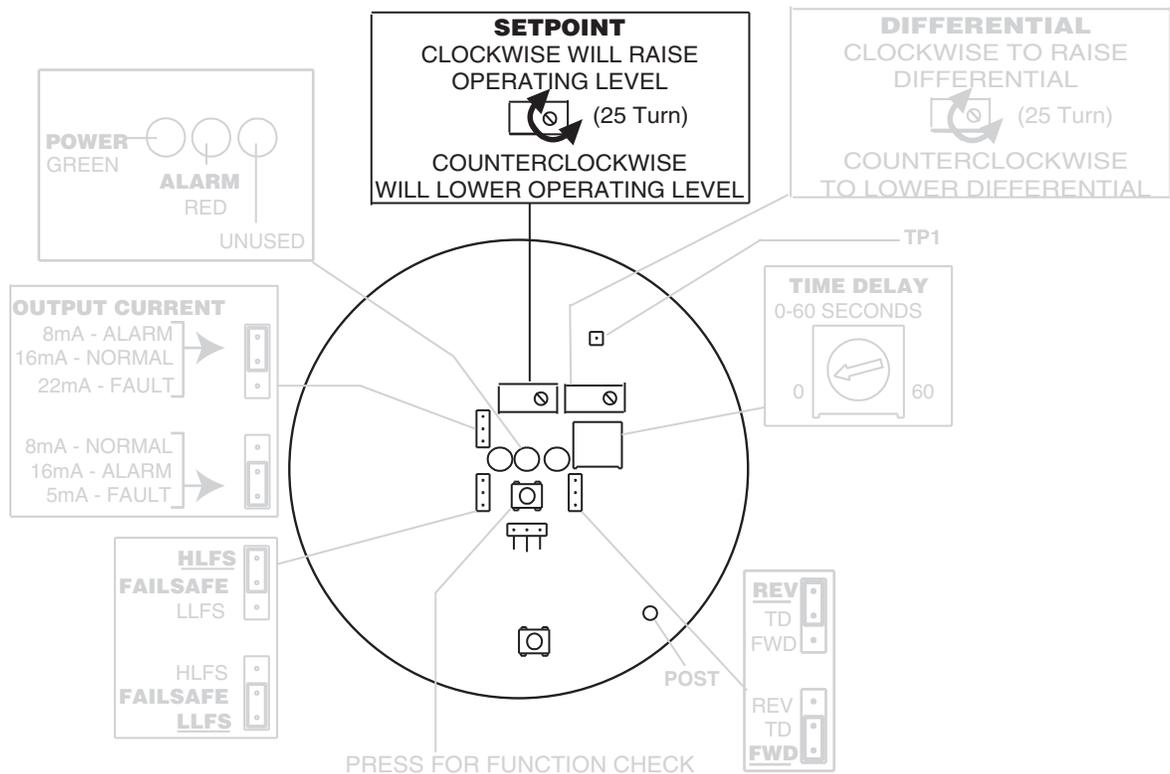


Figure 3-1
SetPoint Adjustment

3.2 Adjustable Differential Controls

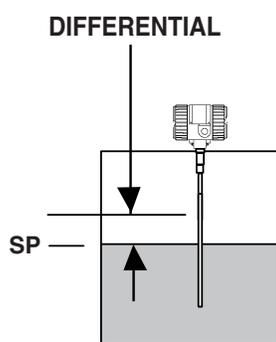

Differential is the hysteresis (dead band), or change in level, necessary to switch electronic unit from one state to another. It is useful to prevent oscillation "chatter" on those occasions when level happens to be right at switching point or when surface is agitated.

RMT Series level control with adjustable differential allows user to determine amount of capacitance change (hence level) between control point and recovery point. User can select two points on a vertical sensing element where Alarm and Normal points switch.

Range of operation is 3 to 100pF.

Low point range is that range of capacitance over which lower switching point may be adjusted.

Differential range corresponds to differential in level on sensing element and depends on both the capacitance of the element itself and the properties of the material being measured. *See Figure 3-2* for location of adjustments. For calibration of adjustable differential units, see *Section 3.3.5*

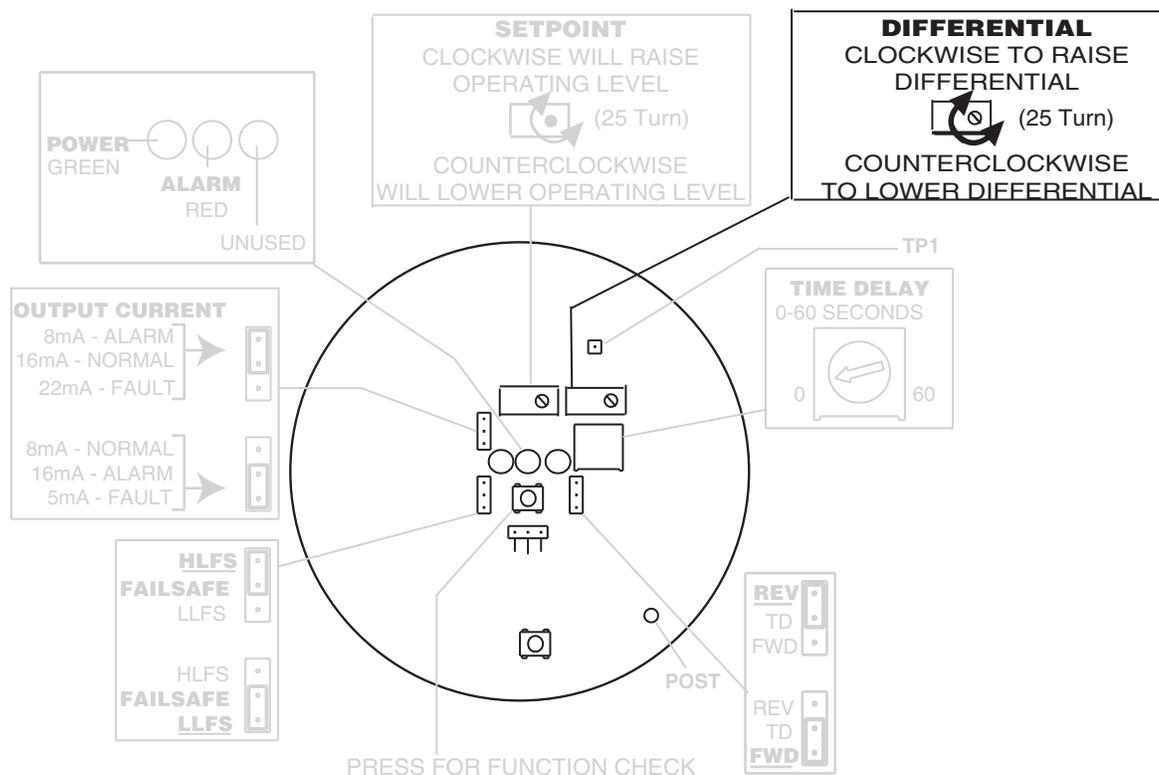



Figure 3-2
Differential Adjustment

3.3 Calibration Procedures



All RMT Series controls with bare metal sensing elements are factory-set to switch in all water-based conducting materials. NO calibration adjustment is needed.

3.3.1 Quick Calibration

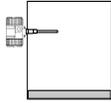

Quick Calibration method is **ONLY** recommended for horizontally mounted, bare metal, Cote-Shield sensing elements. In all cases it is necessary to have material level **below** the probe (sensing element in air).

Red LED OFF = normal condition

1. Turn the Differential adjustor to the full counterclockwise position.
2. For either High Level Fail Safe (HLFS) or Low Level Fail Safe (LLFS) begin with the sensing element totally uncovered.
3. Starting with SetPoint adjustor in full counter clockwise (ccw) position, slowly turn clockwise (cw) until switch changes state. [Red LED will turn OFF in HLFS and turn ON in LLFS].
4. Note position of SetPoint adjustor. Turn it clockwise (cw) from this point the additional number of turns indicated in **Quick Calibration Table 3-1**.

Calibration is Complete


Material Being Measured	Mode #7 (Standard Sensitivity)	Mode # 8 (High Sensitivity)
Conductive Materials (Water-Based) see note #1	15 Turns (Note 2)	20 Turns
Insulating Liquids, Organics, Oil, Plastics	1/2 Turns	2 Turns
Granular / Solid materials above 50# / ft ³	1/2 Turns	2 Turns
Granular / Solid materials above 25-50# / ft ³	1/2 Turns	1 Turn
Granular / Solid materials less 20# / ft ³	Use High Sensitivity Mode #8	3/4 Turn

Note 1 - Most water based materials can be considered conductive, such as acids, bases, salt solutions, water based slurries, and very wet granular materials. Carbon black and powdered metals conduct even without water.

Note 2 - With conducting materials, if heavy build up is anticipated, calibration adjustment can be turned to its clockwise limit.

*Table 3-1
Quick Calibration Chart*

3.3.2 Calibration of Horizontal Insulated Sensing Elements or Horizontal Sensing Elements in Insulating Materials

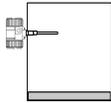

1. Begin with sensing element totally uncovered.
2. Turn the Differential adjustor to the full counterclockwise position.
3. Starting with the SetPoint adjustor in full counter clockwise (**ccw**) position, slowly turn clockwise (**cw**) until switch changes state. [Red LED will turn **OFF** in **HLFS**, and turn **ON** in **LLFS**].
4. Note position of adjustor.
5. Increase material level well above sensing element.
6. Turn SetPoint adjustor clockwise (**cw**) from this point, counting the additional number of turns until the Red LED, once again, changes state.
Note: Pot continues to spin even at the end of its adjustment (no mechanical stop).
7. Turn SetPoint adjustor back counterclockwise (**ccw**) half the number of turns that were counted in step 6.
8. Record that half number of turns as "PRELOAD" for use later in recalibration. *See Section 3.3.4.*

Calibration is Complete

If less than 1/4 turn of adjustment is observed between point where sensing element was uncovered and when covered, consult factory.

3.3.3 Calibration of Vertical Insulated Sensing Elements or Vertical Sensing Elements in Insulating Materials



Red LED OFF = normal condition

1. Turn the Differential adjustor to the full counterclockwise position.
2. Set level to where control is desired. [Minimum of 3 inches should cover sensing element.]
3. Starting from full counterclockwise (**ccw**) position, turn SetPoint adjustor clockwise (**cw**), counting the turns until switch changes state [LED changes state].
4. Record that number of turns as "PRELOAD" for use later in recalibration. *See Section 3.3.4.*

Calibration is Complete

3.3.4 Recalibration

If amount of preloading was recorded at time of initial calibration, it is possible to replace instrument without experimentally determining proper amount of preload.

1. Turn the Differential adjustor to the full counterclockwise position.
2. For recalibration using procedure in *Section 3.3.2*, follow Steps 1, 2, 3, and 4, then turn SetPoint adjustor further clockwise (**cw**) amount of preload.
3. For recalibration using procedure in *Section 3.3.3*, turn SetPoint adjustor clockwise (**cw**), from full counterclockwise (**ccw**) position, by amount of preload.
4. When recalibrating for bare sensing elements in conductive materials (factory set), turn tuning SetPoint adjustor to full clockwise (**cw**) position. No other adjustment is necessary. (Minimum of 25 turns.)

If reset is unsuccessful refer to Section 5: Troubleshooting.

3.3.4 Recalibration (Continued)

Nonvolatile Memory

The IntelliPoint has nonvolatile memory which allows the unit to re-start after power outages without recalibrating.

When The IntelliPoint is powered for the first time the internal microprocessor records and stores the “Air” value.

This is the uncovered value of the sensor mounted in the vessel. The IntelliPoint will also store the last covered value and the last uncovered value.

Whenever The IntelliPoint is powered it uses these values as a reference point to determine its current condition (normal or alarm).

The IntelliPoint has nonvolatile memory which retains the recorded values even if power is lost for months. When The IntelliPoint regains power after a power outage, the microprocessor compares the stored values to the current measured value. It will then determine its current status based on this.

Example:

Air value is 10pF

covered value is 20pF

Uncovered value is 11pF

Setpoint = Alarm or recovery value.

For alarm this would typically be 2pF above the last uncovered value (13pF in this case). For recovery this would be halfway between the uncovered and covered value (15.5pF in this case). The setpoint is stored in memory to indicate the last status of the switch.

So, when the unit regains power the microprocessor reads the current value of the sensor and determines the status based on the stored values. It will only re-calibrate if the re-call button is pressed.

3.3.5 Calibration of Adjustable Differential Units (HLFS and LLFS)

1. Put Fail-Safe switch in **HLFS** position.
See Section 2.5.3.
2. Turn SetPoint adjustor to full counterclockwise (**ccw**) position.
3. Turn Differential adjustor to full counterclockwise (**ccw**) position as well.
4. Adjust material level to lower point of desired control band.

3.3.5 Calibration of Adjustable Differential Units (Continued)

5. Slowly turn SetPoint adjustor clockwise (**cw**) until instrument just operates (Red LED changes state).
6. Turn Differential adjustor to full clockwise (**cw**) position (maximum differential).
7. Raise material level to upper point of desired control band.
8. Slowly turn the Differential adjustor counter-clockwise (**ccw**) until the Red LED changes state.
9. Select desired Fail-Safe position.

Calibration is Complete

3.3.6 High Level Fail Safe Blind Calibration of Control w/Flush Sensing Element (Alarm when chute is full at sensor)

1. Start with sensing element uncovered, (no material at sensing element), and tuning SetPoint adjustment to the full counter-clockwise (**ccw**) position. At this point Red LED will be ON.
2. Turn SetPoint adjustor clockwise (**cw**) until the Red LED just turns OFF.
3. Test unit by turning SetPoint adjustor slowly counter-clockwise (**ccw**), then clockwise (**cw**) to determine differential of the electronics.

If ON/OFF differential of LED is more than one quarter turn, unit is not operating correctly. Please consult factory service department for assistance. This is a simple function test of the electronics.

4. If above operation is satisfactory, then continue turning SetPoint adjustor clockwise (**cw**):
 - One (1) turn for granulars containing moisture. (1 = 4PF)
 - One half (1/2) turn for dry insulating powders.

Calibration is Complete

3.3.7 Low Level Fail Safe Blind Calibration of Control w/Flush Sensing Element (Alarm when chute is empty at sensor)

1. Start with sensing element uncovered, (no material at sensing element), and tuning the SetPoint adjustor to full counterclockwise (**ccw**) position. Red LED will be OFF.
2. Turn the SetPoint adjustor clockwise (**cw**) until the Red LED just turns ON.
3. Test the unit by turning adjustor slowly counter-clockwise (**ccw**), then clockwise (**cw**) to determine differential of the electronics.

If ON/OFF differential of LED is more than one quarter turn, unit is not operating correctly. Please consult factory service department for assistance. This is a simple function test of the electronics.

4. If above operation is satisfactory, then continue turning adjustor clockwise (**cw**):
 - One (1) turn for granulars containing moisture. (1 = 4PF)
 - One half (1/2) turn for dry insulating powders.

Calibration is Complete



When excessive build-up on sensor occurs, turning adjustor clockwise will generally eliminate a false high-level signal. Build-up may continue to form, or, it may drop off. If the build-up drops off, the sensing element may cease to respond when material reaches it. This should be discussed with factory service. Call 1-800-527-6297.

Section 4: Spare Parts List

O-ring	250-1-75
Housing ¼-inch NPT Conduit Entry	260-2-540
Housing M20 Conduit Entry	260-2-542
Input/Output Module.....	385-48-10-2
Circuit Board.....	Contact Factory
Integral Sensing Element Cable	380-9000-97

Section 5

Section 5: Troubleshooting




WARNING:

If IntelliPoint instrument is located in a hazardous environment, do not open enclosure cover or make/break any electrical connections without first disconnecting electrical power at the source. Ensure that wiring, electrical fittings, and conduit connections conform to electrical codes for the specific location and hazard level.


5.1 Testing Sensing Element

To test the sensing element, disconnect the integral cable. Refer to *Figure 5.1*.

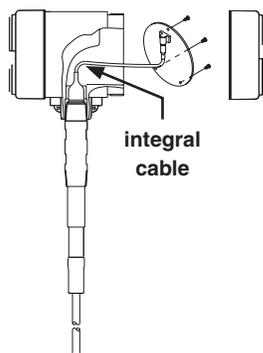

Expect the following measurements:

Three Terminal Probes without Shield Tab

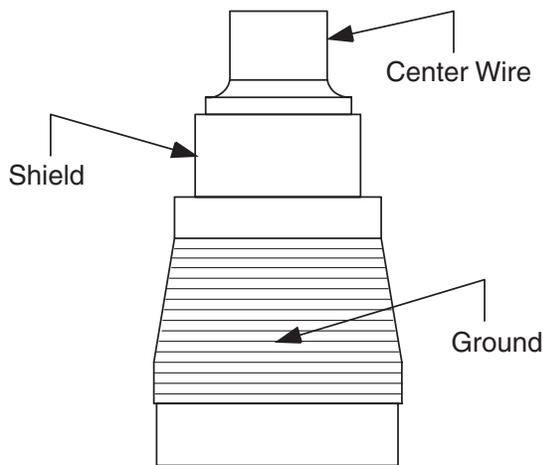


Measured Resistance (Sensor dry and clean):

Center Wire - Shield	∞ Ohms
Center Wire - Ground	∞ Ohms
Shield - Ground	∞ Ohms



When tank level is known to be below the sensor, minimum acceptable values are:

CW-G	1000 ohms.
CW-S	600 ohms.
S-G	300 ohms.

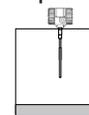

If the readings are less than the minimum acceptable values:

1. Check to see if tank is full, or if a severe coating is present.
2. Clean sensor and re-measure the sensor resistances.



Note: Low resistance readings are acceptable if the sensor is covered with a conductive liquid. Also, low resistance readings can be the result of material lodging in a long mounting nozzle. Refer to Figure 2-2.


Note: A reading of zero ohms usually indicates a metal-to-metal short circuit. Check for contact with tank wall, mounting nozzle, or other tank structure.

Resistance readings must be taken using an analog ohmmeter set to Rx1000 scale.

Figure 5.1
Testing Sensing Element

5.2 Testing Electronic Unit

This test is only a test of the electronic unit for troubleshooting purposes, and does not serve as a Verify or Certify test of the complete system.

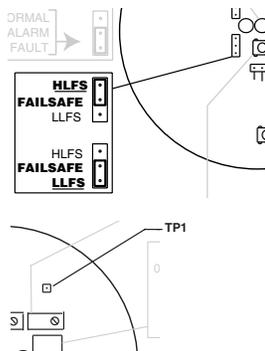

Use the following steps to test the electronic unit:

1. Be sure the environment is safe before removing the lid from the housing.
2. If possible to access the sensing element with the material below the sensor, or remove the IntelliPoint from the vessel, use your finger to touch TP1 (Shown in Figure 2-4) while holding any bare metal portion of the instrument housing with the other hand. The system should go to its alarm state.
3. Again with no material touching the sensing element, touch the tip of the sensing element with your finger, while holding any bare metal portion of the instrument housing with the other hand. The system should go to its alarm state.
4. If the IntelliPoint changes to the alarm state while touching test point TP 1, but not when touching the tip of the sensor, in most cases, the interconnecting cable is faulty. See Section 5.5: Testing Integral Cable, or Section 5.6 Testing Remote Cable.
5. If IntelliPoint changes state while touching test point, but not when touching tip of sensor, in most cases, integral cable is faulty. Refer to **Section 5.5** Testing Integral Cable.
6. If IntelliPoint is stuck in one state:
 - a. Remove power.
 - b. Disconnect coax cable that joins sensing element to electronic unit.
 - c. Apply power.
 - d. Repeat steps 3 and 4.
 - e. If IntelliPoint changes state with sensing element disconnected, in most cases, sensing element is faulty. Refer to **Section 5.1** Testing Sensing Element.
7. If IntelliPoint fails all of the above tests, in most cases the instrument is faulty. Use a replacement Input/Output Module (IOM) or circuit board to determine fault. Consult factory.

5.3 Over Range

If the Red LED is flashing quickly (4 times per second), instrument has detected that uncovered sensing element capacitance exceeds limits of transmitter. Consult factory for pad capacitor values and instructions.

5.4 Under Range

If the Red LED is flashing slowly (once per second), instrument has detected that pad capacitor value is too large. Consult factory for pad capacitor values.

5.5 Testing Integral Cable

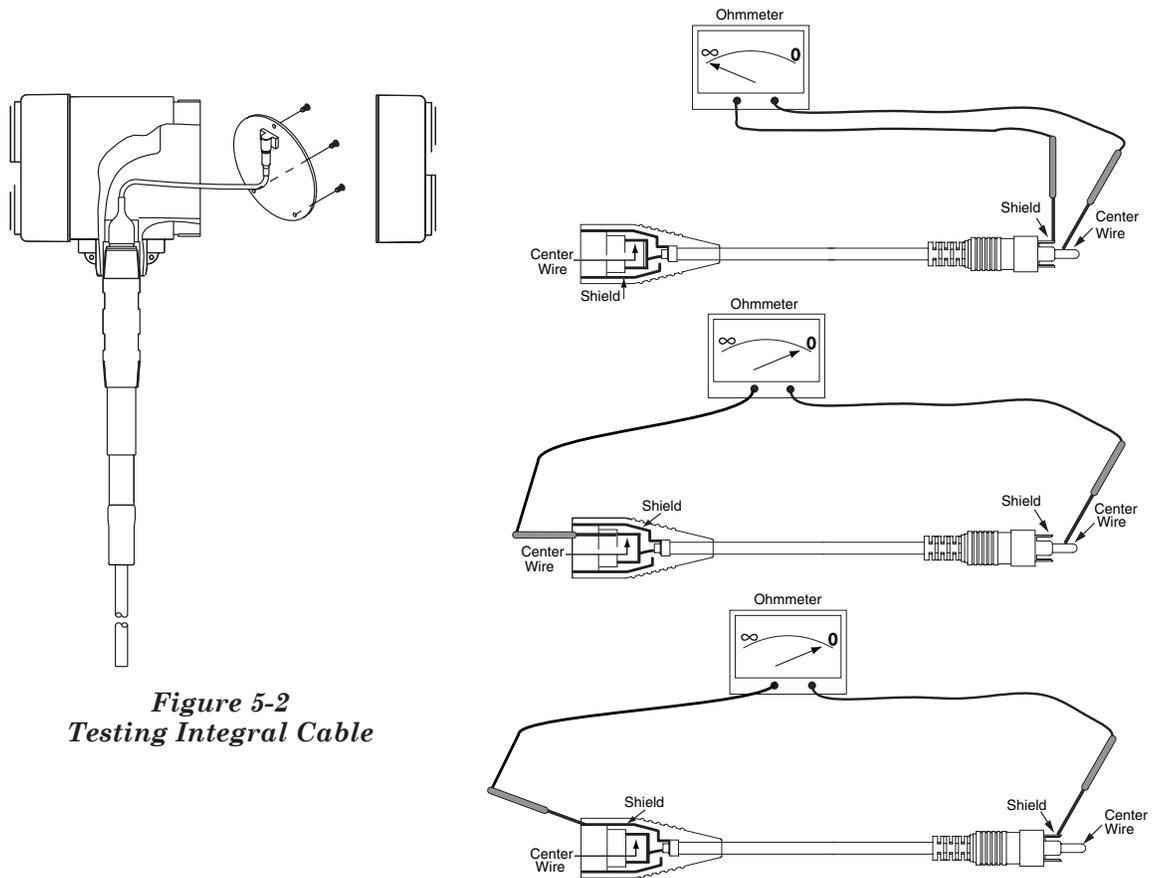


Figure 5-2
Testing Integral Cable

5.6 Testing Remote Cable

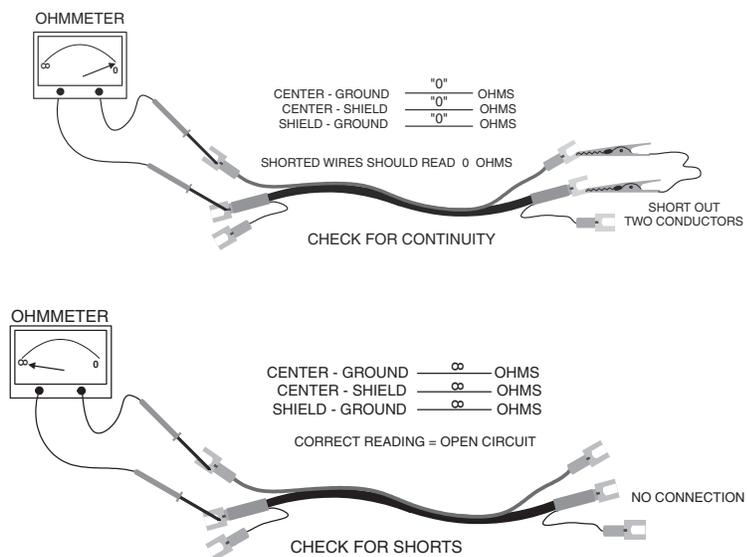


Figure 5-3
Testing Remote Cable

5.7 Testing Power Supply

Power supply can be tested separately as follows:



A. Remove power from electronic unit.

B. Remove three screws holding circuit board into housing.


C. Disconnect sensing element connection. Refer to **Figure 2-6 or 2-7**.



D. Reapply power.

E. Using a DC voltmeter, measure voltage from -5 to Common and +5 to Common. Correct readings are -5 to -6 and +5 to +6 Vdc. See **Figure 5-4**.

Figure 5-4
Testing Power Supply
VIEW INTO CUSTOMER
CONNECTIONS SIDE

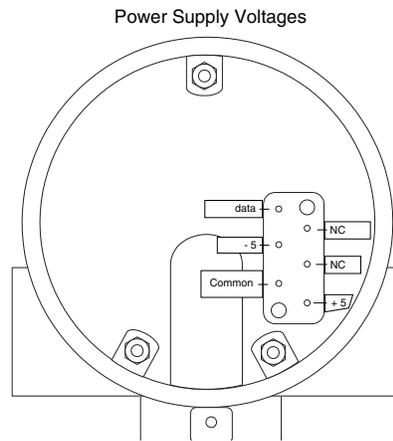

5.8 Factory Assistance

AMETEK Drexelbrook can answer any questions about your level measurement system. Call Customer Service at 1-800-553-9092 (US and Canada) , or +1-215-674-1234

If you require assistance and attempts to locate the problem have failed:

- **Contact** your local Drexelbrook representative
- **Call** the Service department toll-free:
1-800-527-6297 (US and Canada), or +1-215-674-1234
- **FAX** the Service department at +1-215-443-5117
- **E-Mail** to drexelbrook.service@ametek.com

Please provide the following information:

- Instrument Model Number
- Sensing Element Model Number and Length
- Original Purchase Order Number
- Material being measured
- Temperature
- Pressure
- Agitation
- Brief description of the problem
- Checkout procedures that have failed

5.9 Field Service

Trained field servicemen are available on a time-plus-expense basis to assist in start-ups, diagnosing difficult application problems, or in-plant training of personnel. Contact the service department for further details.

5.10 Customer Training

Periodically AMETEK Drexelbrook holds customer training seminars at the factory where the instruments are made. Guided by Drexelbrook engineers and specialists these sessions provide detailed information on all aspects of level measurement, from theory to the practice of instrument operation. For more information about these valuable workshops, write to AMETEK Drexelbrook, attention: Communications/ Training Group, or call direct +1-215-674-1234.

5.11 Equipment Return

In order to provide the best service, any equipment being returned for repair or credit must be pre-approved by the factory.

In many applications, sensing elements are exposed to hazardous materials.

- OSHA mandates that our employees be informed and protected from hazardous chemicals.
- Material Safety Data Sheets (MSDS) listing the hazardous materials to which the sensing element has been exposed MUST accompany any repair.
- It is your responsibility to fully disclose all chemicals and decontaminate the sensing element.

To obtain a Return Authorization Number (RA#), contact the Service department at 1-800-527-6297 (US and Canada) or +1-215-674-1234.

Please provide the following information:

- Model Number of Return Equipment
- Serial Number
- Original Purchase Order Number
- Process Materials to which equipment has been exposed.
- MSDS sheets for any hazardous materials

- Billing Address
- Shipping Address
- Purchase Order Number for Repairs

Please include a purchase order even if the repair is under warranty. If repair is covered under warranty, you will not be charged.

Ship equipment freight prepaid to:
AMETEK-DREXELBROOK.
205 KEITH VALLEY ROAD
HORSHAM, PA 19044-1499

COD shipments will not be accepted.

Section 6: Specifications

Technology:	RF/Capacitance
Calibration:	None
Modes of Operation:	High and Low level
Repeatability:	2mm (0.08 inch) conductive liquids
Response Time:	Less than 1 second
Time Delay:	0 to 60 seconds forward and reverse acting
Ambient Electronics:	-30 to 70°C (-28 to 158°F) NEMKO -40 to 70°C (-40 to 158°F) FM / CSA
Storage Temperature:	-40 to 85°C (-40 to 185°F)
Indicators:	LEDs: Green Power, Red Alarm Status
Self-Check:	Continuous AutoVerify and Manual Certify
Power Supply:	13 to 30 VDC <i>Note: The minimum supply voltage at the transmitter terminal is:</i> 13 VDC at 22mA (Fault) 19 VDC at 5mA (Fault)
Power Consumption:	1 watt maximum
Output:	8 mA - Alarm 16 mA - Normal 22 mA - Fault (or field-selectable) 8 mA - Normal 16 mA - Alarm 5 mA - Fault
Housing (Electronics):	Dual Compartment, powder-coated aluminum with two cable entries
Cable Entry:	M20 x 1.5 ATEX ¾-inch NPT FM/CSA
Ingress Protection:	IP66 NEMA 4X


Section 7

Section 7: Control Drawings

7.1 FM Control Drawings

NO. 420-0004-173-CD

SHT. 1 OF 15

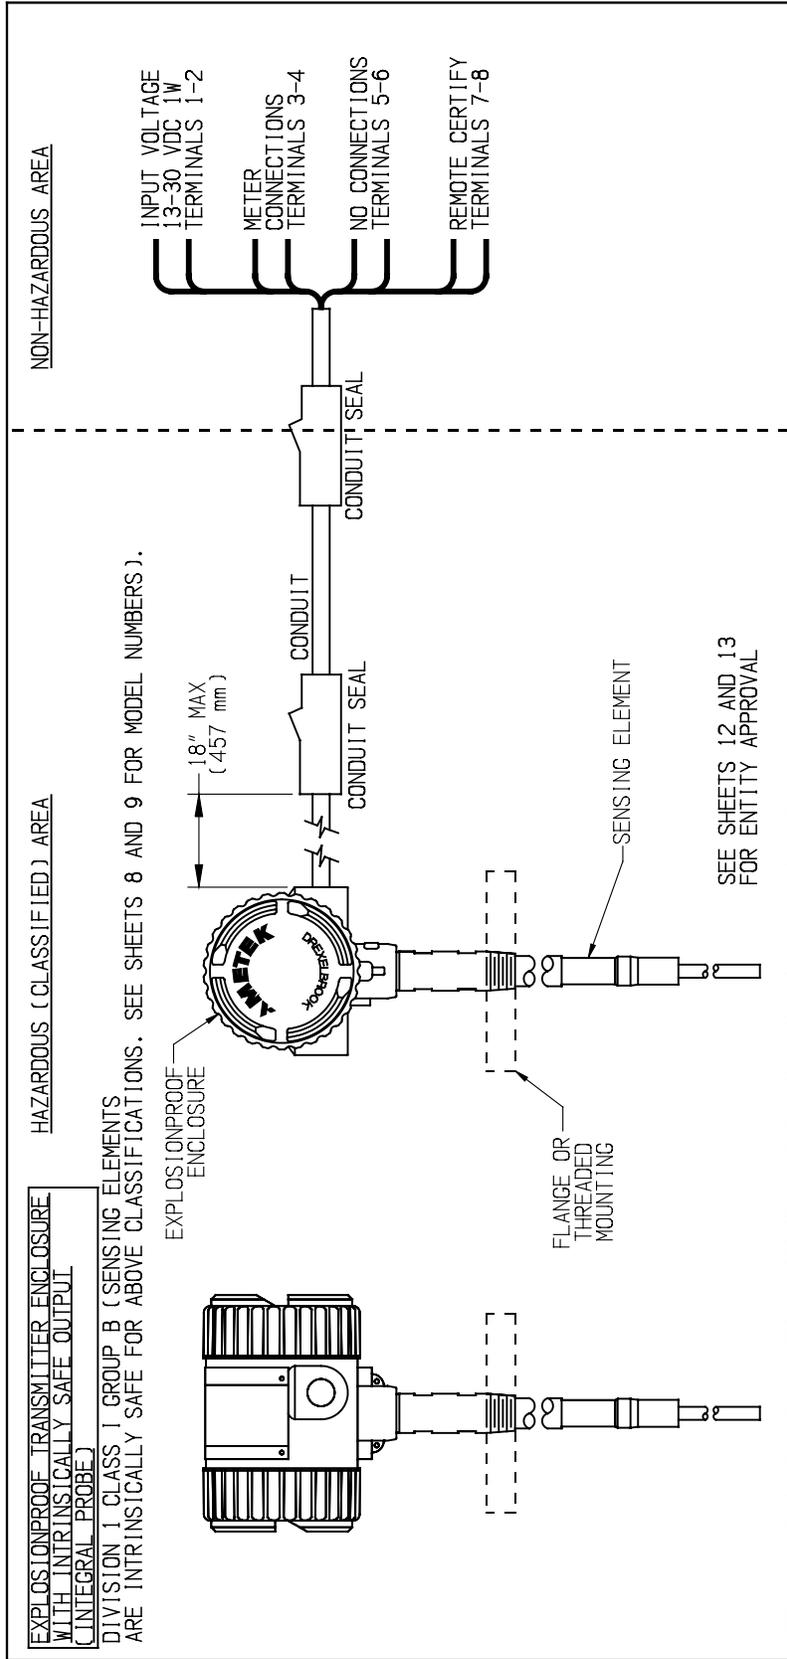

MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 8 AND 9


NOTES:

1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED	by _____	8	1-09-106	SGA	1-16-09	COPYRIGHT 2009	AMETEK®	
PO #	_____	7	11-08-100	SGA	11-6-08	AMETEK DREXELBROOK	DREXELBROOK	
ENG	_____	6	3-08-105	SGA	3-10-08	SCALE NONE	FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS I, DIVISION 1, GROUP B (INTEGRAL)	
USER	_____	5	5-07-113	THP	5-16-07	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	420-0004-173-CD SHT. 1 OF 15	
ISS. #	_____	4	1-06-216	THP	2-5-07	DR. JJS 1-14-09	215-674-1234 215-674-9986	
DATE	_____	3	6-10-09	LEP	6-10-09	CK. _____	205 KEITH VALLEY RD HORSHAM, PA 19044-9986	

7.1 FM Control Drawings (Continued)

No. 420-0004-173-CD SHEET 2 OF 15

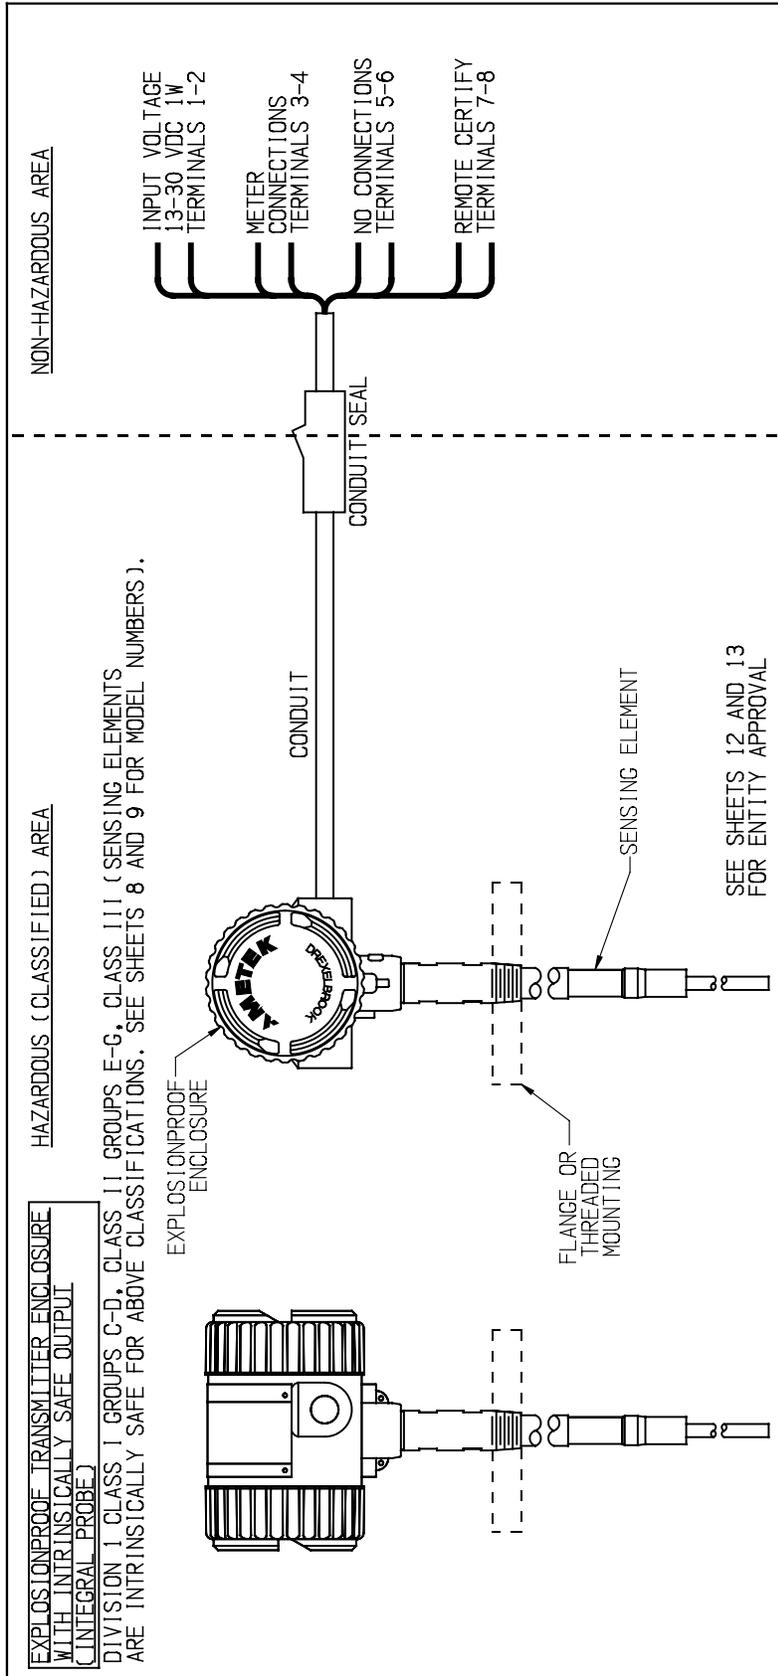

MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 8 AND 9

NOTES:


1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED		by		COPYRIGHT 2009		FM CONTROL DRAWING FOR	
PO #	8	1-09-106	SGA	1-16-09	AMETEK DREXELBROOK	2-WIRE	
ENG	7	11-08-100	SGA	11-6-08	UNLESS OTHERWISE STATED	INTELLIPOINT SERIES	
USER	6	3-08-105	SGA	3-10-08	ALL DIMENSIONS IN INCHES (MM)	CLASS I, II, III,	
	5	5-07-113	THP	5-16-07		DIVISION 1,	
	4	1-06-216	THP	2-5-07		GROUPS C-G (INTEGRAL)	
ISS. EDO/DSR NO.	APP'D	DATE	DR.	JJS 1-14-09	420-0004-173-CD		
DE #	CK.	LEP 6-10-09			SHEET 2 OF 15		
				DR. JJS 1-14-09		ISS. OF 15	
				AMETEK®		OF 15	
				DREXELBROOK		OF 15	
				205 KEITH VALLEY RD		OF 15	
				HORSHAM, PA 19044-9986		OF 15	
				215-674-1234		OF 15	
				FAX 215-674-2731		OF 15	

7.1 FM Control Drawings (Continued)

№. 420-0004-173-CD

SHT 3 OF 15

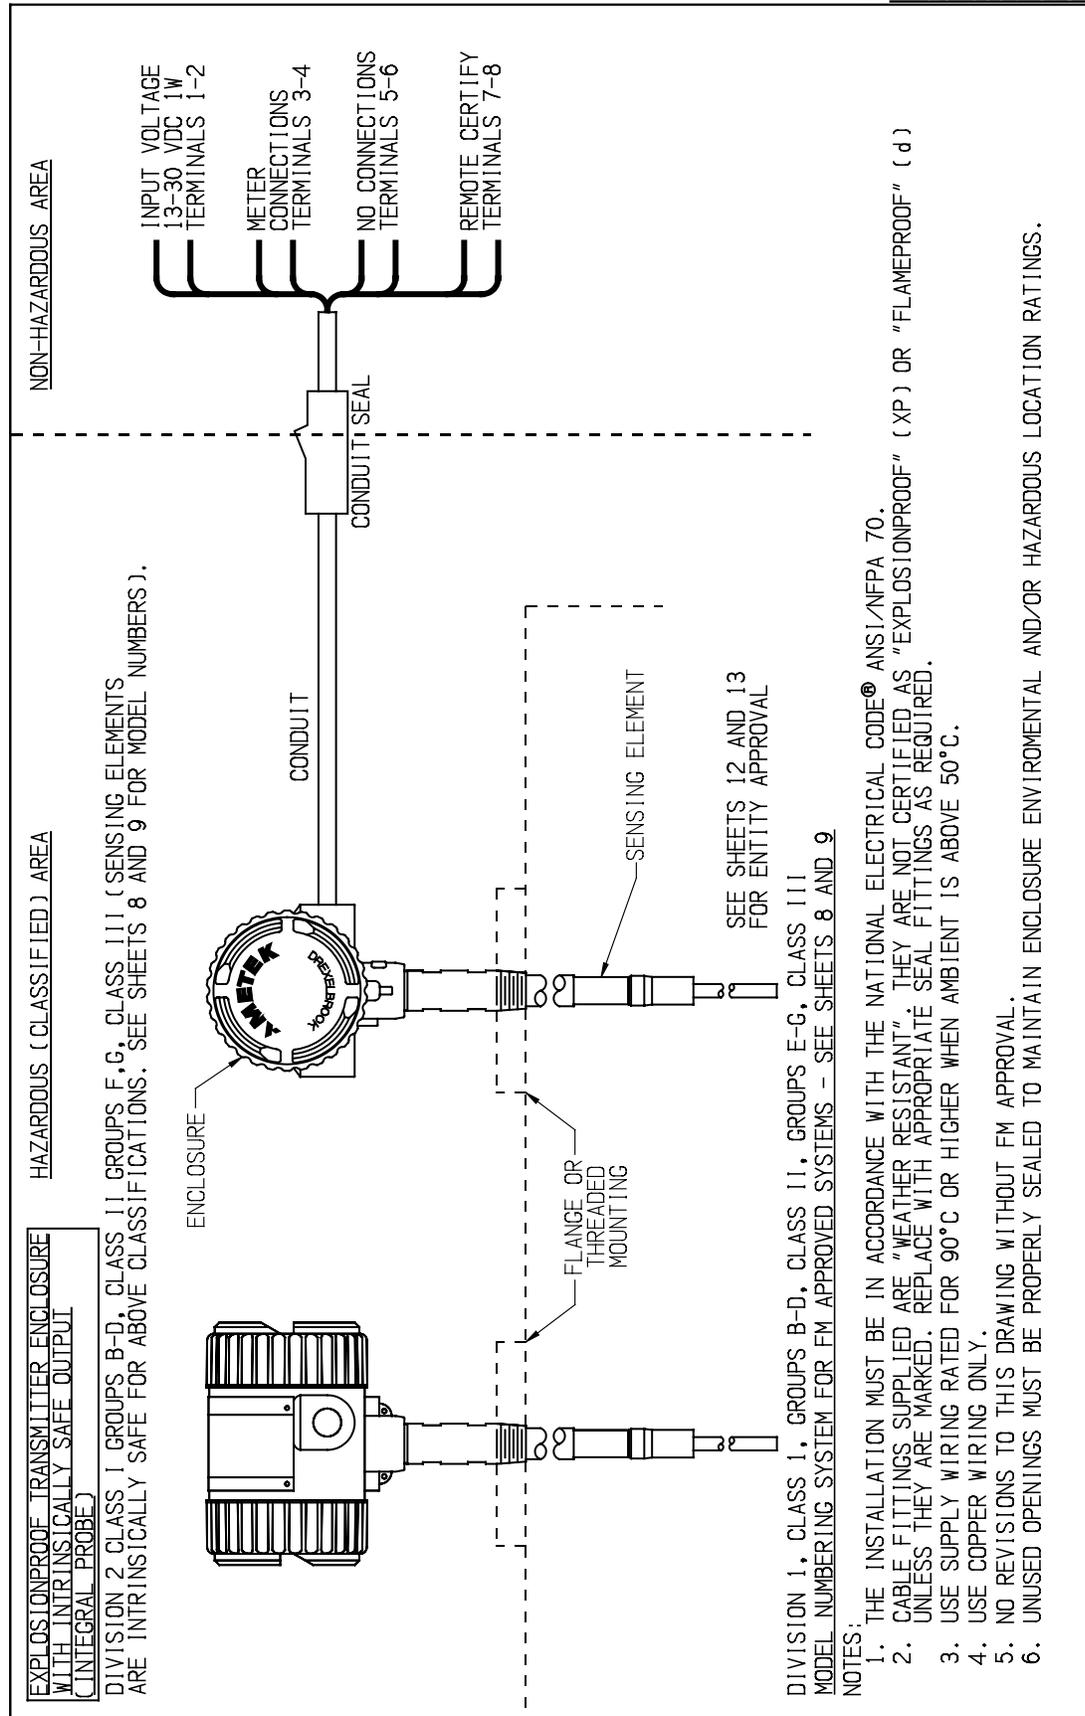

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (INTEGRAL PROBE)

HAZARDOUS (CLASSIFIED) AREA

NON-HAZARDOUS AREA


DIVISION 2 CLASS 1 GROUPS B-D, CLASS II GROUPS F-G, CLASS III (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 8 AND 9 FOR MODEL NUMBERS).

SEE SHEETS 12 AND 13 FOR ENTITY APPROVAL

DIVISION 1, CLASS 1, GROUPS B-D, CLASS II, GROUPS E-G, CLASS III MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 8 AND 9


- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT" THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED		COPYRIGHT 2009		AMETEK DREXELBROOK		FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES DIVISION 2 (INTEGRAL)	
PO #	by	8 1-09-106	SGA	1-16-09	AMETEK DREXELBROOK		
ENG		7 11-08-100	SGA	11-6-08			
USER		6 3-08-105	SGA	3-10-08	SCALE NONE UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)		
		5 5-07-113	THP	5-16-07			
		4 1-06-216	THP	2-5-07	DR. JJS 1-14-09		
DE #		ISS. EDD/DSR NO. APP' D	DATE	CHK.	SEP 6-10-09		
						420-0004-173-CD	
						SHT. 3 OF 15	
						ISS. OF 15	

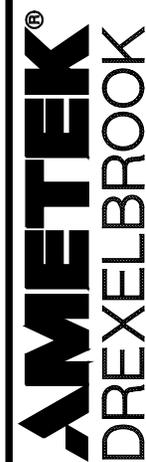

205 KEITH VALLEY RD
HORSHAM, PA. 19044-9886
215-674-1234
FAX 215-674-2731

7.1 FM Control Drawings (Continued)

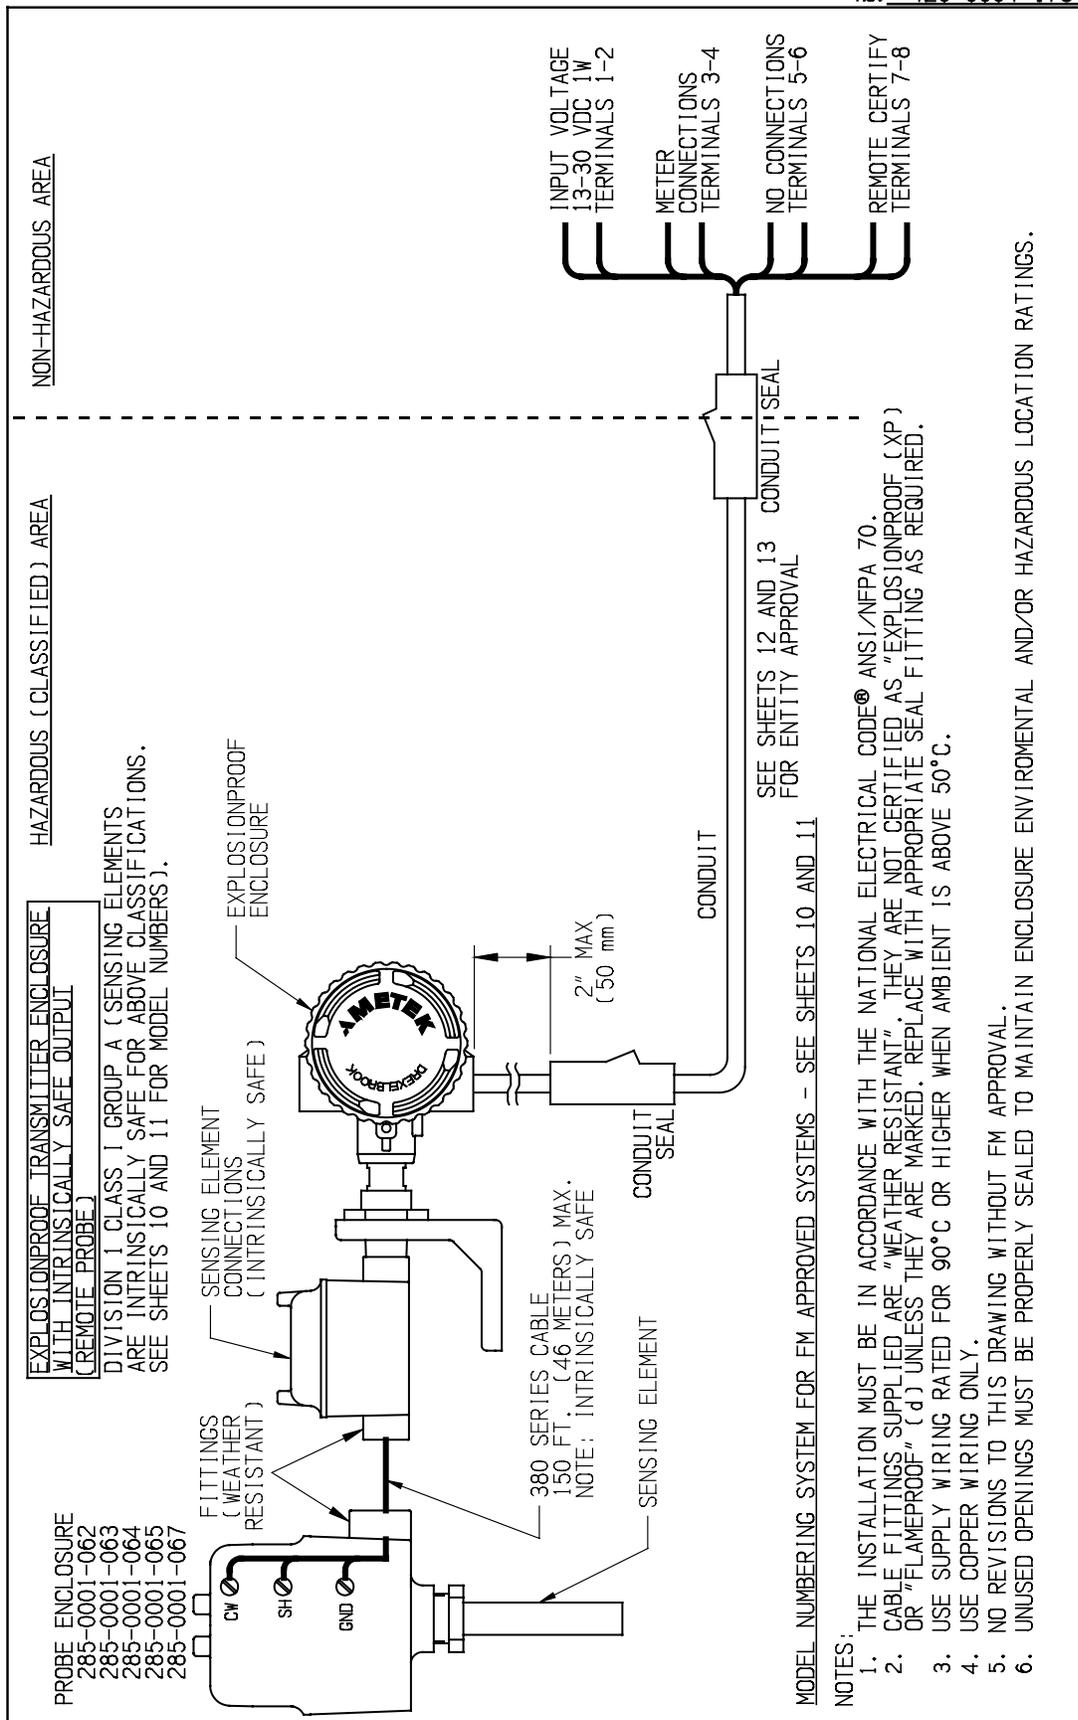

420-0004-173-CD

SHT 4 OF 15

FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS 1, DIVISION 1 GROUP A (REMOTE)

420-0004-173-CD

SHT. 4 OF 15

AMETEK®
DREXELBROOK


205 KEITH VALLEY RD
 HORSHAM, PA 19044-9886

215-674-1234
 FAX 215-674-2731

CERTIFIED	by	8	1-09-106	SGA	1-16-09	COPYRIGHT 2009
PO #		7	11-08-100	SGA	11-6-08	AMETEK DREXELBROOK
ENG		6	3-08-105	SGA	3-10-08	SCALE NONE
USER		5	5-07-113	THP	5-16-07	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
ISS.	EDD/DSR NO.	4	1-06-216	THP	2-5-07	DR. JJS 1-14-09
DE #	APP'D					CK. LEP 6-10-09
	DATE					

7.1 FM Control Drawings (Continued)

420-0004-173-CD SHEET 5 OF 15

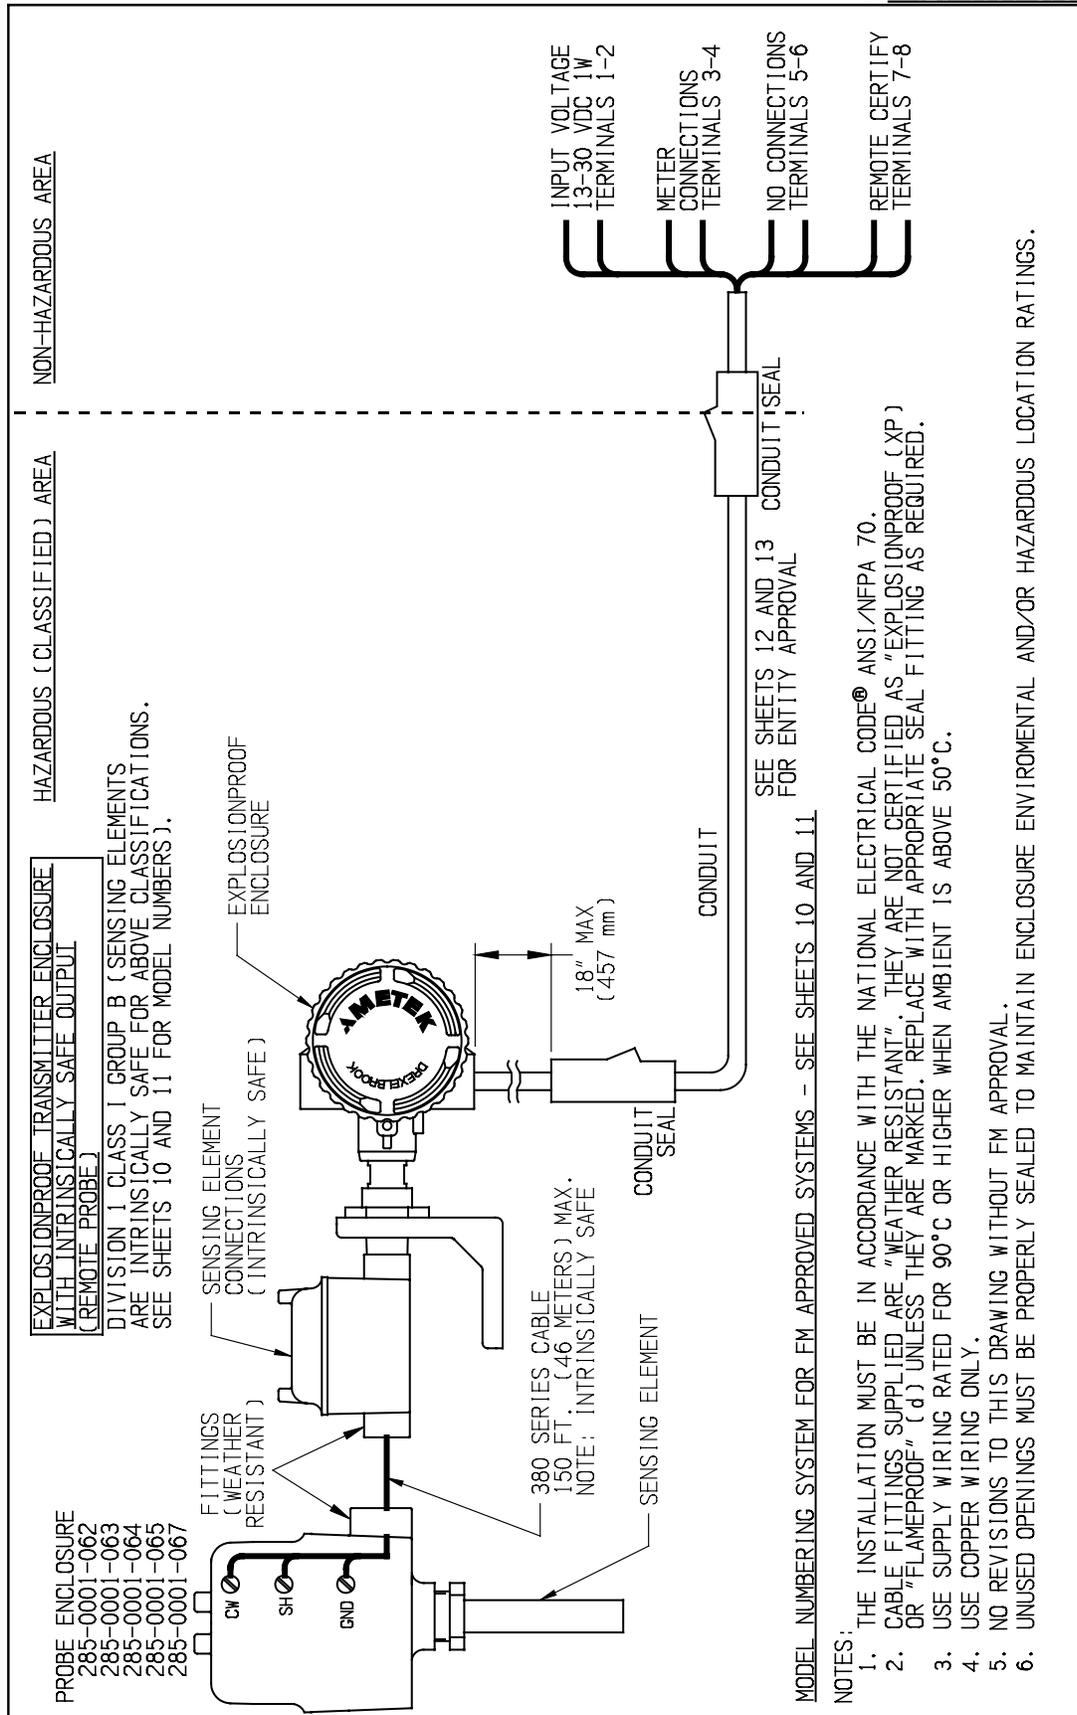

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (REMOTE PROBE)
 DIVISION 1 CLASS I GROUP B (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 10 AND 11 FOR MODEL NUMBERS).

HAZARDOUS (CLASSIFIED) AREA

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (REMOTE PROBE)
 DIVISION 1 CLASS I GROUP B (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 10 AND 11 FOR MODEL NUMBERS).

NON-HAZARDOUS AREA

MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 10 AND 11

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTING AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS I, DIVISION 1 GROUP B (REMOTE)

AMETEK®
DREXELBROOK

215-674-1234
 FAX 215-674-2731


205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

420-0004-173-CD SHEET 5 OF 15

CERTIFIED	8	1-09-106	SGA	1-16-09	COPYRIGHT 2009
PO #	7	11-08-100	SGA	11-6-08	AMETEK DREXELBROOK
ENG	6	3-06-105	SGA	3-10-08	SCALE NONE
USER	5	5-07-113	THP	5-16-07	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (IN)
ISS. #	4	1-06-216	THP	2-5-07	DR. JUS 1-14-09
DATE	CK.	LEP 6-10-09			

7.1 FM Control Drawings (Continued)

No. 420-0004-173-CD SHT 6 OF 15

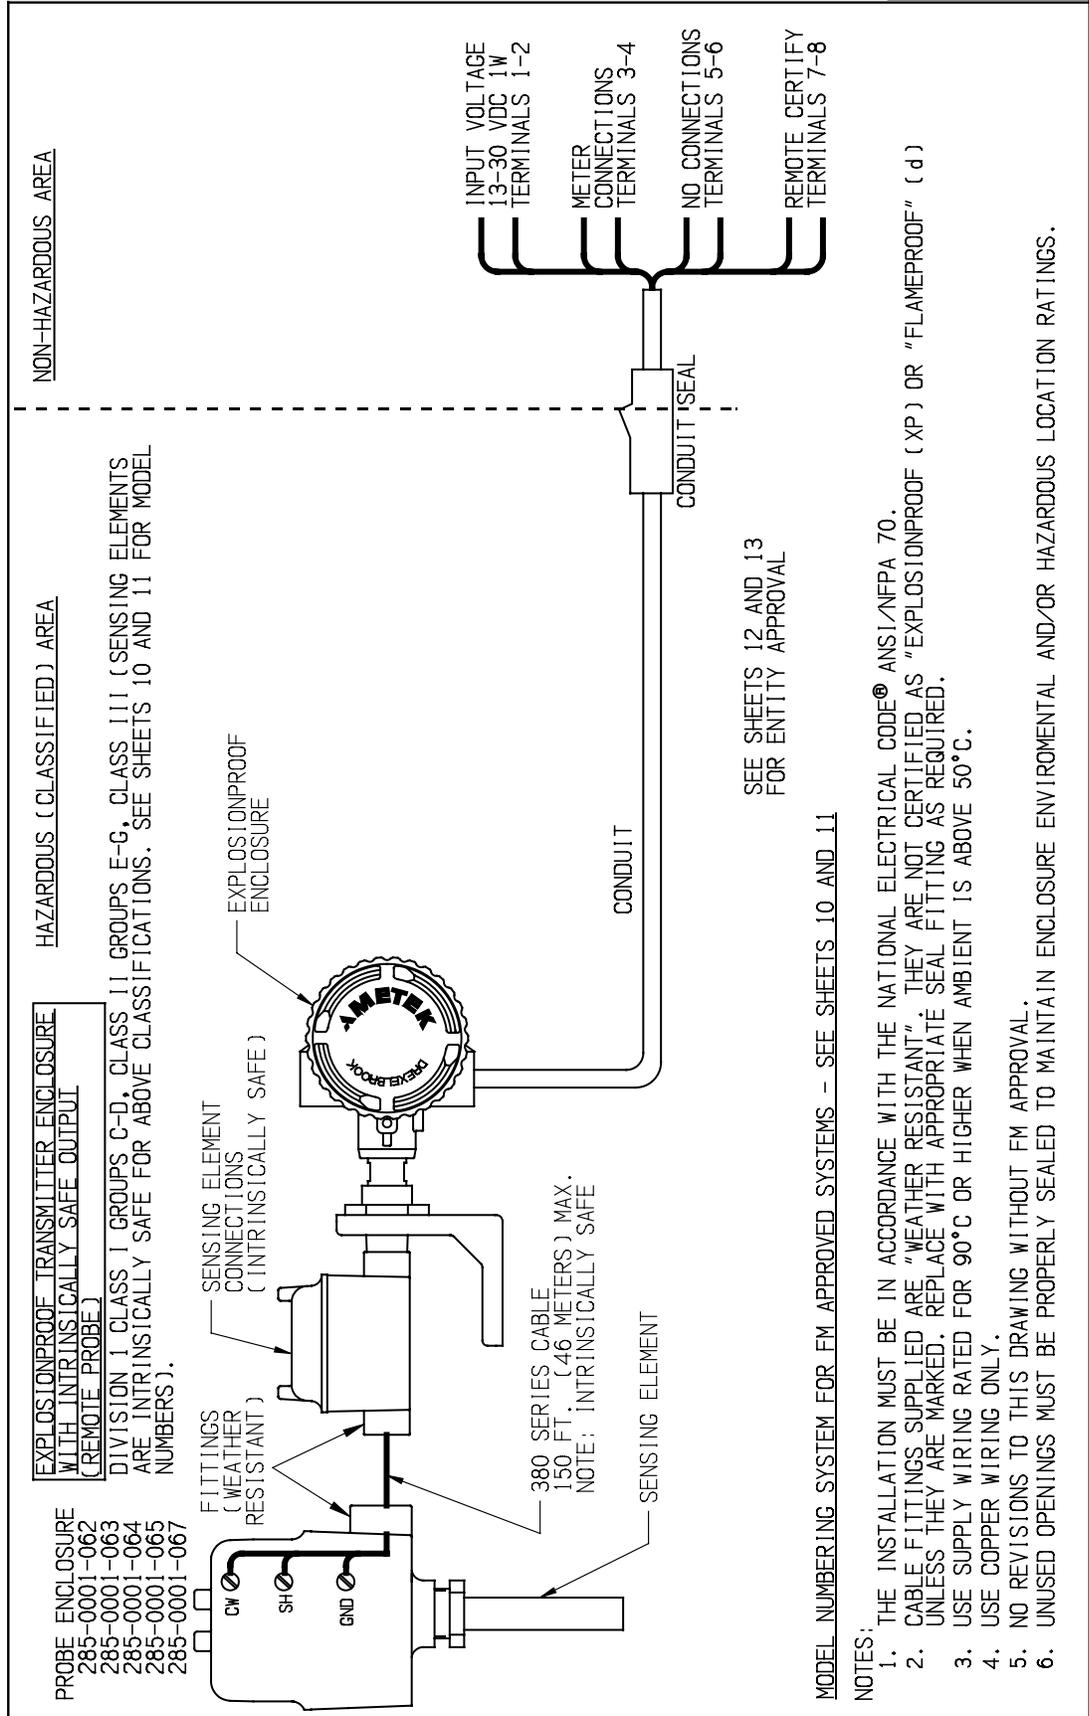

SEE SHEETS 12 AND 13 FOR ENTITY APPROVAL

MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 10 AND 11


NOTES:

1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTING AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED by _____		8	1-09-106	SGA	1-16-09	COPYRIGHT 2009	FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS I, II, III, DIVISION I GROUP C-G (REMOTE)	
PO #	_____	7	11-08-100	SGA	11-6-08	AMETEK DREXELBROOK	420-0004-173-CD SHT. 6 OF 15	
ENG	_____	6	3-08-105	SGA	3-10-08	SCALE NONE UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	ISS. OF 8	
USER	_____	5	5-07-113	THP	5-16-07	DR. JJS 1-14-09	215-674-1234 FAX 215-674-2731	
DE #	_____	4	1-06-216	THP	2-5-07	CK. LEP 6-10-09	205 KEITH VALLEY RD HORSHAM, PA 19044-9986	

7.1 FM Control Drawings (Continued)

No. 420-0004-173-CD SHT 7 OF 15

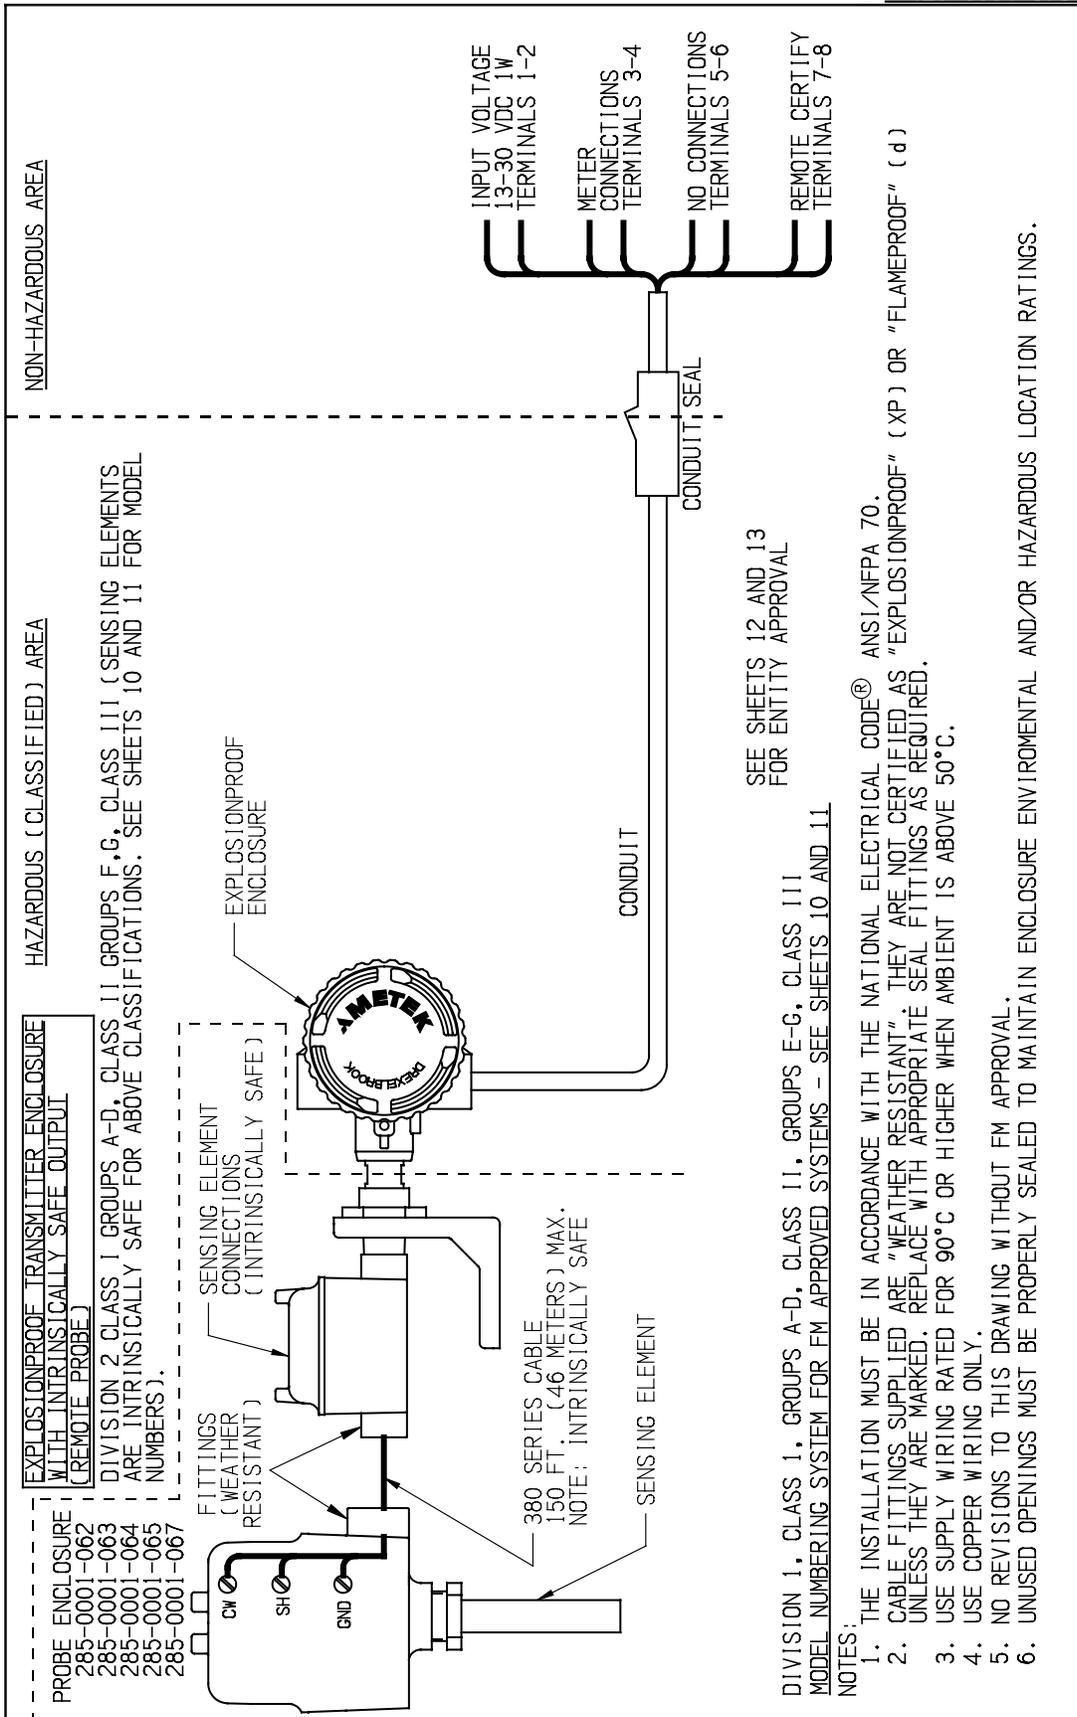

DIVISION 1, CLASS 1, GROUPS A-D, CLASS II, GROUPS E-G, CLASS III MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 10 AND 11

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED		by _____		COPYRIGHT 2009	
PO #		8	1-09-106	SGA	1-16-09
ENG		7	11-08-100	SGA	11-6-08
USER		6	3-08-105	SGA	3-10-08
		5	5-07-113	THP	5-16-07
		4	1-06-216	THP	2-5-07
ISS.#	EDD/DSR NO./APP'D	DATE		DR. J.S. 1-14-09	
		DATE		CK. LEP 6-10-09	
<p style="text-align: center;">AMETEK® DREXELBROOK</p> <p style="text-align: center;">205 KETH VALLEY RD HORSHAM, PA 19044-9886 215-674-1234 FAX 215-674-2731</p>					
<p style="text-align: center;">FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES DIVISION 2 (REMOTE)</p>					
<p style="text-align: center;">420-0004-173-CD SHT. 7 OF 15</p>					

7.1 FM Control Drawings (Continued)

700-0001-001	700-0002-055	700-0018-126
700-0001-002	700-0002-056	700-0018-134
700-0001-004	700-0002-057	700-0018-144
700-0001-005	700-0002-059	700-0018-222
700-0001-007	700-0002-060	700-0018-226
700-0001-012	700-0002-061	700-0018-234
700-0001-013	700-0002-062	700-0018-242
700-0001-014	700-0002-063	700-0018-243
700-0001-016	700-0002-064	700-0018-245
700-0001-022	700-0002-321	700-0018-246
700-0001-023	700-0002-360	700-0018-262
700-0001-024	700-0003-009	700-0021-001
700-0001-026	700-0004-038	700-0021-002
700-0001-029	700-0004-045	700-0021-003
700-0001-034	700-0004-050	700-0021-007
700-0001-035	700-0005-012	700-0021-008
700-0001-038	700-0005-014	700-0201-005
700-0001-039	700-0005-018	700-0201-008
700-0001-042	700-0005-028	700-0201-009
700-0001-044	700-0005-035	700-0201-010
700-0001-045	700-0005-038	700-0201-015
700-0001-051	700-0005-045	700-0201-016
700-0001-052	700-0005-048	700-0201-018
700-0001-053	700-0005-054	700-0201-025
700-0001-054	700-0005-114	700-0201-026
700-0001-061	700-0005-148	700-0201-035
700-0001-062	700-0005-214	700-0201-036
700-0001-063	700-0005-314	700-0201-105
700-0001-064	700-0005-348	700-0201-108
700-0001-324	700-0005-354	700-0201-109
700-0001-344	700-0005-494	700-0201-118
700-0002-012	700-0005-594	700-0201-135
700-0002-018	700-0008-122	700-0202-002
700-0002-021	700-0008-123	700-0202-004
700-0002-022	700-0008-124	700-0202-019
700-0002-023	700-0008-126	700-0202-023
700-0002-024	700-0008-134	700-0202-024
700-0002-025	700-0008-144	700-0202-033
700-0002-027	700-0008-222	700-0202-036
700-0002-028	700-0008-226	700-0202-043
700-0002-029	700-0008-234	700-0202-102
700-0002-033	700-0008-242	700-0204-038
700-0002-035	700-0008-243	700-0204-045
700-0002-036	700-0008-245	700-0204-048
700-0002-037	700-0008-246	700-0221-002
700-0002-039	700-0008-262	700-1202-001
700-0002-041	700-0009-002	700-1202-018
700-0002-042	700-0009-024	700-1202-020
700-0002-043	700-0011-001	700-1202-021
700-0002-044	700-0011-003	700-1202-022
700-0002-047	700-0011-004	700-1202-024
700-0002-051	700-0011-015	700-1202-028
700-0002-052	700-0018-122	700-1202-032
700-0002-053	700-0018-123	700-1202-034
700-0002-054	700-0018-124	700-1202-041
		700-1202-042

COPYRIGHT 2009
 AMETEK DREXELBROOK
 SCALE NONE
 UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 1-14-09
 CK. LEP 6-10-09

NO. 420-0004-173-CD

CERTIFIED _____ by _____
 PO # _____
 ENG _____
 USER _____
 DE # _____

8	1-09-106	SGA	1-16-09
7	11-08-100	SGA	3-10-08
6	3-08-105	SGA	3-10-08
5	5-07-113	THP	5-16-07
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986
 215-674-1234
 FAX 215-674-2731

FM APPROVED
 ADDITIONAL INTEGRAL
 SENSING ELEMENTS
 420-0004-173-CD
 SHIT 9 OF 15
 ISS. 9 OF 15

7.1 FM Control Drawings (Continued)

MODEL NUMBERS OF APPROVED REMOTE SENSING ELEMENTS

701-mnop-qrst LEVEL PROBE

- l = FAMILY NO. 0, 4
- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2009
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 1-14-09
 CK. LEP 6-10-09

NO. 420-0004-173-CD

CERTIFIED	by _____
PO #	_____
ENG	_____
USER	_____
DE #	_____

8	1-09-106	SGA	1-16-09
7	11-08-100	SGA	3-10-08
6	3-08-105	SGA	3-10-08
5	5-07-113	THP	5-16-07
ISS.	EDO/DSR NO.	APP'D	DATE




205 KEITH VALLEY RD
 HORSHAM, PA 19044-9966
 215-674-1234
 FAX 215-674-2731

FM APPROVED
 ADDITIONAL REMOTE
 SENSING ELEMENTS

420-0004-173-CD
 SHIT.11 OF 15
 ISS. OF 8

SHIT.11 OF 15

7.1 FM Control Drawings (Continued)

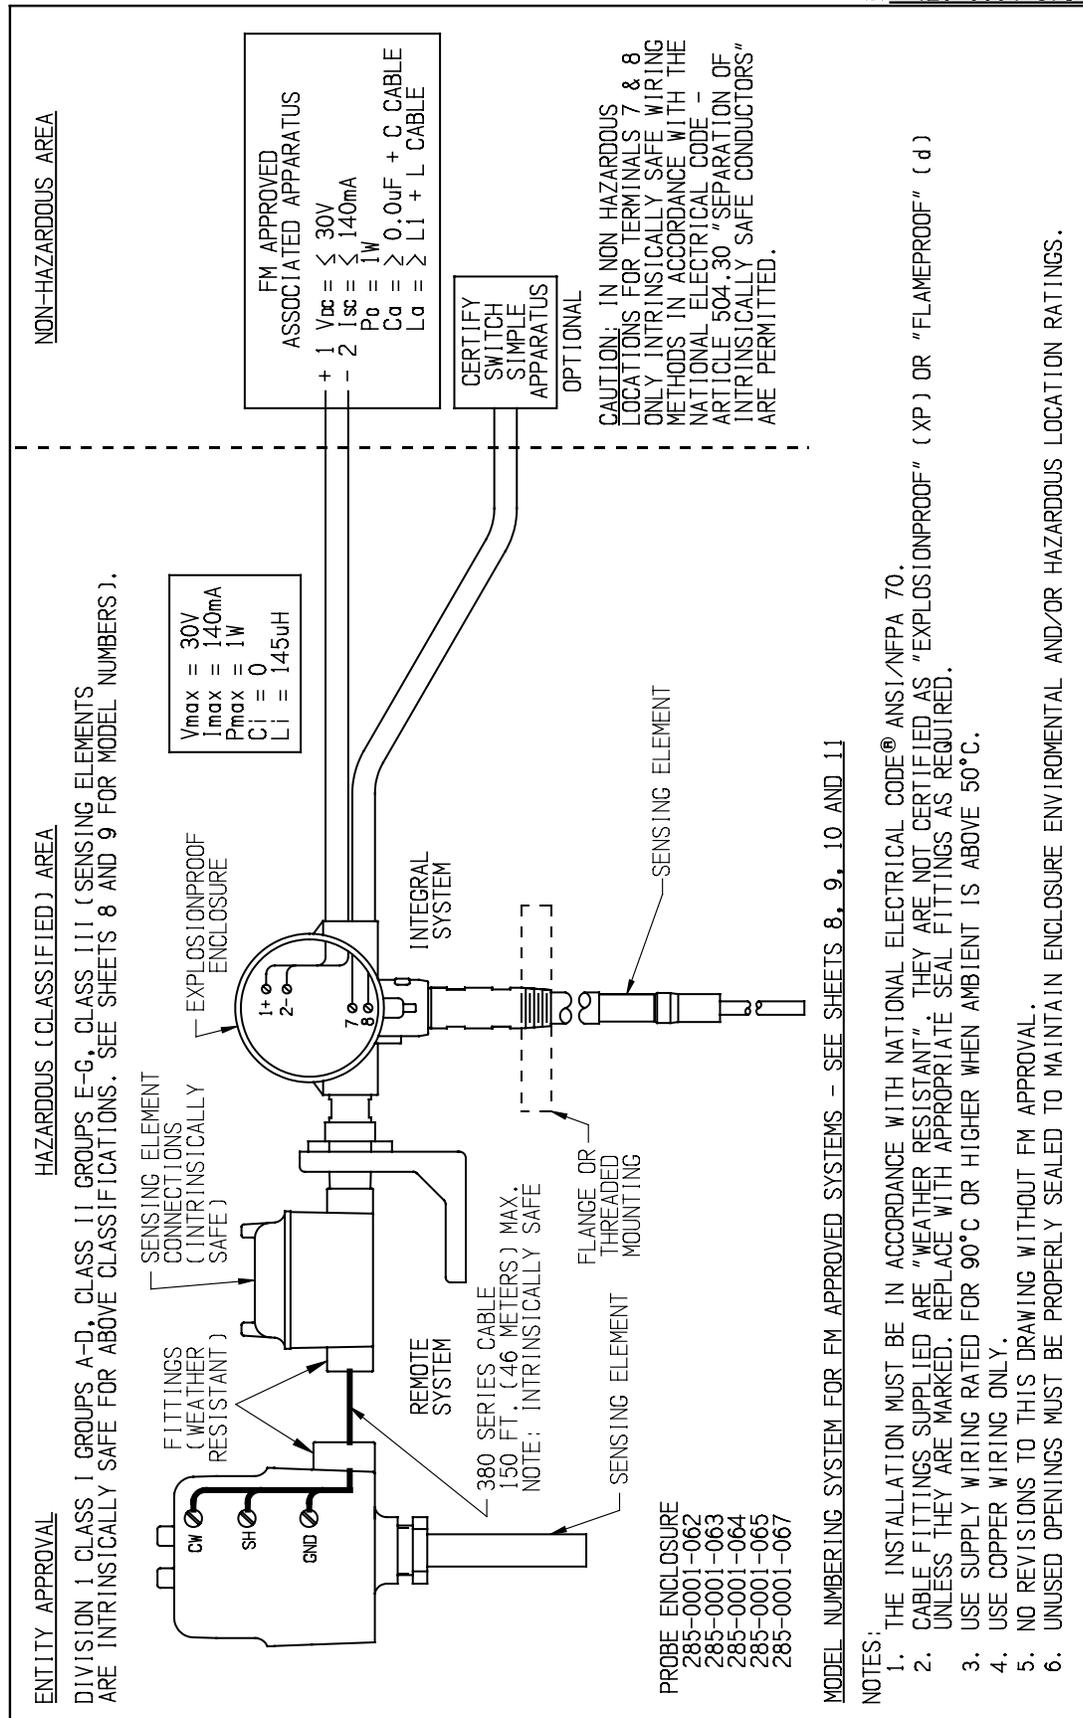


No. 420-0004-173-CD

MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 8, 9, 10 AND 11

NOTES:

1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED		by		COPYRIGHT 2009		FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS 1, II, III, DIVISION 1, ENTITY INSTALLATIONS (INTEGRAL)	
PO #	8	1-09-106	SGA	1-16-09	AMETEK DREXELBROOK		
ENG	7	11-08-100	SGA	11-6-08	SCALE NONE		
USER	6	3-08-105	SGA	3-10-08	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)		
	5	5-07-113	THP	5-16-07	DR. JJS 1-14-09		
	4	1-06-216	THP	2-5-07	CHK. LEP 6-10-09		
ISS. EDD/DSR NO.	APP'D		DATE	420-0004-173-CD			
DE #				ISS. 12		OF 15	

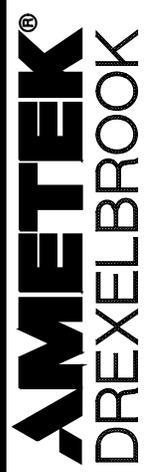


205 KEITH VALLEY RD
HORSHAM, PA 19044-9886

215-674-1234
FAX 215-674-2731

7.1 FM Control Drawings (Continued)

No. 420-0004-173-CD

SHT 13 OF 15

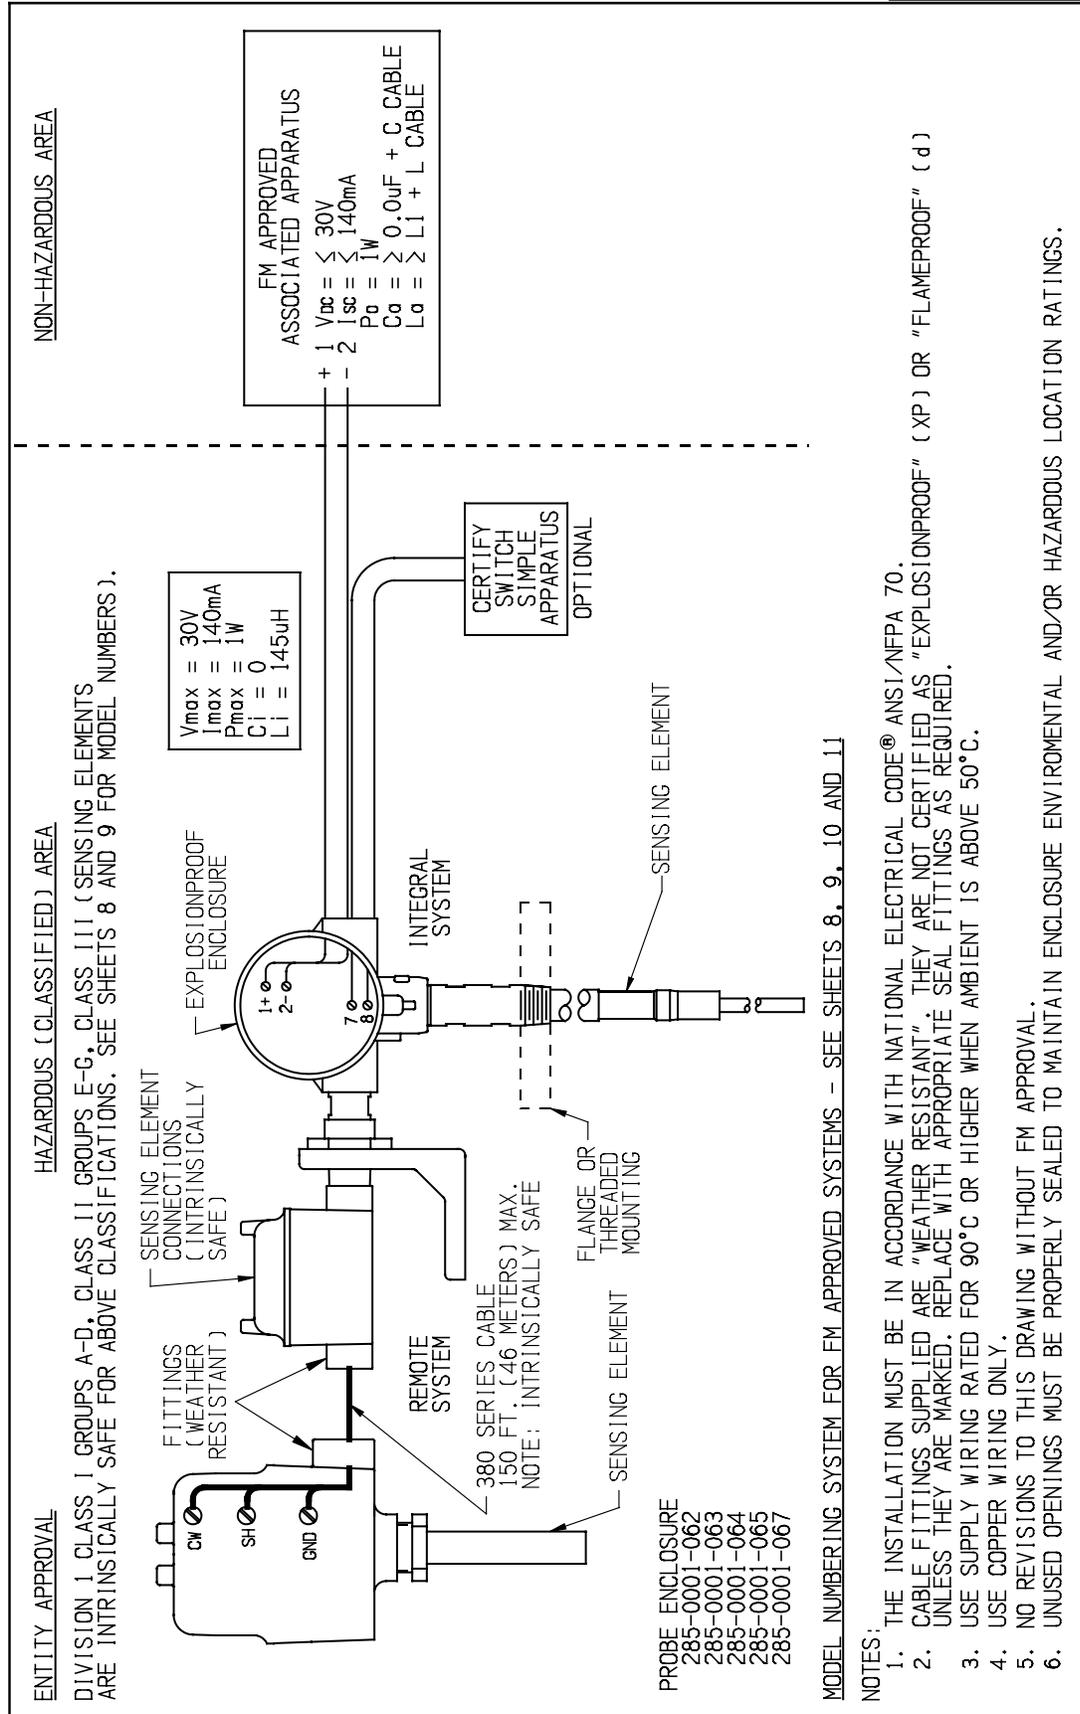

HAZARDOUS (CLASSIFIED) AREA		NON-HAZARDOUS AREA	
DIVISION 1 CLASS 1 GROUPS A-D, CLASS II GROUPS E-G, CLASS III (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 8 AND 9 FOR MODEL NUMBERS).			
ENTITY APPROVAL DIVISION 1 CLASS 1 GROUPS A-D, CLASS II GROUPS E-G, CLASS III (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 8 AND 9 FOR MODEL NUMBERS).		FM CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS I, II, III, DIVISION 1, ENTITY INSTALLATIONS (INTEGRAL)	
ENTIRE DRAWING IS THE PROPERTY OF METEKO CORPORATION. ALL RIGHTS RESERVED.		420-0004-173-CD SHT. 13 OF 15	
METEKO CORPORATION 205 KEITH VALLEY RD. HORSHAM, PA. 19044-9986		METEKO CORPORATION 215-674-1234 FAX 215-674-2731	
CERTIFIED	by	COPYRIGHT	2009
PO #		METEKO	DREXELBROOK
ENG		SCALE	NONE
USER		ALL DIMENSIONS IN INCHES (MM)	
ISS.	EDD/DSR NO.	APP'D	DATE
	8 1-09-106 SGA	1-16-09	DR. JJS 1-14-09
	7 11-08-100 SGA	11-6-08	CK. LEP 6-10-09
	6 3-08-105 SGA	3-10-08	
	5 5-07-113 THP	5-16-07	
	4 1-06-216 THP	2-5-07	

- MODEL NUMBERING SYSTEM FOR FM APPROVED SYSTEMS - SEE SHEETS 8, 9, 10 AND 11
- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT", THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

7.1 FM Control Drawings (Continued)

COLUMNS 11 AND UP DO NOT AFFECT SAFETY													
1	2	3	4	5	6	7	8	9	10	11	12	13	14
S	a	R	b	T	c	0	0	d	e	*	*	*	f
	a												a = SIL LEVEL 1 OR 2
		b											b = OPTIONS
													N = NO-CAL (STD) 2pF FIXED L = STANDARD AUTO CAL 2pF AUTO
			c										c = OPTIONS (B)
													3 = (STD)
													7 = DUAL SEAL
													C = DUAL SEAL
								d					d = 0, 1 OR Z SENSING ELEMENTS
								e					e = 0-4, 6-9, Z SENSING ELEMENTS
													SENSING ELEMENTS
								0	0				700-1202-021
								1					700-1202-022
								2					700-1202-024
								3					700-1202-028
								4					700-1202-042
								6					700-1202-032
								7					700-1202-020
								9					700-1202-034
								1	1				700-0201-005
								2					700-0201-005 HAST C
								3					700-0201-036
								6					700-0002-360
								7					700-0202-036
								8					700-0001-022
								9					700-0002-023
								Z	Z				SEE SHEET 9 FOR A LIST OF OTHER APPROVED INTEGRAL SENSING ELEMENTS
													f
													f = A-F, G, H, J, K, L OR Z
													INSERTION LENGTH/COTE SHIELD LENGTH
													A 6"/2" & 152.4mm/50.8mm
													B 12"/2" & 304.8mm/50.8mm
													C 12"/3.5" & 304.8mm/88.9mm
													D 18"/2" & 457.2mm/50.8mm
													E 18"/3.5" & 457.2mm/88.9mm
													F 18"/10" & 457.2mm/254mm
													G 18"/NO CSL & 457.2mm/NO CSL
													H 36"/10" & 914.4mm/254mm
													J 36"/NO CSL & 914.4mm/NO CSL
													K 48"/10" & 1219.2mm/254mm
													L 60"/10" & 1524mm/254mm
													Z OTHER
													1 18"/6" & 457.2mm/152.4mm
													2 12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009
AMETEK DREXELBROOK

SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM)

DR. JJS 1-14-09
CK. LEP 6-10-09

CERTIFIED by _____

PD # _____

ENG _____

USER _____

DE # _____

NO. 420-0004-173-CD

SHT 14 OF 15

8	1-09-106	SGA	1-16-09		FM APPROVED INTEGRAL 2-WIRE INTELLIPOINT MODEL NUMBERING SYSTEM SIL SYSTEMS
7	11-08-100	SGA	3-10-08		
6	3-08-105	SGA	3-10-08		
5	5-07-113	THP	5-16-07		
ISS.	EDO/DSR NO.	APP' D	DATE		

205 KEITH VALLEY RD HORSHAM, PA 19044-9986 215-674-1234 FAX 215-674-2733

420-0004-173-CD SHT. 14 OF 15 ISS. 8

7.1 FM Control Drawings (Continued)

COLUMNS 11 AND UP DO NOT AFFECT SAFETY													
1	2	3	4	5	6	7	8	9	10	11	12	13	14
S	a	R	b	T	c	d	0	e	f	*	*	*	g
	a												a = SIL LEVEL 1 OR 2
	b												b = OPTIONS
													N = NO-CAL (STD) 2pF FIXED L = STANDARD AUTO CAL 2pF AUTO
					c								c = OPTIONS (Ⓢ)
													3 = (STD)
													7 = DUAL SEAL
					d								d = 1-9, A-K CABLE LENGTHS
						e							e = 0-3, 5, 6, OR Z SENSING ELEMENTS
						f							f = 0-9, OR Z SENSING ELEMENTS
													SENSING ELEMENTS
					0	0							700-1202-001
						1							700-1202-012
						2							700-1202-014
						3							700-1202-018
						4							700-1202-041
						6							700-1202-031
						7							700-1202-010
						9							700-1202-033
					1	0							700-0001-018
						1							700-0201-005
						2							700-0201-005 HAST C
						3							700-0201-036
						4							700-0202-002
						5							700-0202-043
						6							700-0002-360
						7							700-0202-036
						8							700-0001-022
						9							700-0002-023
					2	0							700-0209-002
					3	1							700-0029-001
						2							700-0029-002
						3							700-0029-003
						4							700-0029-004
						5							700-0029-005
					5	0							700-0207-001
						1							700-0207-002
						2							700-0207-003
						3							700-0207-004
						4							700-0207-005
						5							700-0207-006
					6	0							700-0204-038
						1							700-0204-002
						2							700-0204-048
					Z	Z							SEE SHEET 11 FOR ADDITIONAL APPROVED REMOTE SENSING ELEMENTS
													g
													g = A-F, G, H, J, K, L OR Z
													INSERTION LENGTH/COTE SHIELD LENGTH
						A							6"/2" & 152.4mm/50.8mm
						B							12"/2" & 304.8mm/50.8mm
						C							12"/3.5" & 304.8mm/88.9mm
						D							18"/2" & 457.2mm/50.8mm
						E							18"/3.5" & 457.2mm/88.9mm
						F							18"/10" & 457.2mm/254mm
						G							18"/NO CSL & 457.2mm/NO CSL
						H							36"/10" & 914.4mm/254mm
						J							36"/NO CSL & 914.4mm/NO CSL
						K							48"/10" & 1219.2mm/254mm
						L							60"/10" & 1524mm/254mm
						Z							OTHER
						1							18"/6" & 457.2mm/152.4mm
						2							12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 1-14-09
 CK. LEP 6-10-09

CERTIFIED by _____
 PG # _____
 ENG _____
 USER _____
 DE # _____

8	1-09-106	SGA	1-16-09
7	11-08-100	SGA	3-10-08
6	3-08-105	SGA	3-10-08
5	5-07-113	THP	5-16-07
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986
 215-674-1234
 FAX 215-674-2731

FM APPROVED REMOTE
 2-WIRE INTELLIPOINT
 MODEL NUMBERING SYSTEM
 SIL SYSTEMS

420-0004-173-CD
 SHT. 15 OF 15
 ISS. 8


NO. 420-0004-173-CD

SHT. 15 OF 15

7.2 NEMKO / ATEX Control Drawings (Continued)

No. 420-0004-175-CD

SHT 2 OF 7

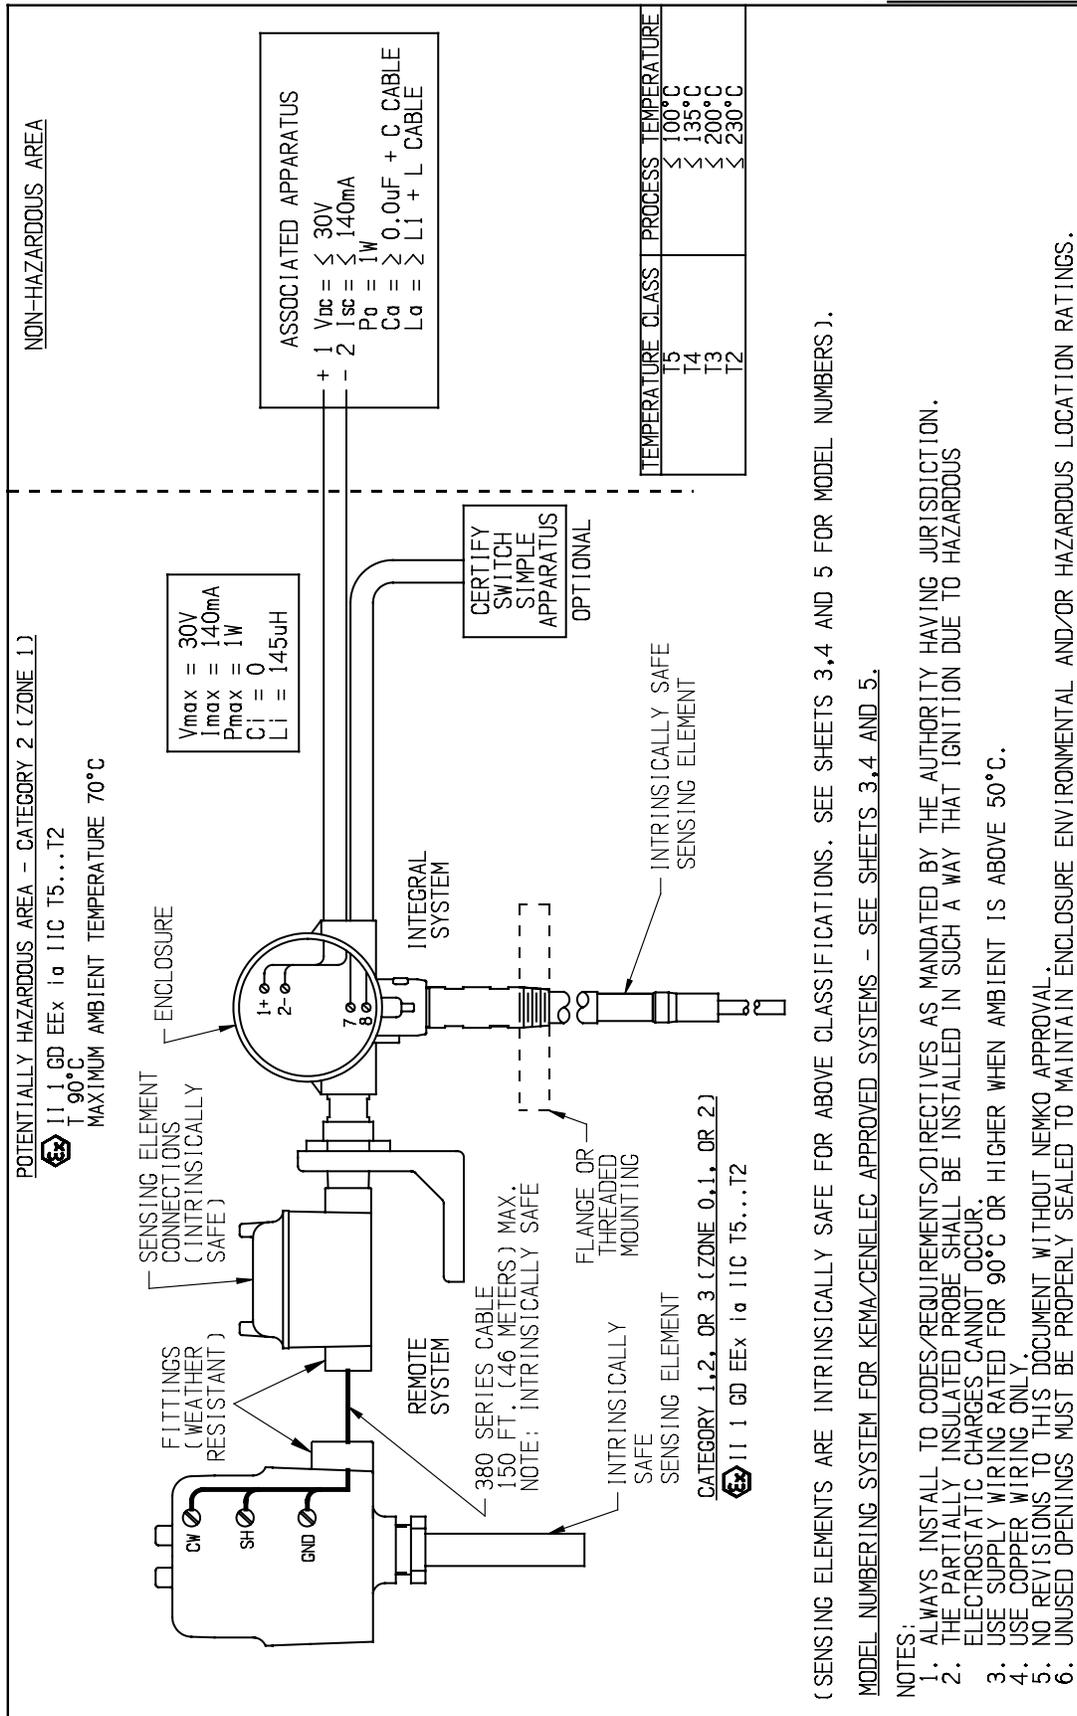

(SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 3,4 AND 5 FOR MODEL NUMBERS).

MODEL NUMBERING SYSTEM FOR KEMA/CENELEC APPROVED SYSTEMS - SEE SHEETS 3,4 AND 5.

NOTES:

1. ALWAYS INSTALL TO CODES/REQUIREMENTS/DIRECTIVES AS MANDATED BY THE AUTHORITY HAVING JURISDICTION.
2. THE PARTIALLY INSULATED PROBE SHALL BE INSTALLED IN SUCH A WAY THAT IGNITION DUE TO HAZARDOUS ELECTROSTATIC CHARGES CANNOT OCCUR.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. NO REVISIONS TO THIS DOCUMENT WITHOUT NEMKO APPROVAL.
6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED	by _____	COPYRIGHT 2009	AMETEK DREXELBROOK	NEMKO/ATEX CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES ENTITY INSTALLATIONS	ISS. SHEET OF 2 2 7
PO #	7 11-08-114	SGA	3-17-09		
ENG	6 3-08-106	SGA	3-10-08		
USER	5 5-07-111	THP	5-14-07		
	4 1-06-216	THP	2-17-06		
	3 12-02-214	SGA	1-29-04		
ISS. EDD/DSR NO. APP'D					
DATE					
DR.	JJS	1-14-09			
CHK.	LEP	5-18-09			
AMETEK®			DREXELBROOK		
205 KETH VALLEY RD. HORSHAM, PA 19044-9986			215-674-1234 FAX 215-674-2731		
			420-0004-175-CD		

7.2 NEMKO / ATEX Control Drawings (Continued)

1	2	3	4	5	6	7	8	9	10	11	12	
R	a	T	b	0	0	0	c	*	*	*	d	
	a											a = OPTIONS
												N = NO CALIBRATION POINT LEVEL
												L = STANDARD AUTO CAL
												M = MANUAL SET POINT
												T = 10pf AUTO CAL
												H = HI SENSITIVITY
												V = 10pf FIXED
												G = MANUAL SET POINT HI SENSITIVITY
												P = HI SENSITIVITY .5pf FIXED
	b											b = 2
	2											M20 KEMA/CENELEC SYSTEMS
							c					c = 0-4
												<i>SENSING ELEMENTS</i>
				0	0							700-1202-001
					1							700-1202-012
						2						700-1202-014
							3					700-1202-018
								4				700-1202-041
									6			700-1202-032
										7		700-1202-020
											9	700-1202-034
					1	1						700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT
						2						700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT
							3					700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT
								6				700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT
									7			700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT
										8		700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT
											9	700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT
				Z	Z							SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING ELEMENTS
								*	*	*		SEE MOUNTING CHART
											d	d = A-F, G, H, J, K, L OR Z
												INSERTION LENGTH/COTE SHIELD LENGTH
											A	6" / 2" & 152.4mm/50.8mm
											B	12" / 2" & 304.8mm/50.8mm
											C	12" / 3.5" & 304.8mm/88.9mm
											D	18" / 2" & 457.2mm/50.8mm
											E	18" / 3.5" & 457.2mm/88.9mm
											F	18" / 10" & 457.2mm/254mm
											G	18" / NO CSL & 457.2mm
											H	36" / 10" & 914.4mm/254mm
											J	36" / NO CSL & 914.4mm
											K	48" / 10" & 1219.2mm/254mm
											L	60" / 10" & 1524mm/254mm
											Z	OTHER
											1	18" / 6" & 457.2mm/152.4mm
											2	12" / 6" & 304.8mm/152.4mm

COPYRIGHT 2009	
AMETEK DREXELBROOK	
SCALE NONE	
UNLESS OTHERWISE STATED	
ALL DIMENSIONS IN INCHES (MM)	
DR.	JJS 1-14-09
	LEP 5-18-09

CERTIFIED	
PO #	_____
ENG	_____
USER	_____
DE #	_____

7	11-08-114	SGA	3-17-09
6	3-08-106	SGA	3-10-08
5	5-07-111	THP	5-14-07
4	1-06-216	THP	2-17-06
ISS.	EDQ/DSR NO.	APP'D	DATE

AMETEK®	
DREXELBROOK	
205 KEITH VALLEY RD HORSHAM, PA 19044-9986	
215-674-1234 FAX 215-674-2731	

NEMKO/ATEX APPROVED 2-WIRE INTELLIPOINT MODEL NUMBERING SYSTEM (INTEGRAL)	
420-0004-175-CD	
SHT. 3	ISS. 7
OF 7	7

NO. 420-0004-175-CD
 SHT 3 OF 7

7.2 NEMKO / ATEX Control Drawings (Continued)

MODEL NUMBERS OF APPROVED INTRINSICALLY SAFE SENSING ELEMENTS

700-mnop-qrst LEVEL PROBE

- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2009
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 1-14-09
 LEP 5-18-09

NO. 420-0004-175-CD

CERTIFIED _____
 PD # _____
 ENG _____
 USER _____

 DE # _____

7	11-08-114	SGA	3-17-09
6	3-08-106	SGA	3-10-08
5	5-07-111	THP	5-14-07
4	1-06-216	THP	2-17-06
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986
 215-674-1234
 FAX 215-674-2731

NEMKO/ATEX APPROVED
 ADDITIONAL INTRINSICALLY
 SAFE SENSING ELEMENTS
 (REMOTE)

420-0004-175-CD

SHT. 5 OF 7
 ISS. 7

SHT. 5 OF 7

7.2 NEMKO / ATEX Control Drawings

1	2	3	4	5	6	7	8	9	10	11	12	13	14	
S	a	R	b	T	c	0	0	0	d	*	*	*	e	
	a													a = SIL LEVEL 1 OR 2
			b											b = OPTIONS ⑦
														N = NO CALIBRATION POINT LEVEL 2pF FIXED
														L = STANDARD AUTO CAL 2pF AUTO
				c										c = 2
				2										M20 KEMA/CENELEC SYSTEMS
									d					d = 0-4
														<i>SENSING ELEMENTS</i>
						0	0							700-1202-001
								1						700-1202-012
								2						700-1202-014
								3						700-1202-018
								4						700-1202-041
								6						700-1202-032
								7						700-1202-020
								9						700-1202-034
							1	1						700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT
								2						700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT
								3						700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT
								6						700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT
								7						700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT
								8						700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT
								9						700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT
						Z	Z							SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING ELEMENTS
										*	*	*		SEE MOUNTING CHART
													e	e = A-F, G, H, J, K, L OR Z
														INSERTION LENGTH/COTE SHIELD LENGTH
													A	6"/2" & 152.4mm/50.8mm
													B	12"/2" & 304.8mm/50.8mm
													C	12"/3.5" & 304.8mm/88.9mm
													D	18"/2" & 457.2mm/50.8mm
													E	18"/3.5" & 457.2mm/88.9mm
													F	18"/10" & 457.2mm/254mm
													G	18"/NO CSL & 457.2mm
													H	36"/10" & 914.4mm/254mm
													J	36"/NO CSL & 914.4mm
													K	48"/10" & 1219.2mm/254mm
													L	60"/10" & 1524mm/254mm
													Z	OTHER
													1	18"/6" & 457.2mm/152.4mm
													2	12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009	
AMETEK DREXELBROOK	
SCALE NONE	
UNLESS OTHERWISE STATED	
ALL DIMENSIONS IN INCHES (MM)	
DR. JJS 1-14-09	
LEP 5-18-09	

CERTIFIED	_____
PO #	_____
ENG	_____
USER	_____
DE #	_____

7	11-08-114	SGA	3-17-09
6	3-08-106	SGA	3-10-08
5	5-07-111	THP	5-14-07
4	1-06-216	THP	2-17-06
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2733

NEMKO/ATEX APPROVED	
2-WIRE INTELLIPOINT	
MODEL NUMBERING SYSTEM	
(INTEGRAL)	
SIL SYSTEMS	
420-0004-175-CD	SHT. 6 OF 7
	ISS. 7

NO. 420-0004-175-03

SHT 6 OF 7

7.2 NEMKO / ATEX Control Drawings (Continued)

COLUMNS 11 AND UP DO NOT AFFECT SAFETY													
1	2	3	4	5	6	7	8	9	10	11	12	13	14
S	a	R	b	T	Z	c	O	d	e	*	*	*	f
	a												a = SIL LEVEL 1 OR 2
		b											b = OPTIONS ⑦
													N = NO CALIBRATION POINT LEVEL 2pF FIXED
													L = STANDARD AUTO CAL 2pF AUTO
						c							c = 1-9, A-K CABLE OPTIONS (REMOTE)
							d						d = 0-3, 5, 6, OR Z SENSING ELEMENTS
								e					e = 0-6, & 8, OR Z SENSING ELEMENTS
													SENSING ELEMENTS
						0	0						700-1202-001
							1						700-1202-012
							2						700-1202-014
							3						700-1202-018
							4						700-1202-041
							6						700-1202-031
							7						700-1202-010
							9						700-1202-033
						1	0						700-0001-018 INTRINSICALLY SAFE SENSING ELEMENT
							1						700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT
							2						700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT
							3						700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT
							4						700-0202-002 INTRINSICALLY SAFE SENSING ELEMENT
							5						700-0202-043 INTRINSICALLY SAFE SENSING ELEMENT
							6						700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT
							7						700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT
							8						700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT
							9						700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT
						2	0						700-0209-002 INTRINSICALLY SAFE SENSING ELEMENT
						3	1						700-0029-001 INTRINSICALLY SAFE SENSING ELEMENT
							2						700-0029-002 INTRINSICALLY SAFE SENSING ELEMENT
							3						700-0029-003 INTRINSICALLY SAFE SENSING ELEMENT
							4						700-0029-004 INTRINSICALLY SAFE SENSING ELEMENT
							5						700-0029-005 INTRINSICALLY SAFE SENSING ELEMENT
							5	0					700-0207-001 INTRINSICALLY SAFE SENSING ELEMENT
							1						700-0207-002 INTRINSICALLY SAFE SENSING ELEMENT
							2						700-0207-003 INTRINSICALLY SAFE SENSING ELEMENT
							3						700-0207-004 INTRINSICALLY SAFE SENSING ELEMENT
							4						700-0207-005 INTRINSICALLY SAFE SENSING ELEMENT
							5						700-0207-006 INTRINSICALLY SAFE SENSING ELEMENT
							6	0					700-0204-038 INTRINSICALLY SAFE SENSING ELEMENT
							6	1					700-0204-002
							6	2					700-0204-048
							Z	Z					SEE SHEET 5 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING ELEMENTS
									f				f = A-F, G, H, J, K, L OR Z
													INSERTION LENGTH/COTE SHIELD LENGTH
									A				6"/2" & 152.4mm/50.8mm
									B				12"/2" & 304.8mm/50.8mm
									C				12"/3.5" & 304.8mm/88.9mm
									D				18"/2" & 457.2mm/50.8mm
									E				18"/3.5" & 457.2mm/88.9mm
									F				18"/10" & 457.2mm/254mm
									G				18"/ND CSL & 457.2mm
									H				36"/10" & 914.4mm/254mm
									J				36"/ND CSL & 914.4mm
									K				48"/10" & 1219.2mm/254mm
									L				60"/10" & 1524mm/254mm
									Z				OTHER
									1				18"/6" & 457.2mm/152.4mm
									2				12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009
AMETEK DREXELBROOK

SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM)

DR. JJS 1-14-09
LEP 5-18-09

CERTIFIED

PO # _____

ENG _____

USER _____

DE # _____

7	11-08-114	SGA	3-17-09
6	3-08-106	SGA	3-10-08
5	5-07-111	THP	5-14-07
4	1-06-216	THP	2-17-06
ISS.	EDO/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731

NEMKO/ATEX APPROVED
2-WIRE INTELLIPOINT
MODEL NUMBERING SYSTEM
(REMOTE)
SIL SYSTEMS


420-0004-175-CD

SHT. 7 OF 7
ISS. 7 OF 7

NO. 420-0004-175-CD

SHT 7 OF 7

7.3 CSA Control Drawings

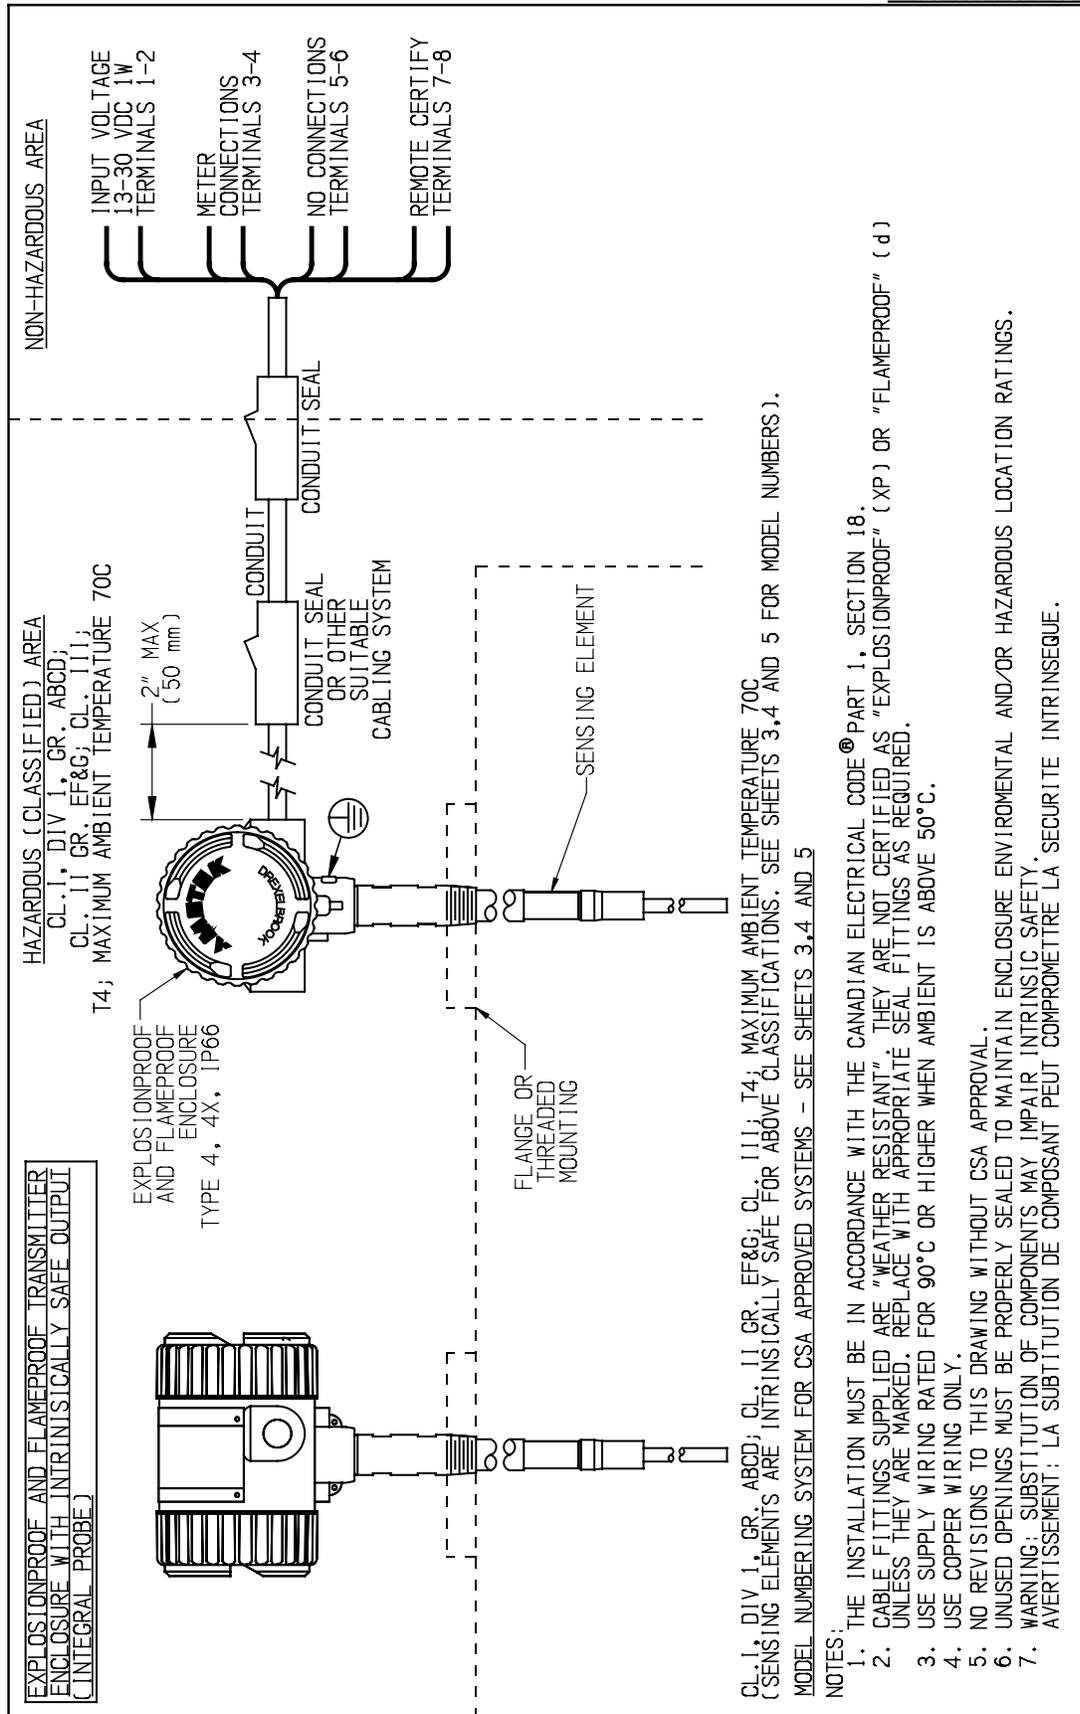

No. 420-0004-174-CD


SHT 1 OF 9

CL. I, DIV 1, GR. ABCD; CL. II GR. EF&G; Cl. III; T4; MAXIMUM AMBIENT TEMPERATURE 70C (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 3,4 AND 5 FOR MODEL NUMBERS).
 MODEL NUMBERING SYSTEM FOR CSA APPROVED SYSTEMS - SEE SHEETS 3,4 AND 5

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE CANADIAN ELECTRICAL CODE PART 1, SECTION 18.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
 7. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
 AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

CERTIFIED		6 1-09-105		SGA	2-18-09	COPYRIGHT	2009	CSA CONTROL DRAWING FOR INTELLIPOINT SERIES 2-WIRE DIVISION 1 / ZONE 1 (O) (INTEGRAL) EXPLOSION PROOF INSTALLATIONS	
PO #	by	5 3-08-104	SGA	3-16-08	AMETEK DREXELBROOK		420-0004-174-CD		
ENG		4 1-06-216	THP	2-13-07	SCALE NONE		SHT. 1 OF 9		
USER		3 12-02-214	SGA	6-26-03	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)		ISS.		
		2 12-02-214	SGA	3-31-03	DR. JJS 1-13-09		CF 6		
DE #					ISS. DATE		215-674-1234		
					CHK. LEP 2-23-09		FAX 215-674-2731		
					205 KEITH VALLEY RD		HORSHAM, PA 19044-9886		
					AMETEK®		DREXELBROOK		

7.3 CSA Control Drawings (Continued)

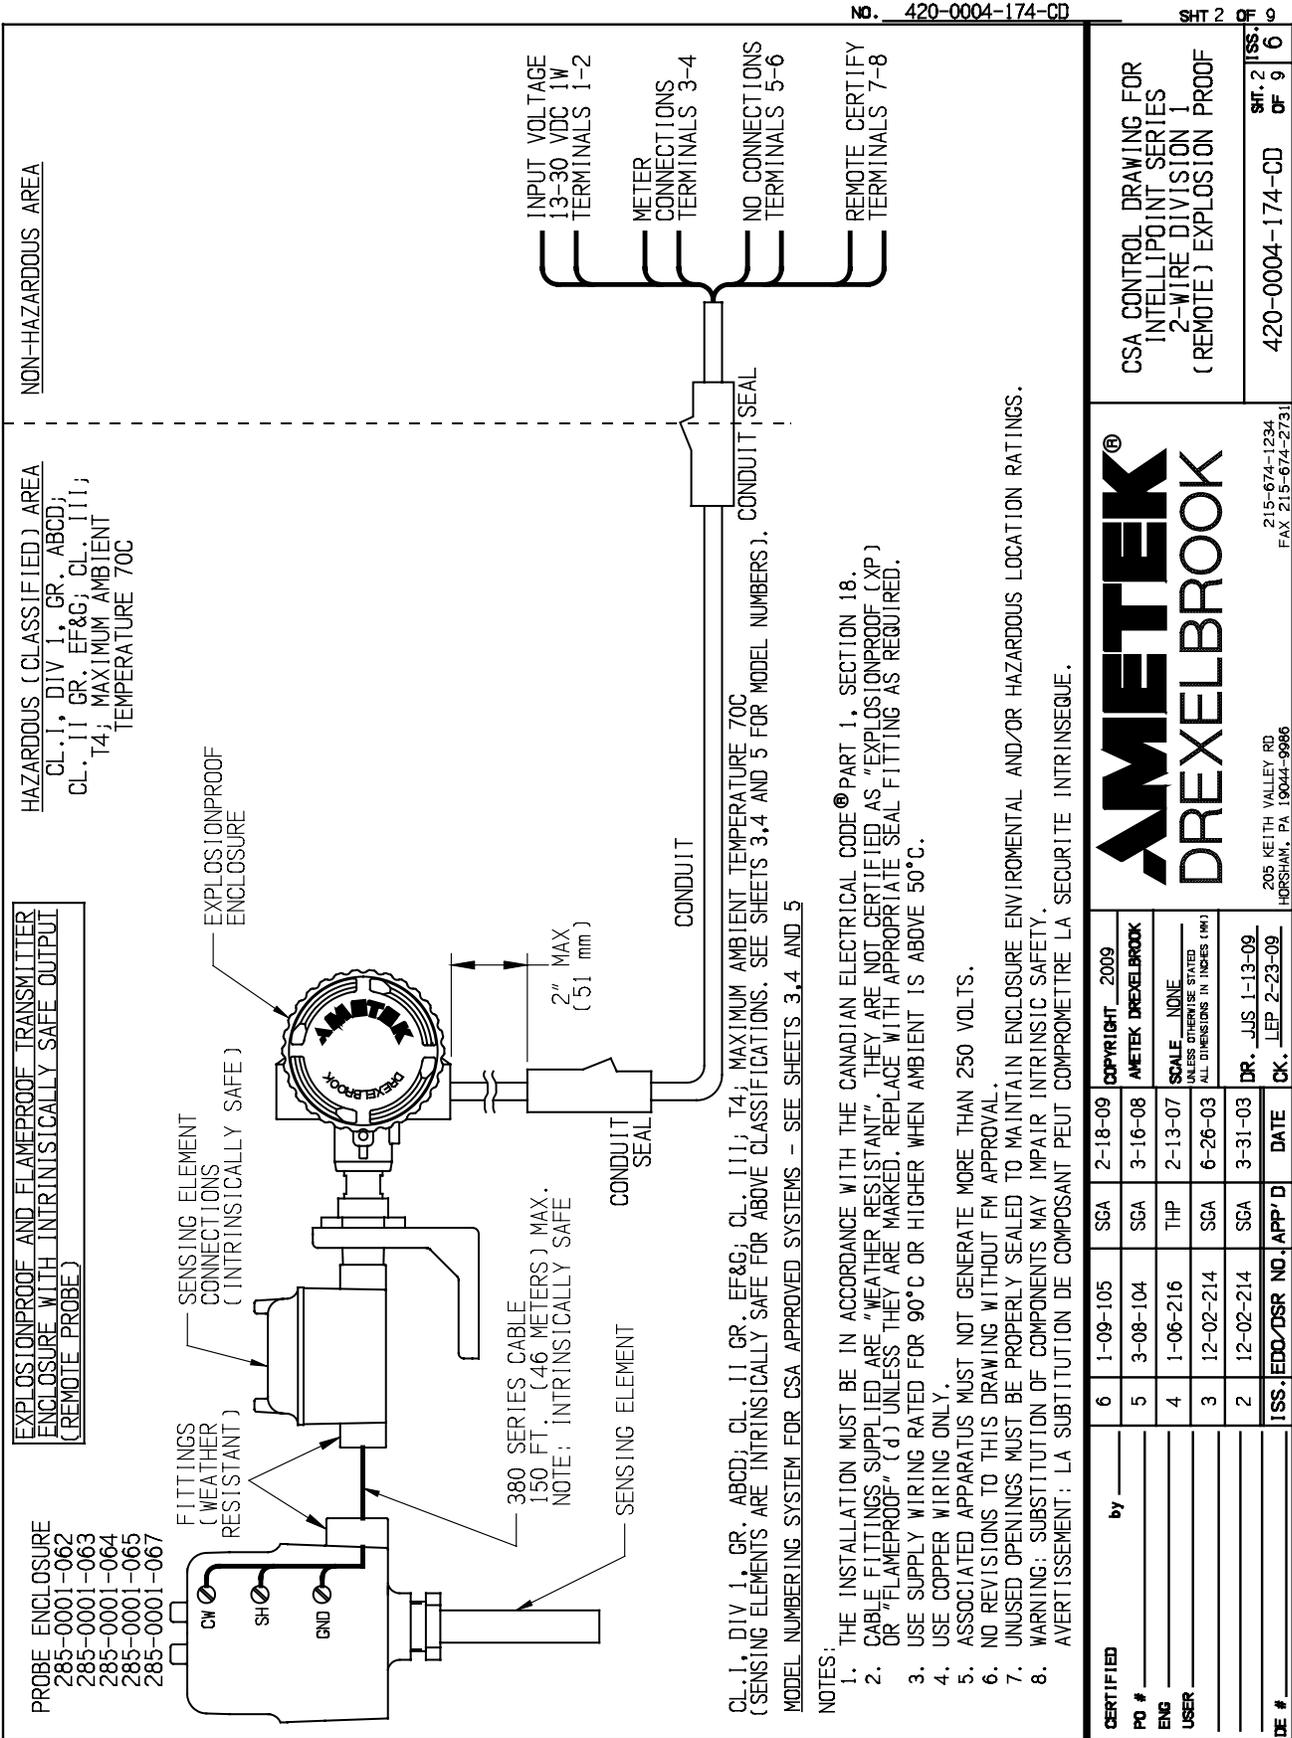

EXPLOSIONPROOF AND FLAMEPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (REMOTE PROBE)

- PROBE ENCLOSURE
 285-0001-062
 285-0001-063
 285-0001-064
 285-0001-065
 285-0001-067

HAZARDOUS (CLASSIFIED) AREA
 CL. I, DIV 1, GR. ABCD;
 CL. II GR. EF&G; CL. III;
 T4; MAXIMUM AMBIENT
 TEMPERATURE 70C

NON-HAZARDOUS AREA

SENSING ELEMENT CONNECTIONS (INTRINSICALLY SAFE)

FITTINGS (WEATHER RESISTANT)

EXPLOSIONPROOF ENCLOSURE

380 SERIES CABLE 150 FT. (46 METERS) MAX. NOTE: INTRINSICALLY SAFE

INPUT VOLTAGE 13-30 VDC 1W TERMINALS 1-2

SENSING ELEMENT

CONDUIT

CL. I, DIV 1, GR. ABCD; CL. II GR. EF&G; CL. III; T4; MAXIMUM AMBIENT TEMPERATURE 70C (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 3,4 AND 5 FOR MODEL NUMBERS).

MODEL NUMBERING SYSTEM FOR CSA APPROVED SYSTEMS - SEE SHEETS 3,4 AND 5

NOTES:

1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE CANADIAN ELECTRICAL CODE PART 1, SECTION 18.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT", THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTING AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
 AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

No. 420-0004-174-CD

CERTIFIED	by	6	1-09-105	SGA	2-18-09	COPYRIGHT	2009
PO #		5	3-08-104	SGA	3-16-08	AMETEK	DREXELBROOK
ENG		4	1-06-216	THP	2-13-07	SCALE	NONE
USER		3	12-02-214	SGA	6-26-03	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	
ISS. #		2	12-02-214	SGA	3-31-03	DR.	JJS 1-13-09
DATE						CK.	LEP 2-23-09
CSA CONTROL DRAWING FOR INTELLIPOINT SERIES 2-WIRE DIVISION 1 (REMOTE) EXPLOSION PROOF 420-0004-174-CD SHT. 2 OF 9 ISS. # 9 OF 6							
AMETEK® DREXELBROOK 205 KEITH VALLEY RD HORSHAM, PA 19044-9986 215-674-1234 FAX 215-674-2731							

7.3 CSA Control Drawings (Continued)

1	2	3	4	5	6	7	8	9	10	11	12	
R	a	T	b	0	0	0	c	*	*	*	d	
	a											a = OPTIONS
	N											NO CALIBRATION POINT LEVEL
	M											MANUAL SETPOINT ADJUSTMENT
	H											HI SENSITIVITY
	G											HI SENSITIVITY MANUAL SETPOINT ADJUSTMENT
	L											STANDARD AUTO CAL
	T											10pf AUTO CAL
	V											10pf FIXED
	P											HI SENSITIVITY .5pf FIXED
		b										b = OPTIONS (6)
		4										(STD)
		8										DUAL SEAL
		C										DUAL SEAL
							c					c = 0-3
												<i>SENSING ELEMENTS</i>
							0					700-1202-021
							1					700-1202-022
							2					700-1202-024
							3					700-1202-028
								*	*	*		SEE MOUNTING CHART
											d	d = A-F, H, K, L OR Z
												INSERTION LENGTH/COTE SHIELD LENGTH
											A	6" / 2" & 152.4mm / 50.8mm
											B	12" / 2" & 304.8mm / 50.8mm
											C	12" / 3.5" & 304.8mm / 88.9mm
											D	18" / 2" & 457.2mm / 50.8mm
											E	18" / 3.5" & 457.2mm / 88.9mm
											F	18" / 10" & 457.2mm / 254mm
											G	18" / NO CSL & 457.2mm / NO CSL
											H	36" / 10" & 914.4mm / 254mm
											J	36" / NO CSL & 914.4mm / NO CSL
											K	48" / 10" & 1219.2mm / 254mm
											L	60" / 10" & 1524mm / 254mm
											Z	OTHER
											1	18" / 6" & 457.2mm / 152.4mm
											2	12" / 6" & 304.8mm / 152.4mm

COPYRIGHT 2009	
AMETEK DREXELBROOK	
SCALE NONE	
UNLESS OTHERWISE STATED	
ALL DIMENSIONS IN INCHES (MM)	
DR.	JJS 1-13-09
CK.	LEP 2-23-09

CERTIFIED		by _____
PO #	_____	
ENG	_____	
USER	_____	
DE #	_____	

6	1-09-105	SGA	2-18-09
5	3-08-104	SGA	3-16-08
4	1-06-216	THP	2-13-07
3	12-02-214	SGA	6-26-03
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731

CSA APPROVED INTELLIPOINT 2-WIRE MODEL NUMBERING SYSTEM INTEGRAL SYSTEMS	
420-0004-174-CD	SHT. 3 OF 9 ISS. 6

NO. 420-0004-174-CD
 SHT 3 OF 9

7.3 CSA Control Drawings (Continued)

COLUMNS 9 AND UP DO NOT AFFECT SAFETY											
1	2	3	4	5	6	7	8	9	10	11	12
R	a	T	b	c	4	d	e	*	*	*	f
	a										a = OPTIONS
	N										NO CALIBRATION
	M										MANUAL SETPOINT
	H										HI SENSITIVITY
	G										HI SENSITIVITY MANUAL SETPOINT
	L										STANDARD AUTO CAL
	T										10pf AUTO CAL
	V										10pf FIXED
	P										HI SENSITIVITY .5pf FIXED
	b										b = OPTIONS Ⓞ
	4										(STD)
	8										DUAL SEAL
	c										c = 1-9, A-K - CABLE OPTIONS (REMOTE)
	d										d = 0-3, 5, 6, OR Z SENSING ELEMENTS
	e										e = 0-6, & 8, OR Z SENSING ELEMENTS
											SENSING ELEMENTS
	0	0									700-1202-001 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		1									700-1202-012 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		2									700-1202-014 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		3									700-1202-018 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		4									700-1202-041 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		6									700-1202-031 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		7									700-1202-010 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
		9									700-1202-033 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
	1	0									700-0001-018 INTRINSICALLY SAFE SENSING ELEMENT
		1									700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT
		2									700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT
		3									700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT
		4									700-0202-002 INTRINSICALLY SAFE SENSING ELEMENT
		5									700-0202-043 INTRINSICALLY SAFE SENSING ELEMENT
		6									700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT
		7									700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT
		8									700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT
		9									700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT
	2	0									700-0209-002 INTRINSICALLY SAFE SENSING ELEMENT
		3	1								700-0029-001 INTRINSICALLY SAFE SENSING ELEMENT
			2								700-0029-002 INTRINSICALLY SAFE SENSING ELEMENT
			3								700-0029-003 INTRINSICALLY SAFE SENSING ELEMENT
			4								700-0029-004 INTRINSICALLY SAFE SENSING ELEMENT
			5								700-0029-005 INTRINSICALLY SAFE SENSING ELEMENT
		5	0								700-0207-001 INTRINSICALLY SAFE SENSING ELEMENT
			1								700-0207-002 INTRINSICALLY SAFE SENSING ELEMENT
			2								700-0207-003 INTRINSICALLY SAFE SENSING ELEMENT
			3								700-0207-004 INTRINSICALLY SAFE SENSING ELEMENT
			4								700-0207-005 INTRINSICALLY SAFE SENSING ELEMENT
			5								700-0207-006 INTRINSICALLY SAFE SENSING ELEMENT
		6	0								700-0204-038 INTRINSICALLY SAFE SENSING ELEMENT
			1								700-0204-002 INTRINSICALLY SAFE SENSING ELEMENT
			2								700-0204-048 INTRINSICALLY SAFE SENSING ELEMENT
	Z	Z									SEE SHEET 4 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING ELEMENTS
	f										f = A-F, H, K, L OR Z INSERTION LENGTH/COTE SHIELD LENGTH
	A										6"/2" & 152.4mm/50.8mm
	B										12"/2" & 304.8mm/50.8mm
	C										12"/3.5" & 304.8mm/88.9mm
	D										18"/2" & 457.2mm/50.8mm
	E										18"/3.5" & 457.2mm/88.9mm
	F										18"/10" & 457.2mm/254mm
	G										18"/NO CSL & 457.2mm/NO CSL
	H										36"/10" & 914.4mm/254mm
	J										36"/NO CSL & 914.4mm/NO CSL
	K										48"/10" & 1219.2mm/254mm
	L										60"/10" & 1524mm/254mm
	Z										OTHER
	I										18"/6" & 457.2mm/152.4mm
	Z										12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009
AMETEK DREXELBROOK

SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)

DR. JJS 1-13-09
CK. LEP 2-23-09

CERTIFIED by _____
PO # _____
ENG _____
USER _____
DE # _____

6	1-09-105	SGA	2-18-09	<p>205 KEITH VALLEY RD HORSHAM, PA 19044-9986</p> <p>215-674-1234 FAX 215-674-2731</p>	CSA APPROVED 2-WIRE INTELLIPOINT MODEL NUMBERING SYSTEM (REMOTE)
5	3-08-104	SGA	3-16-08		
4	1-06-216	THP	2-13-07		
3	12-02-214	SGA	6-26-03		
ISS.	EDO/DSR NO.	APP'D	DATE		

420-0004-174-CD

SHT 4 OF 9

ISS. OF 9

7.3 CSA Control Drawings (Continued)

MODEL NUMBERS OF APPROVED INTRINSICALLY SAFE SENSING ELEMENTS

700-mnop-qrst LEVEL PROBE

- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2009
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 1-13-09
 CK. LEP 2-23-09

CERTIFIED by _____
 PD # _____
 ENG _____
 USER _____

 DE # _____

NO. 420-0004-174-CD

6	1-09-105	SGA	2-18-09
5	3-08-104	SGA	3-16-08
4	1-06-216	THP	2-13-07
3	12-02-214	SGA	6-26-03
ISS.	EDQ/DSR NO.	APP' D	DATE

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2731


CSA APPROVED
 ADDITIONAL INTRINSICALLY
 SAFE SENSING ELEMENTS
 (REMOTE)

420-0004-174-CD

SHT. 5 OF 9
 OF 9 6

SHT 5 OF 9


7.3 CSA Control Drawings (Continued)

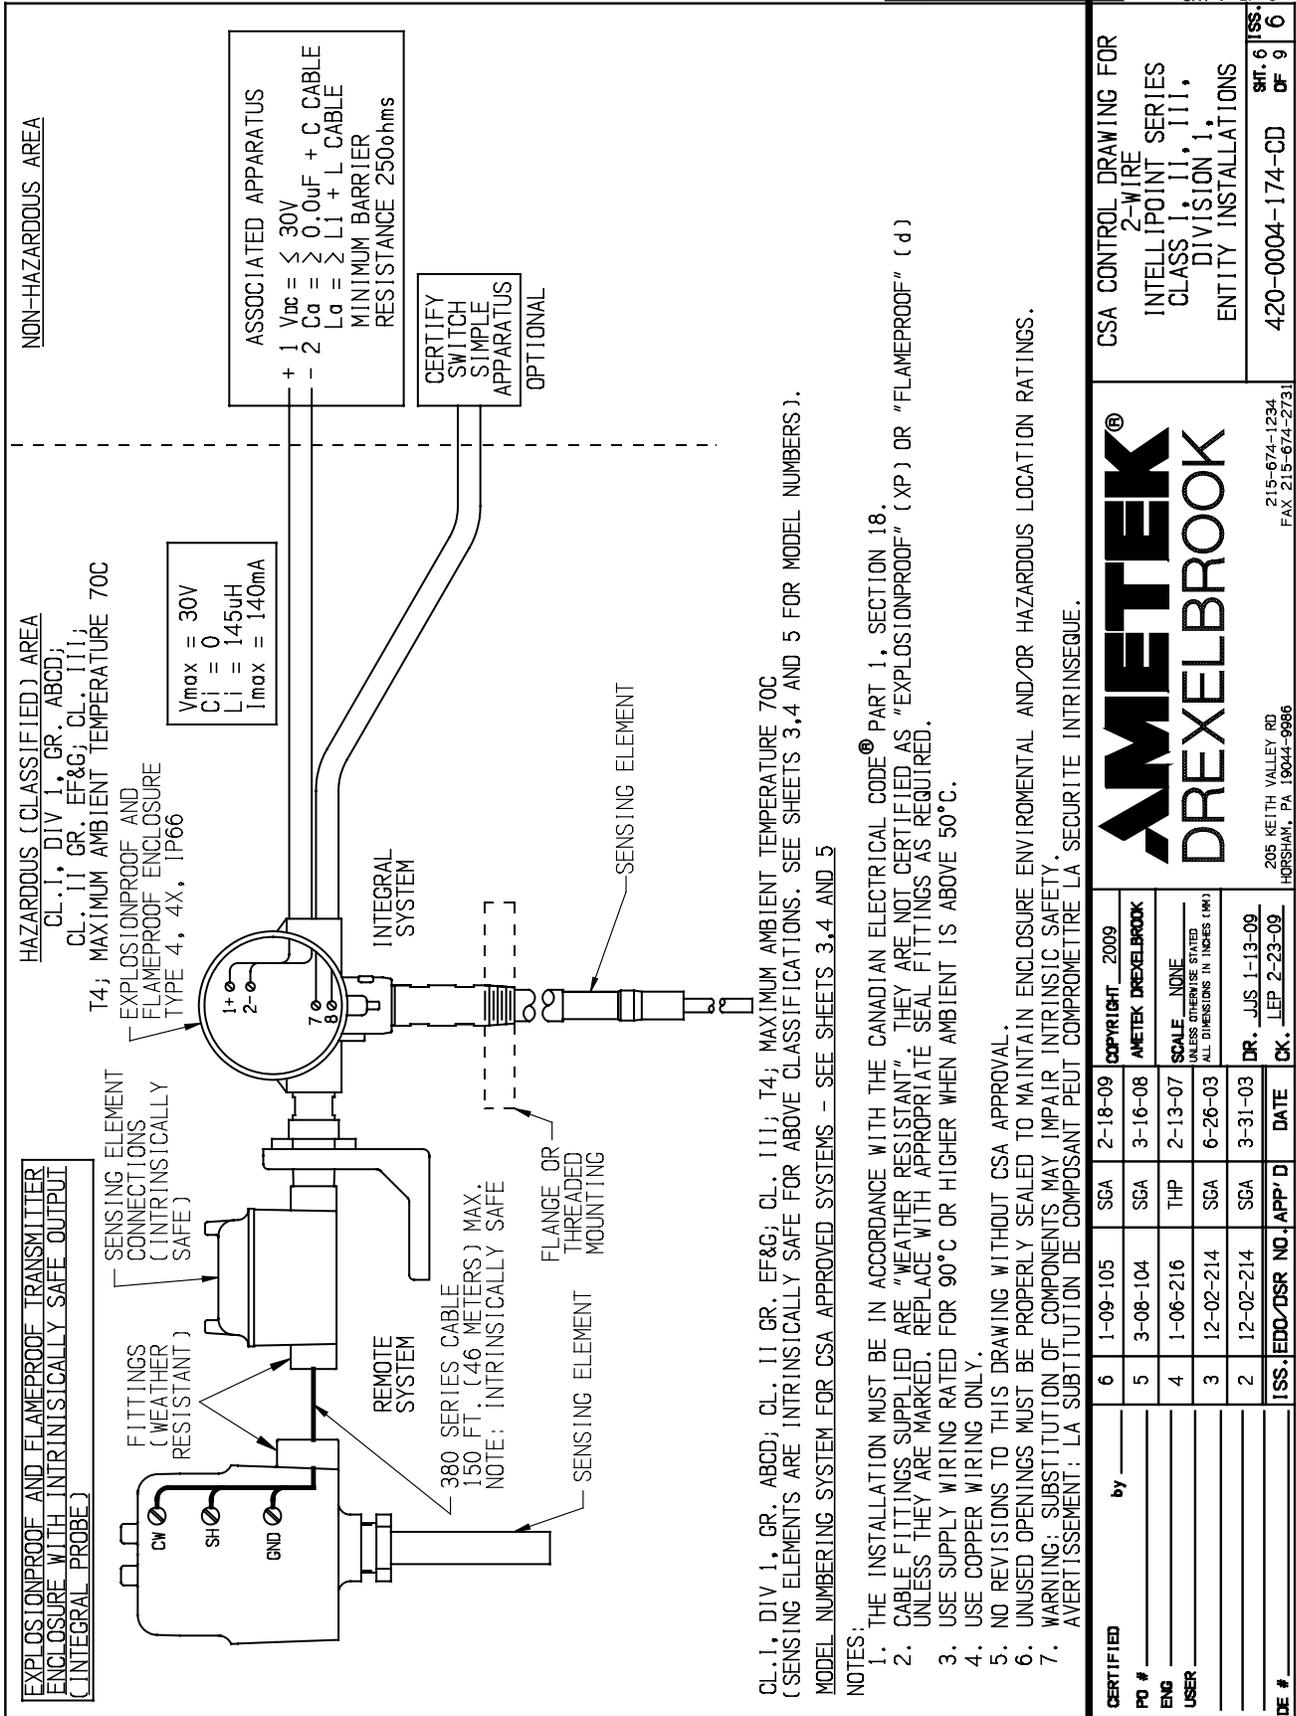

CL. I, DIV 1, GR. ABCD; CL. II GR. EF&G; CL. III; T4; MAXIMUM AMBIENT TEMPERATURE 70C (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 3.4 AND 5 FOR MODEL NUMBERS).
 MODEL NUMBERING SYSTEM FOR CSA APPROVED SYSTEMS - SEE SHEETS 3.4 AND 5

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE CANADIAN ELECTRICAL CODE® PART 1, SECTION 18.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
 7. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
 AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

CERTIFIED by _____		COPYRIGHT 2009		CSA CONTROL DRAWING FOR	
PO #	6 1-09-105 SGA	3-16-08	AMETEK DREXELBROOK	2-WIRE	
ENG	5 3-08-104 SGA	2-13-07	SCALE NONE	INTELLIPOINT SERIES	
USER	4 1-06-216 THP	6-26-03	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	CLASS I, II, III, DIVISION 1, ENTITY INSTALLATIONS	
	3 12-02-214 SGA	3-31-03	DR. JUS 1-13-09	420-0004-174-CD	
	2 12-02-214 SGA	SEP 2-23-09	ISS. EDD/DSR NO. APP'D DATE	SHT. 6 OF 9	
ISS. EDD/DSR NO. APP'D DATE				SHT. 6 OF 9	

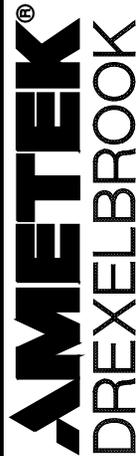


205 KEITH VALLEY RD
 HORSHAM, PA. 19044-9986
 215-674-1234
 FAX 215-674-2731

7.3 CSA Control Drawings (Continued)

NO. 420-0004-174-CD

SHT 7 OF 9

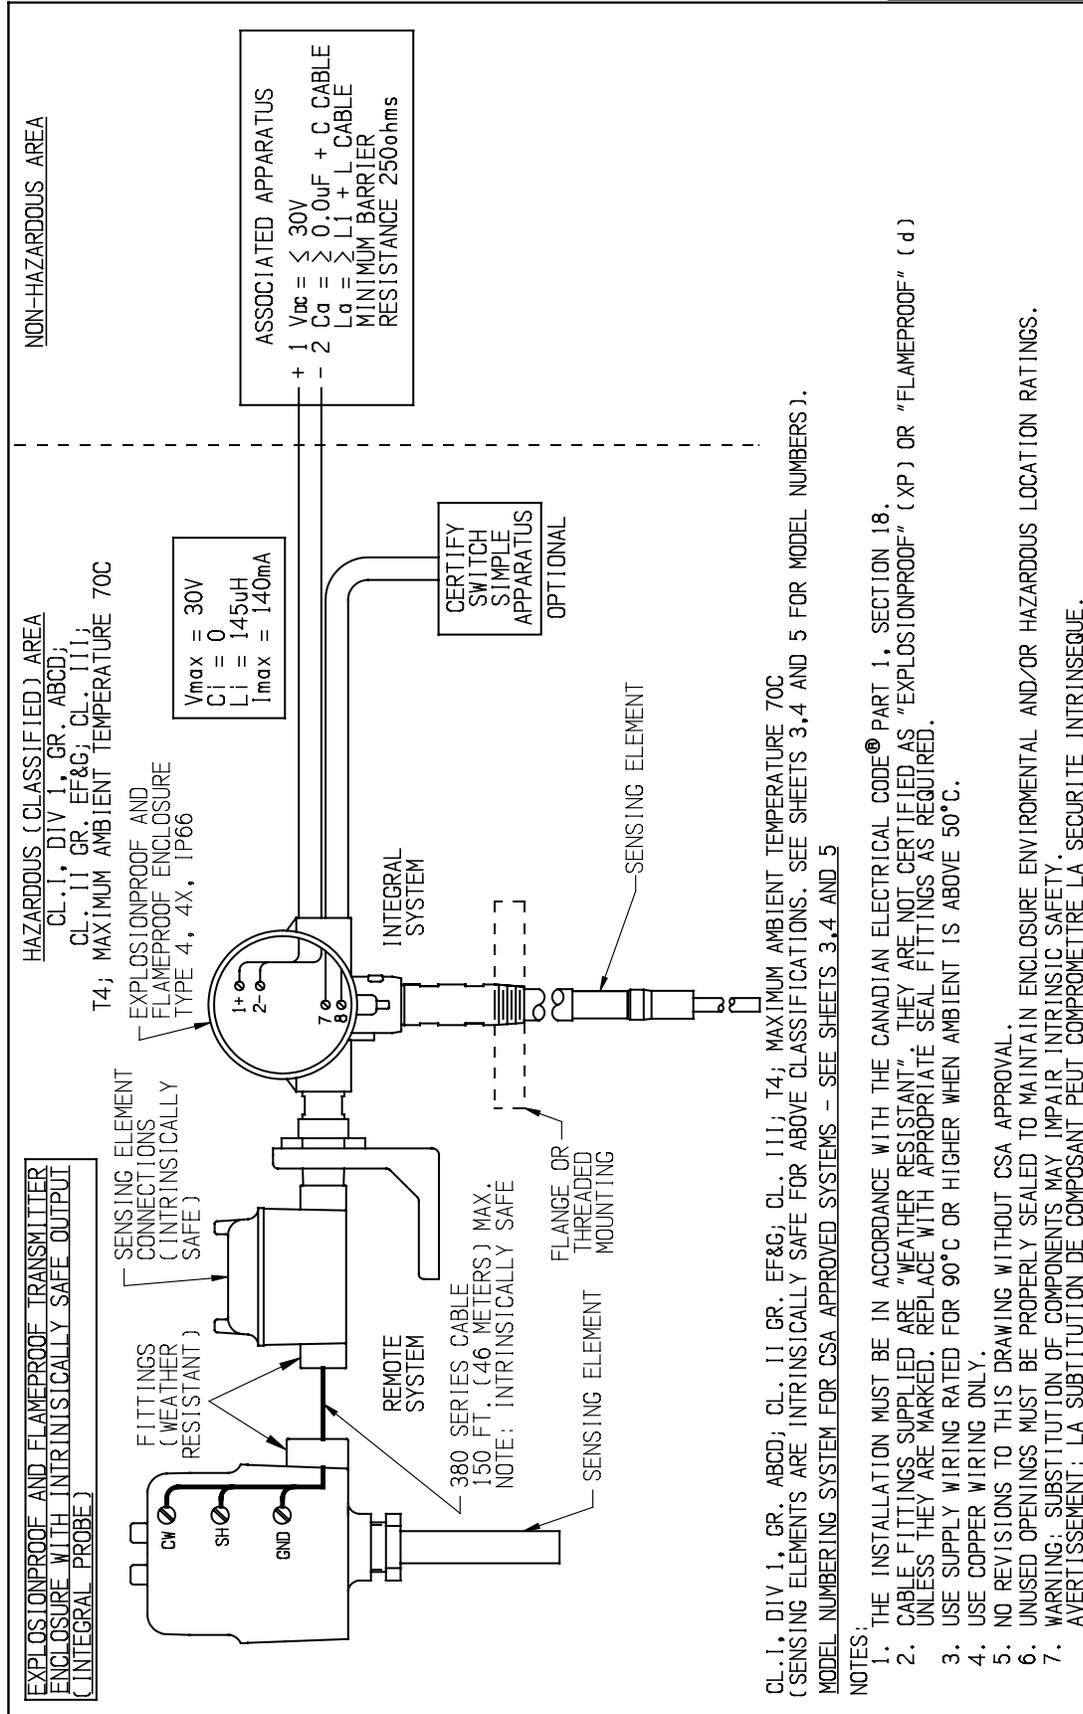

CL. I, DIV 1, GR. ABCD; CL. II GR. EF&G; CL. III; T4; MAXIMUM AMBIENT TEMPERATURE 70C (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 3,4 AND 5 FOR MODEL NUMBERS).
 MODEL NUMBERING SYSTEM FOR CSA APPROVED SYSTEMS - SEE SHEETS 3,4 AND 5

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE CANADIAN ELECTRICAL CODE® PART 1, SECTION 18.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
 6. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
 7. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
 AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

CERTIFIED by _____		6	1-09-105	SGA	2-18-09	COPYRIGHT 2009	CSA CONTROL DRAWING FOR 2-WIRE INTELLIPOINT SERIES CLASS I, II, III, DIVISION 1, ENTITY INSTALLATIONS		
PO #	5	3-08-104	SGA	3-16-08	AMETEK DREXELBROOK		420-0004-174-CD		
ENG	4	1-06-216	THP	2-13-07	SCALE NONE UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)		SHT. 7 OF 9		
USER	3	12-02-214	SGA	6-26-03	DR. JUS 1-13-09		ISS. 6		
DE #	2	12-02-214	SGA	3-31-03	CK. LEP 2-23-09		205 KEITH VALLEY RD HORSHAM, PA. 19044-9986		
ISS. EDO/DSR NO. APP'D		DATE		DATE		DATE		DATE	

7.3 CSA Control Drawings (Continued)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	
S	a	R	b	T	c	0	0	0	d	*	*	*	e	
	a													a = SIL LEVEL 1 OR 2
			b											b = OPTIONS
			N											NO CALIBRATION POINT LEVEL 2pF FIXED
			L											STANDARD AUTO CAL 2pF AUTO
					c									c = OPTIONS ⑥
					4									(STD)
					8									DUAL SEAL
					C									DUAL SEAL
														3/4" NPT CSA SYSTEMS
									d					d = 0-3
														SENSING ELEMENTS
									0					700-1202-021
									1					700-1202-022
									2					700-1202-024
									3					700-1202-028
										*	*	*		SEE MOUNTING CHART
													e	e = A-F, H, K, L OR Z
														INSERTION LENGTH/COTE SHIELD LENGTH
													A	6"/2" & 152.4mm/50.8mm
													B	12"/2" & 304.8mm/50.8mm
													C	12"/3.5" & 304.8mm/88.9mm
													D	18"/2" & 457.2mm/50.8mm
													E	18"/3.5" & 457.2mm/88.9mm
													F	18"/10" & 457.2mm/254mm
													G	18"/NO CSL & 457.2mm/NO CSL
													H	36"/10" & 914.4mm/254mm
													J	36"/NO CSL & 914.4mm/NO CSL
													K	48"/10" & 1219.2mm/254mm
													L	60"/10" & 1524mm/254mm
													Z	OTHER
													1	18"/6" & 457.2mm/152.4mm
													2	12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 1-14-09
 CK. LEP 2-23-09

CERTIFIED by _____
 PO # _____
 ENG _____
 USER _____
 DE # _____

6	1-09-105	SGA	2-18-09
5	3-08-104	SGA	3-16-08
4	1-06-216	THP	2-13-07
3	12-02-214	SGA	6-26-03
ISS.	EDO/DSR NO.	APP'D	DATE

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2731

CSA APPROVED
 INTELLIPOINT 2-WIRE
 MODEL NUMBERING SYSTEM
 INTEGRAL SYSTEMS
 SIL SYSTEM

420-0004-174-CD

SHT. 8 OF 9
 ISS. 6

NO. 420-0004-174-CD

SHT. 8 OF 9

7.3 CSA Control Drawings (Continued)

COLUMNS 11 AND UP DO NOT AFFECT SAFETY													
1	2	3	4	5	6	7	8	9	10	11	12	13	14
S	a	R	b	T	c	d	4	e	f	*	*	*	g
	a												a = SIL LEVEL 1 OR 2
	b												b = OPTIONS
	N												NO CALIBRATION 2pF FIXED
	L												STANDARD AUTO CAL 2pF AUTO
	c												c = OPTIONS (6)
	4												(STD)
	8												DUAL SEAL
	d												d = 1-9, A-K - CABLE OPTIONS (REMOTE)
	e												e = 0-3, 5, 6, OR Z SENSING ELEMENTS
	f												f = 0-6, & 8, OR Z SENSING ELEMENTS
													SENSING ELEMENTS
						0	0						700-1202-001 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						1							700-1202-012 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						2							700-1202-014 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						3							700-1202-018 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						4							700-1202-041 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						6							700-1202-031 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						7							700-1202-010 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						9							700-1202-033 FLAMEPROOF SENSING ELEMENT KEMA NO. Ex-00.E.2144 U
						1	0						700-0001-018 INTRINSICALLY SAFE SENSING ELEMENT
						1							700-0201-005 INTRINSICALLY SAFE SENSING ELEMENT
						2							700-0201-005 HAST C INTRINSICALLY SAFE SENSING ELEMENT
						3							700-0201-036 INTRINSICALLY SAFE SENSING ELEMENT
						4							700-0202-002 INTRINSICALLY SAFE SENSING ELEMENT
						5							700-0202-043 INTRINSICALLY SAFE SENSING ELEMENT
						6							700-0002-360 INTRINSICALLY SAFE SENSING ELEMENT
						7							700-0202-036 INTRINSICALLY SAFE SENSING ELEMENT
						8							700-0001-022 INTRINSICALLY SAFE SENSING ELEMENT
						9							700-0002-023 INTRINSICALLY SAFE SENSING ELEMENT
						2	0						700-0209-002 INTRINSICALLY SAFE SENSING ELEMENT
						3	1						700-0029-001 INTRINSICALLY SAFE SENSING ELEMENT
						2							700-0029-002 INTRINSICALLY SAFE SENSING ELEMENT
						3							700-0029-003 INTRINSICALLY SAFE SENSING ELEMENT
						4							700-0029-004 INTRINSICALLY SAFE SENSING ELEMENT
						5							700-0029-005 INTRINSICALLY SAFE SENSING ELEMENT
						5	0						700-0207-001 INTRINSICALLY SAFE SENSING ELEMENT
						1							700-0207-002 INTRINSICALLY SAFE SENSING ELEMENT
						2							700-0207-003 INTRINSICALLY SAFE SENSING ELEMENT
						3							700-0207-004 INTRINSICALLY SAFE SENSING ELEMENT
						4							700-0207-005 INTRINSICALLY SAFE SENSING ELEMENT
						5							700-0207-006 INTRINSICALLY SAFE SENSING ELEMENT
						6	0						700-0204-038 INTRINSICALLY SAFE SENSING ELEMENT
						1							700-0204-002 INTRINSICALLY SAFE SENSING ELEMENT
						2							700-0204-048 INTRINSICALLY SAFE SENSING ELEMENT
						Z	Z						SEE SHEET 4 FOR ADDITIONAL APPROVED INTRINSICALLY SAFE SENSING ELEMENTS
													g g = A-F, H, K, L OR Z
													INSERTION LENGTH/COTE SHIELD LENGTH
													A 6"/2" & 152.4mm/50.8mm
													B 12"/2" & 304.8mm/50.8mm
													C 12"/3.5" & 304.8mm/88.9mm
													D 18"/2" & 457.2mm/50.8mm
													E 18"/3.5" & 457.2mm/88.9mm
													F 18"/10" & 457.2mm/254mm
													G 18"/NO CSL & 457.2mm/NO CSL
													H 36"/10" & 914.4mm/254mm
													J 36"/NO CSL & 914.4mm/NO CSL
													K 48"/10" & 1219.2mm/254mm
													L 60"/10" & 1524mm/254mm
													Z OTHER
													1 18"/6" & 457.2mm/152.4mm
													2 12"/6" & 304.8mm/152.4mm

COPYRIGHT 2009	
AMETEK DREXELBROOK	
SCALE NONE	
UNLESS OTHERWISE STATED	
ALL DIMENSIONS IN INCHES (MM)	
DR. JJS 1-13-09	
CK. LEP 2-23-09	

CERTIFIED	by _____
PO # _____	
ENG _____	
USER _____	
DE # _____	

6	1-09-105	SGA	2-18-09
5	3-08-104	SGA	3-16-08
4	1-06-216	THP	2-13-07
3	12-02-214	SGA	6-26-03
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731

CSA APPROVED	
2-WIRE INTELLIPOINT	
MODEL NUMBERING SYSTEM	
(REMOTE)	
SIL SYSTEMS	
420-0004-174-CD	SHT. 9 OF 9
ISS. 9	OF 9

NO. 420-0004-174-CD
SHT 9 OF 9

7.4 Mounting and Wiring for Spark Protector Drawings

NO. 377-0001-019

SHT 1 OF 2

TYPICAL INSTALLATION OF SPARK PROTECTORS

FIGURE -A- : CONNECTION OF THREE CONDUCTOR COTE SHIELD CABLE TO FLEXIBLE 2-TERMINAL ELEMENTS: 700-0005-XXX.

FIGURE -B- : CONNECTION OF THREE CONDUCTOR COTE SHIELD CABLE TO RIGID 2-TERMINAL SENSING ELEMENTS 700-0001-XXX & 700-0002-XXX.

FIGURE -C- : CONNECTION OF THREE CONDUCTOR COTE SHIELD CABLE TO RIGID 3-TERMINAL SENSING ELEMENTS: 700-0200-XXX & 700-0202-017.

FIGURE -D- : CONNECTION OF THREE CONDUCTOR COTE SHIELD CABLE ON FLEXIBLE 3-TERMINAL SENSING ELEMENT 700-0205-XXX.

FOR HI. TEMP APPLICATIONS REFER TO 377-0001-016-CD.

APPROVED DRAWING...
CHANGES TO THIS DRAWING
REQUIRE AGENCY APPROVAL
PER 440-0015-003
 IFM CSA KEMA
 420-0004-017

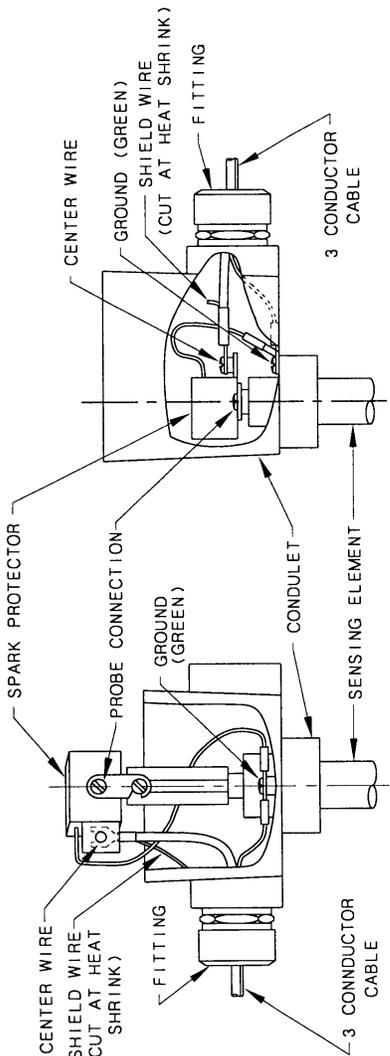


FIGURE -A-

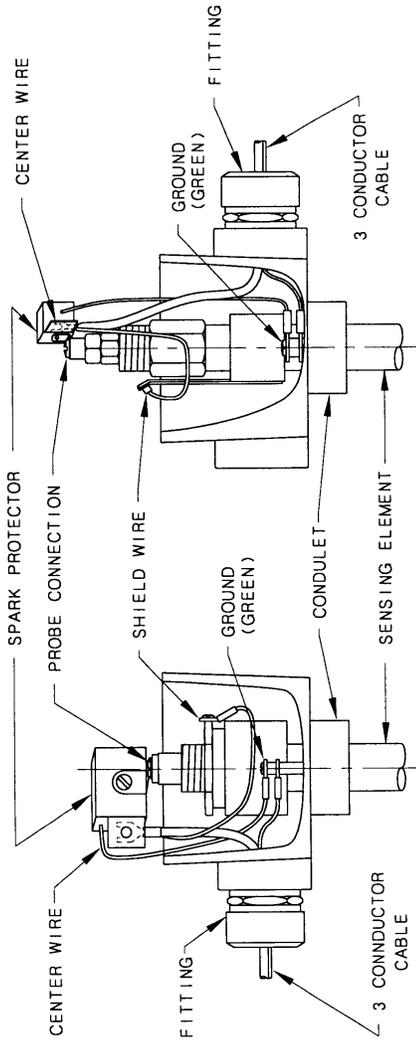


FIGURE -B-

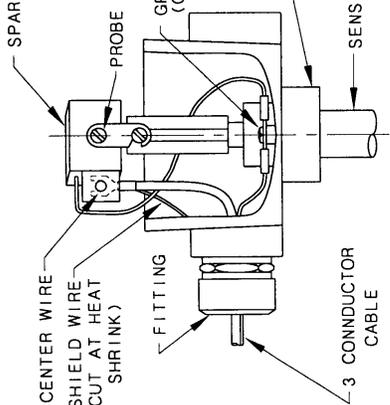


FIGURE -C-

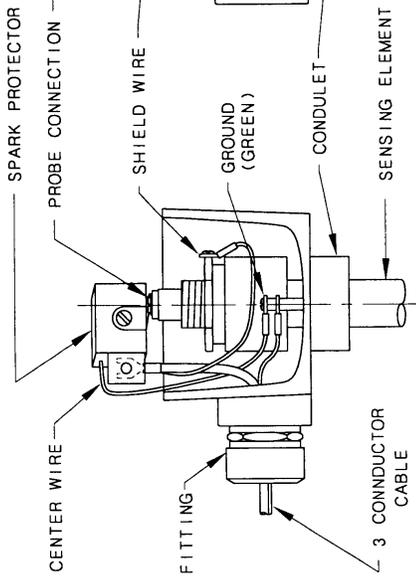


FIGURE -D-

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
HOBSBANK, PA. 19044-9886
215-674-1234
FAX 215-674-2731

377-0001-019 HEAVY DUTY
SPARK PROTECTOR
CUSTOMER CONNECTION
MOUNTING & WIRING

377-0001-019-CD SHT. 1 OF 2 ISS. 5

CERTIFIED	by _____	COPYRIGHT - 2004	AMETEK DREXELBROOK
PO #	5	2-04-336	SCALE NONE
ENG	4	7-93-303	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
USER	3	8-92-83	DR. CDW
ISS. / EDO / DSR NO.	APP'D	DATE	CK. <i>JS</i> 3-3-cl

7.4 Mounting and Wiring for Spark Protector (Continued)

NO. 377-0001-019

SHT 2 OF 2

TYPICAL INSTALLATION OF SPARK PROTECTORS

FIGURE -E- : CONNECTION OF THREE CONDUCTOR COTE SHIELD CABLE IN PARALLEL WITH REMOTE VERIFY SWITCH.

FOR HI. TEMP APPLICATIONS REFER TO 377-0001-016-CD.


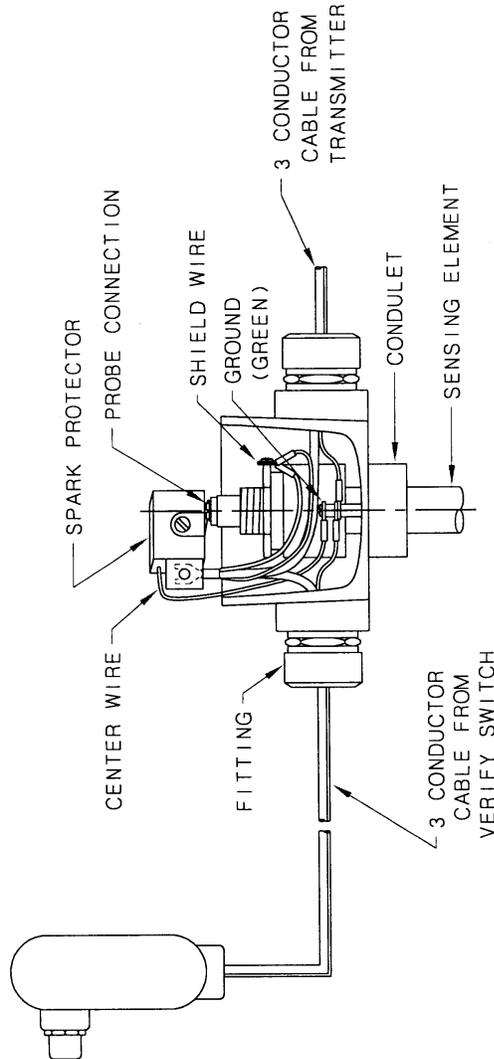


FIGURE -E-

<p>AMETEK® DREXELBROOK</p> <p>205 KEITH VALLEY RD HORSHAM, PA 19044-9986</p> <p>215-674-1234 FAX 215-674-2731</p>		<p>377-0001-019 HEAVY DUTY SPARK PROTECTOR CUSTOMER CONNECTION MOUNTING & WIRING</p>		<p>ISS. 2 OF 2</p>
<p>COPYRIGHT 2004 AMETEK DREXELBROOK</p>		<p>SCALE NONE</p> <p>UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)</p>		<p>377-0001-019-CD</p>
<p>CERTIFIED</p>	<p>BY</p>	<p>5 2-04-336</p>	<p>DR. CDW</p>	<p>377-0001-019-CD</p>
<p>PO #</p>	<p>2-1504</p>	<p>4 7-93-303</p>	<p>DATE</p>	<p>SHT. 2 OF 2</p>
<p>ENG</p>	<p>JET</p>	<p>8-92-83</p>	<p>APP'D</p>	<p>ISS. 2 OF 2</p>
<p>USER</p>	<p>MPG</p>	<p>8-31-92</p>	<p>DATE</p>	<p>OF 2 5</p>
<p>DE #</p>	<p>ISS. EDO/DSR NO.</p>	<p>APP'D</p>	<p>DATE</p>	<p>OF 2 5</p>

7.4 Mounting and Wiring for Spark Protector (Continued)

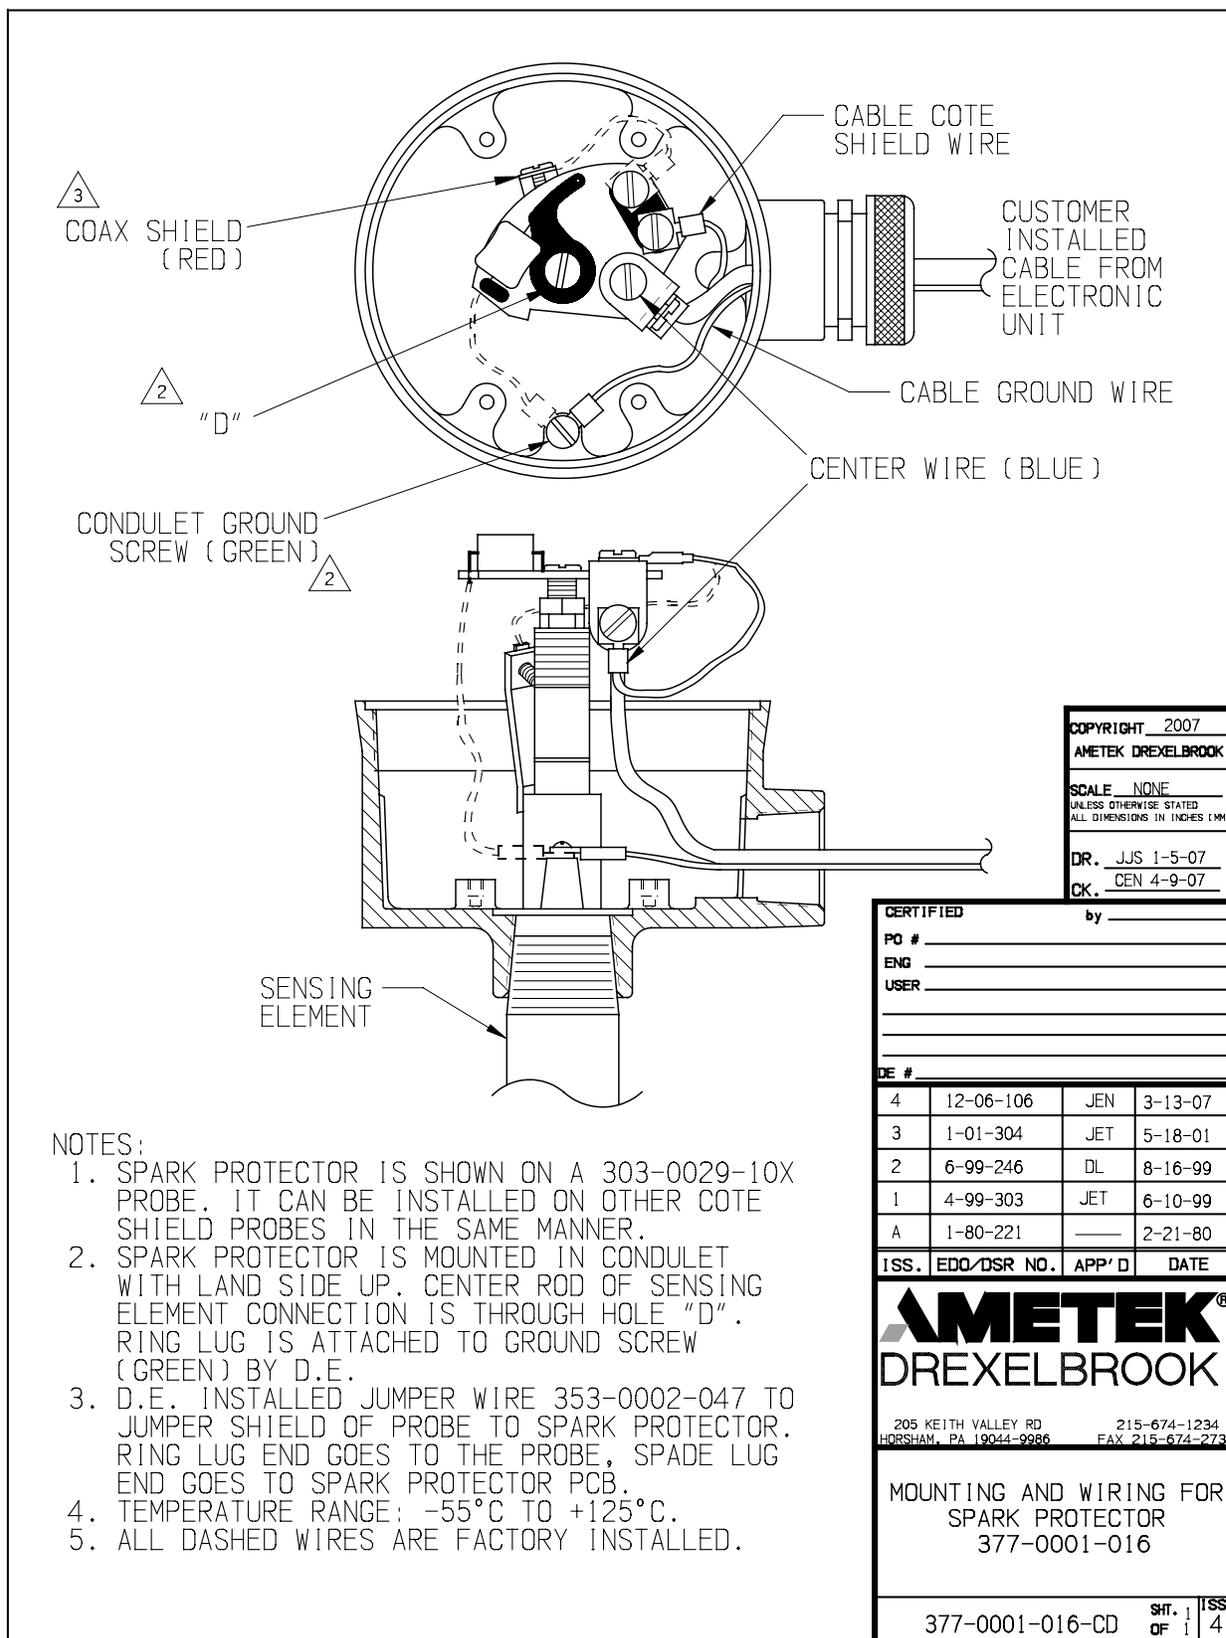

7.5 Adding a Padded Capacitor (Continued)

NO. 330-0009-022-CD

SHEET 2 OF 3

INTELLIPOINT™

CIRCUIT BOARD

PAD TERMINALS

LCS™ & LCT™

PAD TERMINALS

ThePoint™

PAD CAPACITOR BETWEEN PAD TERMINAL AND PROBE TERMINAL

PROBE TERMINAL

PAD TERMINAL

REMOVE ELECTRONIC UNIT TO ACCESS PAD TERMINALS

METEK®
DREXELBROOK

205 KEITH VALLEY RD
HORSBURGH, PA 19044-9906
215-674-1234
FAX 215-674-2731

330-0009-022-CD

ISS. OF 3
SHEET 2

CERTIFIED	by	COPYRIGHT 2005	AMETEK DREXELBROOK	DATE	DATE
PO #		SCALE	NONE	7-6-05	8-9-01
ENG.		UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)		DR.	DDW
USER		ISS.	EDD/DSR NO.	APP'D	
DE #		2	6-05-243	JET	
		1	7-01-303		

7.5 Adding a Padded Capacitor (Continued)

no. 330-0009-022-CD

SHT 3 OF 3


PRODUCT	Sensitivity	Model Numbers	Un-padded Tuning Range	Padding Ratio	Padding Example	Max recommended tuning range
ThePoint™ Line Powered	High	PHL, PPL, PGL	0 to 25pF	1:3	Adding a 10pF cap will change the range to 3pF to 28pF	50 to 75pF
ThePoint™ Line Powered	Standard	PNL, PLL, PTL, PVL, PML	0 to 60pF	1:3	Adding a 10pF cap will change the range to 3pF to 63pF	120 to 180pF
ThePoint™ Two Wire	High	PHT, PPT, PGT	0 to 25pF	1:1	Adding a 10pF cap will change the range to 10 to 35pF	50 to 75pF
ThePoint™ Two Wire	Standard	PNT, PLT, PTT, PVT, PMT	0 to 60pF	1:1	Adding a 10pF cap will change the range to 10 to 70pF	120 to 180pF
Intellipoint™ (Line Powered and Two Wire)	High	RHL, RPL, RGL RHT, RPT, RGT	0 to 25pF	4.33:1	Adding a 10pF cap will change the range to 43pF to 68pF	50 to 75pF
Intellipoint™ (Line Powered and Two Wire)	Standard	RNL, RLL, RTL, RVL, RML RNT, RLT, RTT, RVT, RMT	0 to 100pF	4.33:1	Adding a 10pF cap will change the range to 43pF to 143pF	200 to 300pF
LCS	High	406-6020, 406-6022	0 to 8pF	1:1	Adding a 10pF cap will change the range to 10 to 18pF	16 to 24pF
LCS	Standard	406-6000, 406-6002	0 to 90pF	3:1	Adding a 10pF cap will change the range to 30 to 120pF	180 to 270pF
LCT	High	406-6220, 406-6222	0 to 8pF	1:1	Adding a 10pF cap will change the range to 10 to 18pF	16 to 24pF
LCT	Standard	406-6200, 406-6202	0 to 90 pF	3:1	Adding a 10pF cap will change the range to 30 to 120pF	180 to 270pF

CERTIFIED		by _____		COPYRIGHT 2005		AMETEK DREXELBROOK	
PO # _____	ENG _____	USER _____	ISS. _____	EDD/DSR NO. _____	APP' D _____	DATE _____	DR. _____
SCALE NONE		UNLESS OTHERWISE STATED		ALL DIMENSIONS IN INCHES (IN)		SCALE NONE	
2 6-05-243		JET 8-9-01		JET 8-9-01		JET 8-9-01	
1 7-01-303		JET 8-9-01		JET 8-9-01		JET 8-9-01	
ISS. _____		EDD/DSR NO. _____		APP' D _____		DATE _____	
DEF # _____		_____		_____		_____	
METEK®				DREXELBROOK			
PAD CAPACITOR KIT				FOR POINT LEVEL SWITCHES			
330-0009-022-CD				SHT 3 OF 3			
215-674-1234				215-674-2731			
205 KEITH VALLEY RD				HERSHING, PA 17034-0910			

7.6 Dual Seal Assembly for 700 Series Sensing Elements

NO. 285-0003-OXX-CD SHT 1 OF 3

285-0003-01X DUAL SEAL CONFIGURATION FOR TWO COMPARTMENT ENCLOSURE

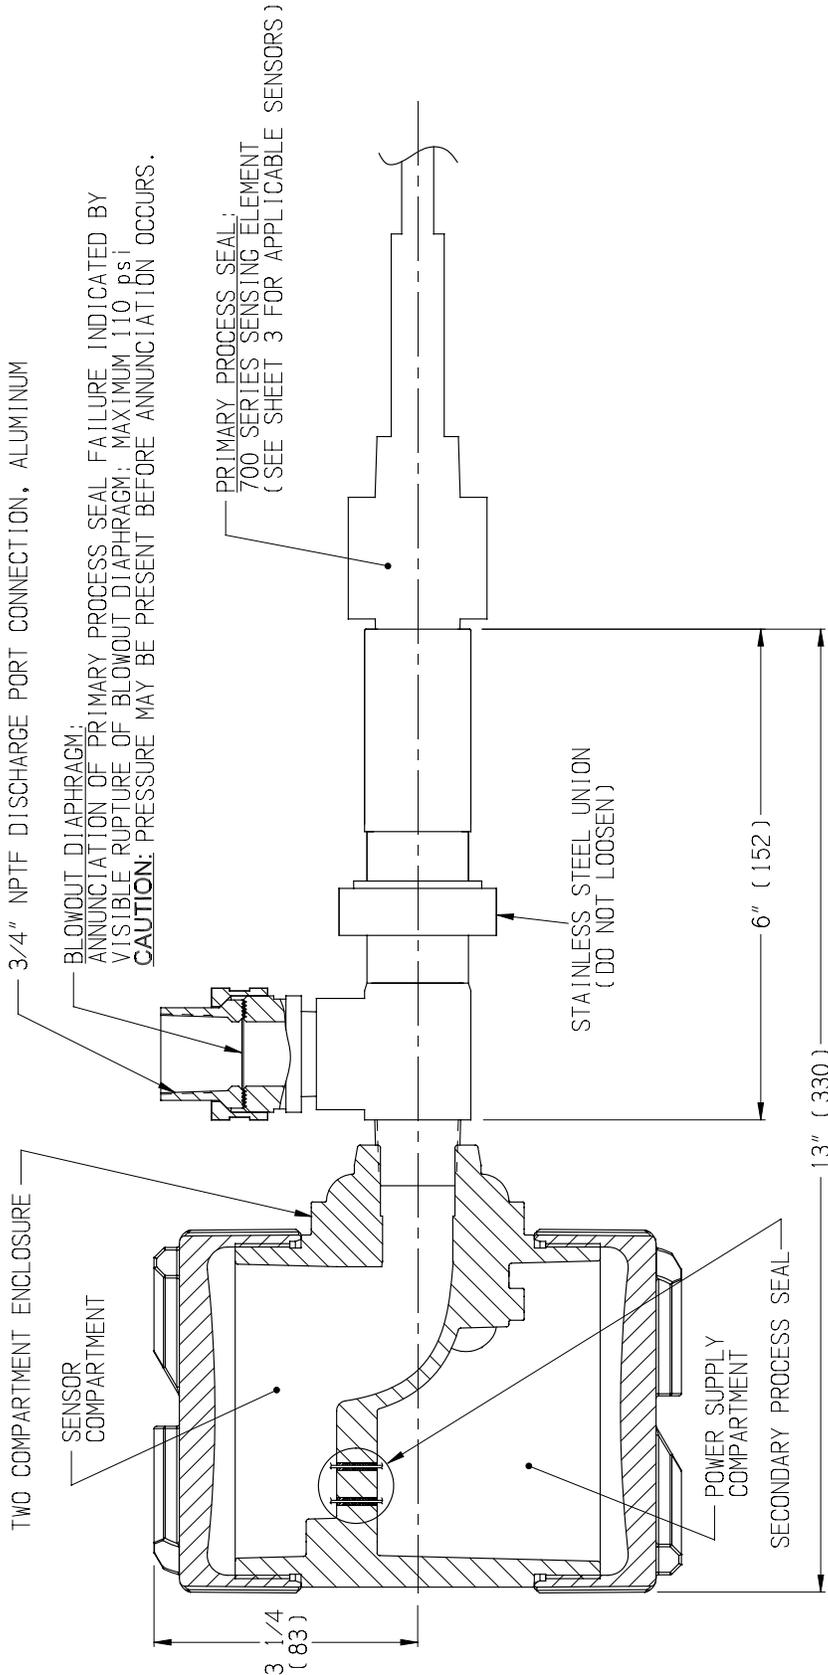

NOTES:
 1. ANSI / ISA 12.27.01-2003 FM CERTIFIED "DUAL SEAL" WHEN USED WITH AMETEK DREXELBROOK 700 SERIES SENSING ELEMENTS
 2. SEE SHEET 3 FOR 700 SERIES PRIMARY SEAL PROCESS WETTED MATERIALS.
 3. REFER TO SENSING ELEMENT TAG FOR PROCESS TEMPERATURE AND PRESSURE RATINGS.


CERTIFIED		by _____	
PO #			
ENG			
USER			
ISS	1	EDD/DSR NO.	APP'D
DATE	9-10-08	DR.	JJS 9-3-08
		CK.	JEN 9-10-08
COPYRIGHT 2008		AMETEK DREXELBROOK	
SCALE NONE		UNLESS OTHERWISE STATED	
ALL DIMENSIONS IN INCHES (MM)			
205 KEITH VALLEY RD HORSHAM, PA 19044-9886 215-674-1234 FAX 215-674-2731			
CONTROL DRAWING, DUAL SEAL ASSEMBLY FOR USE WITH 700 SERIES SENSING ELEMENTS		285-0003-OXX-CD	ISS: 1 SHT. 1 OF 3

7.6 Dual Seal Assembly (Continued)

NO. 285-0003-OXX-CD

SHT 2 OF 3

285-0003-02X DUAL SEAL CONFIGURATION FOR SINGLE COMPARTMENT ENCLOSURE

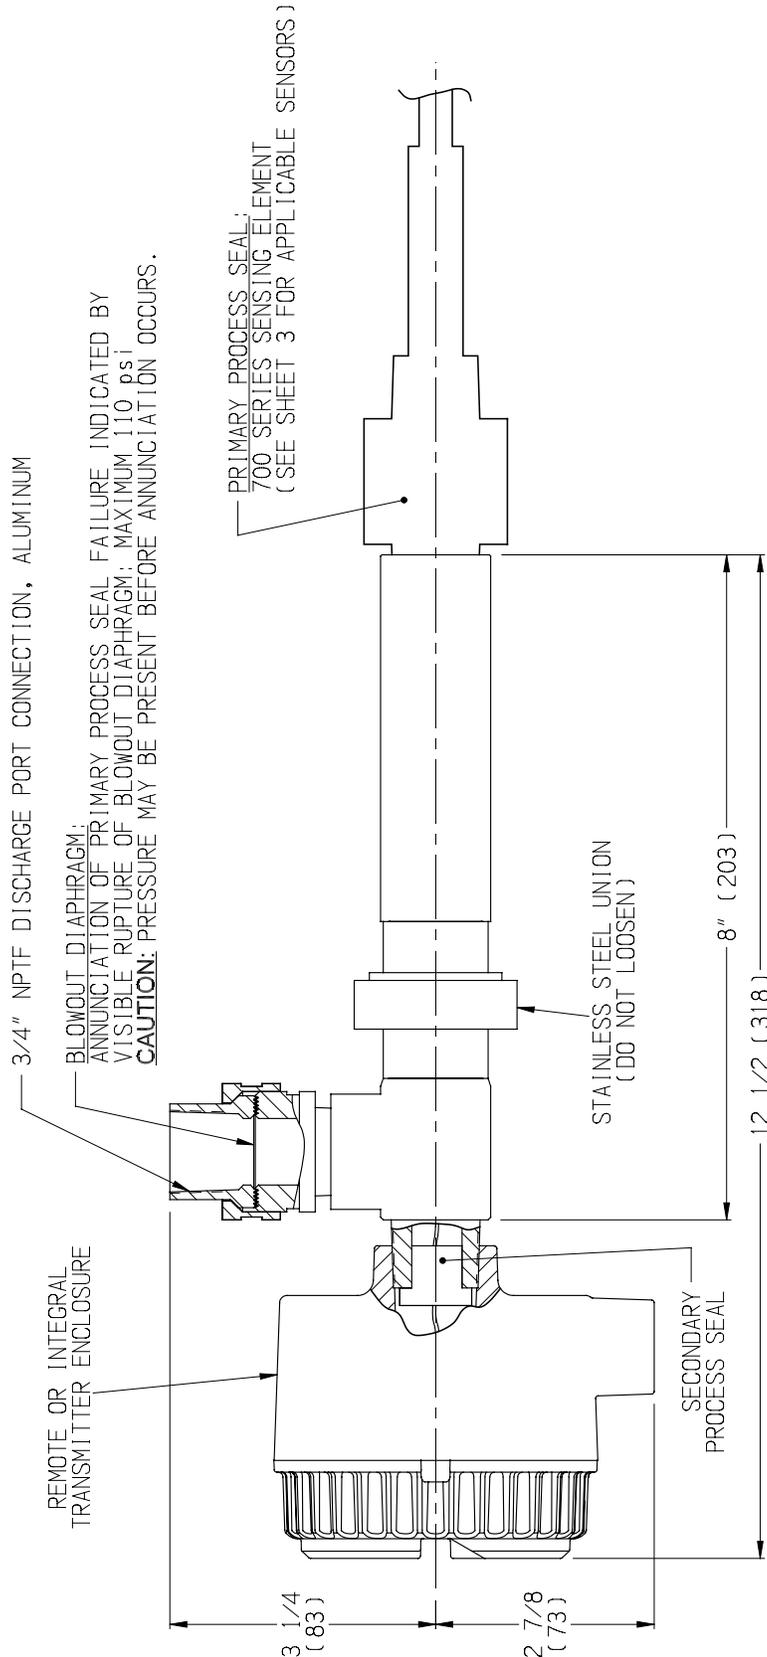

NOTES:

1. ANSI / ISA 12.27.01-2003 FM CERTIFIED "DUAL SEAL" WHEN USED WITH AMETEK DREXELBROOK 700 SERIES SENSING ELEMENTS
2. SEE SHEET 3 FOR 700 SERIES PRIMARY SEAL PROCESS WETTED MATERIALS.
3. REFER TO SENSING ELEMENT TAG FOR PROCESS TEMPERATURE AND PRESSURE RATINGS.

CERTIFIED by _____		COPYRIGHT 2008	
PO # _____	AMETEK DREXELBROOK	CONTROL DRAWING, DUAL SEAL ASSEMBLY FOR USE WITH 700 SERIES SENSING ELEMENTS	
ENG _____	SCALE NONE	285-0003-OXX-CD	
USER _____	UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS IN INCHES (MM)	ISS. OF 1	
DR. JJS 9-3-08	DR. JJS 9-3-08	SHT. 2 OF 3	
1 4-08-106 TDH 9-10-08	CK. JEN 9-10-08	700 SERIES SENSING ELEMENTS	
ISS. EDO/DSR NO. APP. D DATE		285-0003-OXX-CD	
DE # _____		ISS. OF 1	

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731


7.6 Dual Seal Assembly (Continued)

No. 285-0003-OXX-CD SHT 3 OF 3

SENSOR MODEL #	PRIMARY SEAL WETTED MATERIALS
700-1202-001	PEEK/316SS
700-1202-010	PEEK/316SS
700-1202-012	PEEK/316SS
700-1202-014	PEEK/316SS
700-1202-018	PEEK/316SS
700-1202-020	PEEK/316SS
700-1202-021	PEEK/316SS
700-1202-028	PEEK/316SS
700-1202-031	PEEK/316SS
700-1202-032	PEEK/316SS
700-1202-033	PEEK/316SS
700-1202-034	PEEK/316SS
700-1202-041	PEEK/316SS
700-1202-042	PEEK/316SS
700-1202-061	PEEK/316SS
700-1202-081	PEEK/316SS
700-9100-303	PEEK/316SS

SENSOR MODEL #	PRIMARY SEAL WETTED MATERIALS
700-0002-054	FEP/TFE/316SS
700-0002-057	PVDF/TFE/316SS
700-0002-064	PVDF/TFE/316SS
700-0002-224	TFE/316SS
700-0002-321	FEP/TFE/316SS
700-0002-360	PFA/TFE/316SS
700-0201-005	TFE/316SS
700-0201-025	TFE/316SS
700-0201-026	TFE/316SS
700-0201-027	TFE/316SS
700-0201-028	TFE/316SS
700-0201-035	TFE/316SS
700-0201-051	TFE/316SS
700-0201-052	TFE/316SS
700-0201-058	TFE/316SS
700-0201-059	TFE/316SS
700-0202-002	TFE/316SS
700-0202-053	TFE/316SS

SENSOR MODEL #	PRIMARY SEAL WETTED MATERIALS
700-0001-022	TFE/316SS
700-0001-024	TFE/316SS
700-0001-026	TFE/316SS
700-0001-034	TFE/CS
700-0001-040	POLYETHYLENE/316SS
700-0001-044	PFA/316SS
700-0001-054	TFE/316SS
700-0001-064	TFE/316SS
700-0001-074	TFE/316SS
700-0001-344	PFA/316SS
700-0002-023	TFE/316SS
700-0002-024	TFE/316SS
700-0002-027	FEP/TFE/316SS
700-0002-028	TFE/316SS
700-0002-033	TFE/316SS
700-0002-037	PVDF/TFE/316SS
700-0002-040	UHMW PE/SILICONE/316SS
700-0002-044	PVDF/TFE/316SS

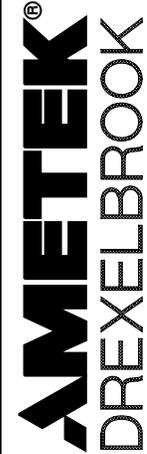

205 KEITH VALLEY RD.
HORSHAM, PA. 19044-9986
215-674-1234
FAX 215-674-2731

COPYRIGHT 2008
AMETEK DREXELBROOK
SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM)
DR. JJS 9-3-08
CK. JEN 9-10-08

CERTIFIED _____ by _____

PO # _____

ENG _____

USER _____

ISS. EDO/DSR NO. APP' D DATE

1 4-08-106 TDH 9-10-08

DE # _____

CONTROL DRAWING,
DUAL SEAL ASSEMBLY
FOR USE WITH
700 SERIES SENSING ELEMENTS

ISS. OF 3 1

SHT. OF 3 1

285-0003-OXX-CD

Appendix A: Shortening or Lengthening the Sensing Element



CAUTION:

The insulation length of either **Flush Sensing Elements** or **Insulated Sensing Elements** can **NOT** be changed. **Cable Sensing Elements** can only be shortened. Instructions are included with each unit.

The Need


Sometimes your application calls for probe lengths other than the standard 18-inch or longer insertion lengths supplied. Shortening the sensing element is quite simple and can be done in the field. Lengthening the sensing element, however, is more difficult because the metal rod, typically 304 SS or 316 SS, must be welded.

Before making any Adjustments:

- 1) Read the following instructions thoroughly.
- 2) Remove power.
- 3) Disconnect the electronics.
- 4) Protect electronics from any static discharge.
- 5) Protect electronics from any heat.

NOTE:

Cote-Shield element must **NEVER** be modified.

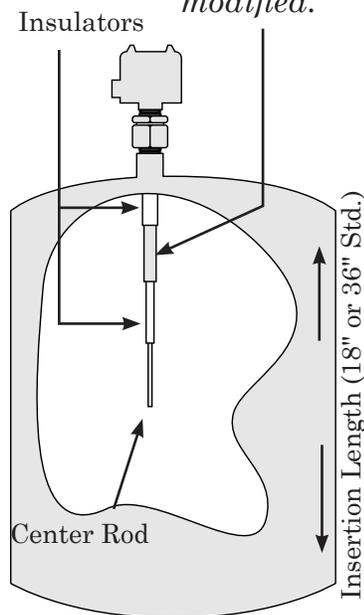

Shortening

The bare metal center rod of the sensing element can be shortened with a hacksaw. Be careful not to cut either of the two insulators. See Figure on this page.

In applications using conductive or water-based materials, shortening is not a problem. Leave a minimum bare metal center rod length of two (2) inches.

For dry granular materials, such as powder, sand, corn, clinker, etc., you must leave a minimum bare metal center rod length of eight (8) inches. Consult the factory before shortening beyond this point.

Lengthening

To lengthen the sensing element, an extension rod can be welded onto the end of the bare metal center rod. Make sure that the extension rod is the same metal as the sensing element.

An alternate option is to add a pipe coupling and a section of metal pipe after threading the tip of the sensing element. In this case, the metal pipe need not be identical to the metal of the sensing element.



Any changes to probe length after calibration requires re calibration to ensure proper operation.

TERMS AND CONDITIONS OF SALE

GENERAL: ALL ORDERS ARE SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS. ANY ACCEPTANCE OF ANY OFFER OF BUYER FOR ANY GOODS OR SERVICES IS CONDITIONED UPON THESE TERMS AND CONDITIONS, AND SELLER OBJECTS TO ANY ADDITIONAL OR DIFFERENT TERMS PROPOSED BY BUYER IN ANY DOCUMENT, WHICH SHALL NOT BE BINDING UPON SELLER. No salesman or other party is authorized to bind the AMETEK DREXELBROOK Division of AMETEK, Inc. (hereinafter "Seller") by any agreement, warranty, statement, promise, or understanding not herein expressed, and no modifications shall be binding on Seller unless the same are in writing and signed by an executive officer of Seller or his or her duly authorized representative. Verbal orders shall not be executed until written notification has been received and acknowledged by Seller.

QUOTATIONS: Written quotations are valid for thirty (30) days unless otherwise stated. Verbal quotations expire the same day they are made.

PRICES: All prices and terms are subject to change without notice. Buyer-requested changes to its order ("Orders"), including those affecting the identity, scope and delivery of the goods or services, must be documented in writing and are subject to Seller's prior approval and adjustments in price, schedule and other affected terms and conditions. Orders requiring certified test data in excess of commercial requirements, are subject to a special charge.

ORDER ACCEPTANCE: All Orders are subject to final approval and acceptance by Seller at its office located at 205 Keith Valley Road, Horsham, Pennsylvania 19044.

TERMS OF PAYMENT: Seller's standard terms of payment for Buyers who qualify for credit are net thirty (30) days from date of invoice. All invoices must be paid in United States dollars.

CREDIT: Seller reserves the right at any time to revoke any credit extended to Buyer or otherwise modify terms of payment if Buyer fails to pay for any shipments when due or if in Seller's opinion there is a material adverse change in Buyer's financial condition. Seller may, at its option, cancel any accepted Order if Buyer fails to pay any invoices when due.

DELIVERY: Shipments are F.O.B place of manufacture ("Shipping Point") and the Buyer shall pay all freight, transportation, shipping, duties, fees, handling, insurance, storage, demurrage, or similar charges from Shipping Point. Delivery of goods to common carrier shall constitute delivery and passing of title to the Buyer, and all risk of loss or damage in transit shall be borne by Buyer. Any claims or losses for damage or destruction after such delivery shall be the responsibility of Buyer.

Seller reserves the right to make delivery in installments which shall be separately invoiced and paid for when due, without regard to subsequent deliveries. Delay in delivery of any installment shall not relieve Buyer of its obligation to accept remaining deliveries.

Acknowledged shipping dates are approximate only and based on prompt receipt of all necessary information from Buyer and Buyer's compliance with terms of payment.

TAXES: All sales, excise and similar taxes which Seller may be required to pay or collect with respect to the goods and/or services covered by any Order, shall be for the account of the Buyer except as otherwise provided by law or unless specifically stated otherwise by Seller in writing.

TERMINATION AND HOLD ORDERS: No Order may be terminated by Buyer except upon written request by Buyer and approval by Seller, and if said request is approved by Seller, under the following conditions: (1) Buyer agrees to accept delivery of all of the units completed by Seller through the workday on which Seller receives the written termination request; (2) Buyer agrees to pay to Seller all direct costs and expenses applicable to the portion of the Order that is incomplete.

WARRANTY:

A. **Hardware:** Seller warrants its goods against defects in materials and workmanship under normal use and service for one (1) year from the date of invoice.

B. **Software and Firmware:** Unless otherwise specified, Seller warrants for a period of one (1) year from date of invoice that standard software or firmware, when used with Seller specified hardware, shall perform in accordance with Seller's published specifications. Seller makes no representation or warranty, expressed or implied, that the operation of the software or firmware shall be uninterrupted or error-free, or that functions contained therein shall meet or satisfy the Buyer's intended use or requirements.

C. **Services:** Seller warrants that services, including engineering and custom application, whether provided on a fixed cost or time and material basis, shall be performed in accordance with generally accepted industry practices.

D. **Remedies:** Seller's liability under this section is restricted to replacing, repairing, or issuing credit (at Seller's option) for any returned goods and only under the following conditions: (1) Seller must be promptly notified, in writing, as soon as possible after the defects have been noted by the Buyer, but not later than (1) year from date of invoice from Seller; (2) The defective goods are to be returned to the place of manufacture, shipping charges prepaid by the Buyer; (3) Seller's inspection shall disclose to its satisfaction that the goods were defective in materials or workmanship at the time of shipment; (4) Any warranty service (consisting of time, travel and expenses related to such services) performed other than at Seller's factory, shall be at Buyer's expense.

E. **Repaired/Reconditioned Goods:** As to out-of-warranty goods which Seller has repaired or reconditioned, Seller warrants for a period of sixty (60) days from date of its invoice only new components replaced in the most recent repair/reconditioning.

F. **Returns and Adjustments:** No goods may be returned unless authorized in advance by Seller and then only upon such conditions to which Seller may agree. Buyer must obtain an RMA (Return Material Authorization) number from Seller prior to any return shipment and such RMA number must appear on the shipping label and packing slip. Buyer shall be responsible for the returned goods until such time as Seller receives the same at its plant and for all charges for packing, inspection, shipping, transportation, or insurance associated with returned goods. In the event that credit for returned goods is granted, it shall be at the lesser of the then current prices or the original purchase price. Claims for shortage or incorrect material must be made within five (5) days after receipt of shipment.

ALL OTHER WARRANTIES, FOR ANY OF SELLER'S GOODS OR SERVICES, WHETHER ORAL, WRITTEN, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PURPOSE ARE EXCLUDED.

INTELLECTUAL PROPERTY: Seller's sale of goods or provision of related documentation or other materials to Buyer shall not transfer any intellectual property rights to Buyer unless Seller specifically agrees to do so in writing. Seller shall retain ownership of all applicable patents, trademarks, copyrights and other intellectual property rights. Buyer shall not use, copy or transfer any such items in violation of Seller's intellectual property rights or applicable law, or for any purposes other than that for which the items were furnished.

Seller shall defend any lawsuit brought against the Buyer based on a claim that the design or construction of the goods sold hereunder by Seller infringe any United States or Canadian Patent, Copyright or Mask Work Registration, provided that Buyer promptly notifies Seller of such claim in writing and further provided that, at Seller's expense, (1) Buyer gives Seller the sole right to defend or control the defense of the suit or proceeding, including settlement, and (2) Buyer provides all necessary information and assistance for that defense. In the event of a charge of infringement, Seller's obligation under the agreement shall be fulfilled if Seller, at its option and expense, either (i) settles such claim; (ii) procures for Buyer the right to continue using such goods; (iii) replaces or modifies goods to avoid infringement; or (iv) accepts the return of any infringing goods and refunds their purchase price; or (iv) defends against such claim.

If Buyer furnishes specifications or designs to Seller, the obligations of Seller set forth above shall not apply to goods made by Seller using such specifications or designs, and Buyer shall defend, indemnify and hold Seller harmless against any third party claims for infringement which arise out of Seller's use of specifications or designs furnished by Buyer.

SOFTWARE LICENSE: If goods purchased hereunder include software ("Software"), Buyer may use the Software only as part of the goods. Buyer may not use, copy, or transfer any of the Software except as may be permitted under the applicable License Agreement provided with the goods. Buyer's right to use, copy or transfer the Software shall terminate upon termination of Buyer's right to use the goods.

PACKAGING/WEIGHTS AND DIMENSIONS: Buyer specified packing or marking may be subject to additional charges not otherwise included in the price of the goods. Published weights and dimensions are estimates or approximate only and are not warranted.

FORCE MAJEURE: Seller shall not be responsible for delays in delivery or any failure to deliver due to causes beyond Seller's control, including but not limited to the following items: acts of God, war, terrorism, mobilization, civil commotion, riots, embargoes, domestic or foreign governmental regulations or orders, governmental priorities, port congestion, acts of the Buyer, its agents or employees, fires, floods, strikes, lockouts and other labor difficulties, shortages of or inability to obtain shipping space or transportation, inability to secure fuel, supplies or power at current prices or on account of shortages thereof, or due to limitations imposed by the extent of availability of Seller's normal manufacturing facilities.

If a delay excused per the above extends for more than ninety (90) days and the parties have not agreed upon a revised basis for continuing providing the goods or services at the end of the delay, including adjustment of the price, then Buyer, upon thirty (30) days' prior written notice to Seller may terminate the Order with respect to the unexecuted portion of the goods or services, whereupon Buyer shall promptly pay Seller its reasonable termination charges upon submission of Seller's invoices thereof.

LIMITATION OF LIABILITY: Seller's liability for any claim of any kind, except infringement of intellectual property rights, shall not exceed the purchase price of any goods or services which give rise to the claim. **SELLER SHALL IN NO EVENT BE LIABLE FOR BUYER'S MANUFACTURING COSTS, LOST PROFITS, LOSS OF USE OF THE GOODS OR SERVICES, COST OF CAPITAL, COST OF SUBSTITUTE GOODS, FACILITIES, SERVICES OR REPLACEMENT POWER, DOWNTIME COSTS, CLAIMS OF BUYER'S CUSTOMERS FOR DAMAGES, OR OTHER SPECIAL, PROXIMATE, INCIDENTAL, INDIRECT, EXEMPLARY OR CONSEQUENTIAL DAMAGES.** Any action against Seller must be brought within eighteen (18) months after the cause of action accrues. These disclaimers and limitations of liability shall apply regardless of the form of action, whether in contract, tort or otherwise, and further shall extend to the benefit of Seller's vendors, appointed distributors and other authorized resellers as third-party beneficiaries.

PROHIBITION FOR HAZARDOUS USE: Goods sold hereunder generally are not intended for application in and shall not be used by Buyer in the construction or operation of a nuclear installation or in connection with the use or handling of nuclear material, or for any hazardous activity or critical application, where failure of a single component could cause substantial harm to persons or property, unless the goods have been specifically approved for such a use or application. Seller disclaims all liability for any loss or damage resulting from such unauthorized use and Buyer shall defend, indemnify and hold harmless the Seller against any such liability, whether as a result of breach of contract, warranty, tort (regardless of the degree of fault or negligence), strict liability or otherwise.

EXPORT CONTROL: Buyer shall comply with all export control laws and regulations of the United States, and all sales hereunder are subject to those laws and regulations. Seller shall not be named as shipper or exporter of record for any goods sold hereunder unless specifically agreed to in writing by Seller. At Seller's request, Buyer shall furnish Seller with end-use and end-user information to determine export license applicability. Buyer warrants, in accordance with U.S. Export Law, that goods sold hereunder shall not be destined for facilities or activities involving nuclear, chemical or biological weapons, or related missile delivery systems in named prohibited regions or countries.

GOVERNING LAW: Seller intends to comply with all laws applicable to its performance under any order. All matters relating to interpretation and effect of these terms and any authorized changes, modifications or amendments thereto shall be governed by the laws of the Commonwealth of Pennsylvania. No government contract regulations or clauses shall apply to the goods or services, this agreement, or act to bind Seller unless specifically agreed to by Seller in writing.

NON-WAIVER BY SELLER: Waiver by Seller of a breach of any of these terms and conditions shall not be construed as a waiver of any other breach.

SEVERABILITY AND ENTIRE AGREEMENT: If any provision of these terms and conditions is unenforceable, the remaining terms shall nonetheless continue in full force and effect. This writing, together with any other terms and conditions Seller specifically agrees to in writing, constitutes the entire terms and conditions of sale between Buyer and Seller and supercedes any and all prior discussions, and negotiations on its subject matter.



205 Keith Valley Road, Horsham, PA 19044
U.S. and Canada: 1-800-553-9092
24-Hour Service: 1-800-527-6297
International: +1 215-674-1234
Fax: +1 215-674-2731
E-mail: drexelbrook.info@ametek.com
Website: www.drexelbrook.com